



Z8NA-D6 Repair Guide

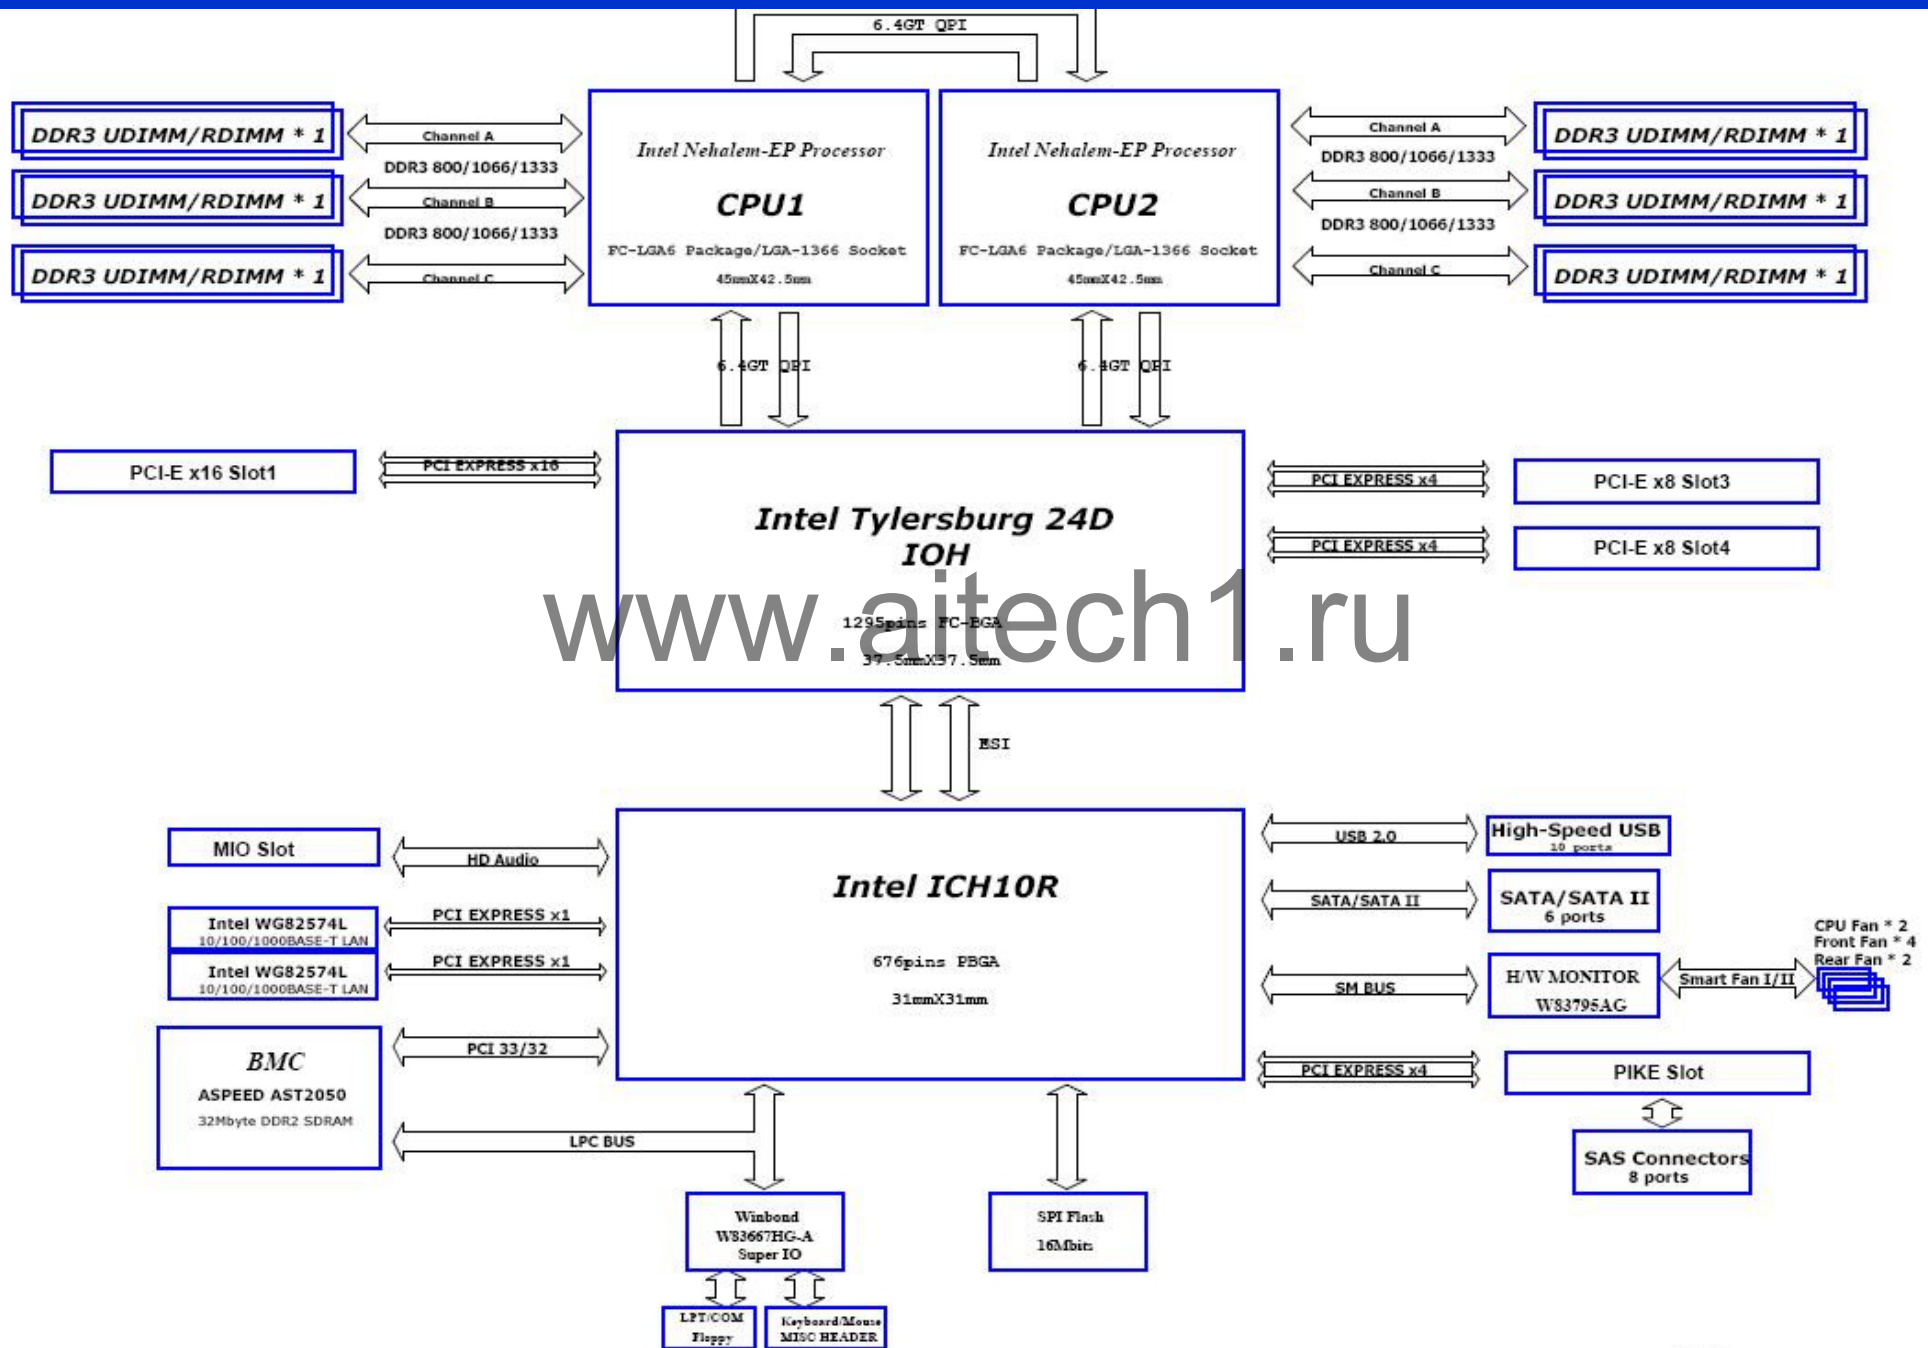

POWER FLOW

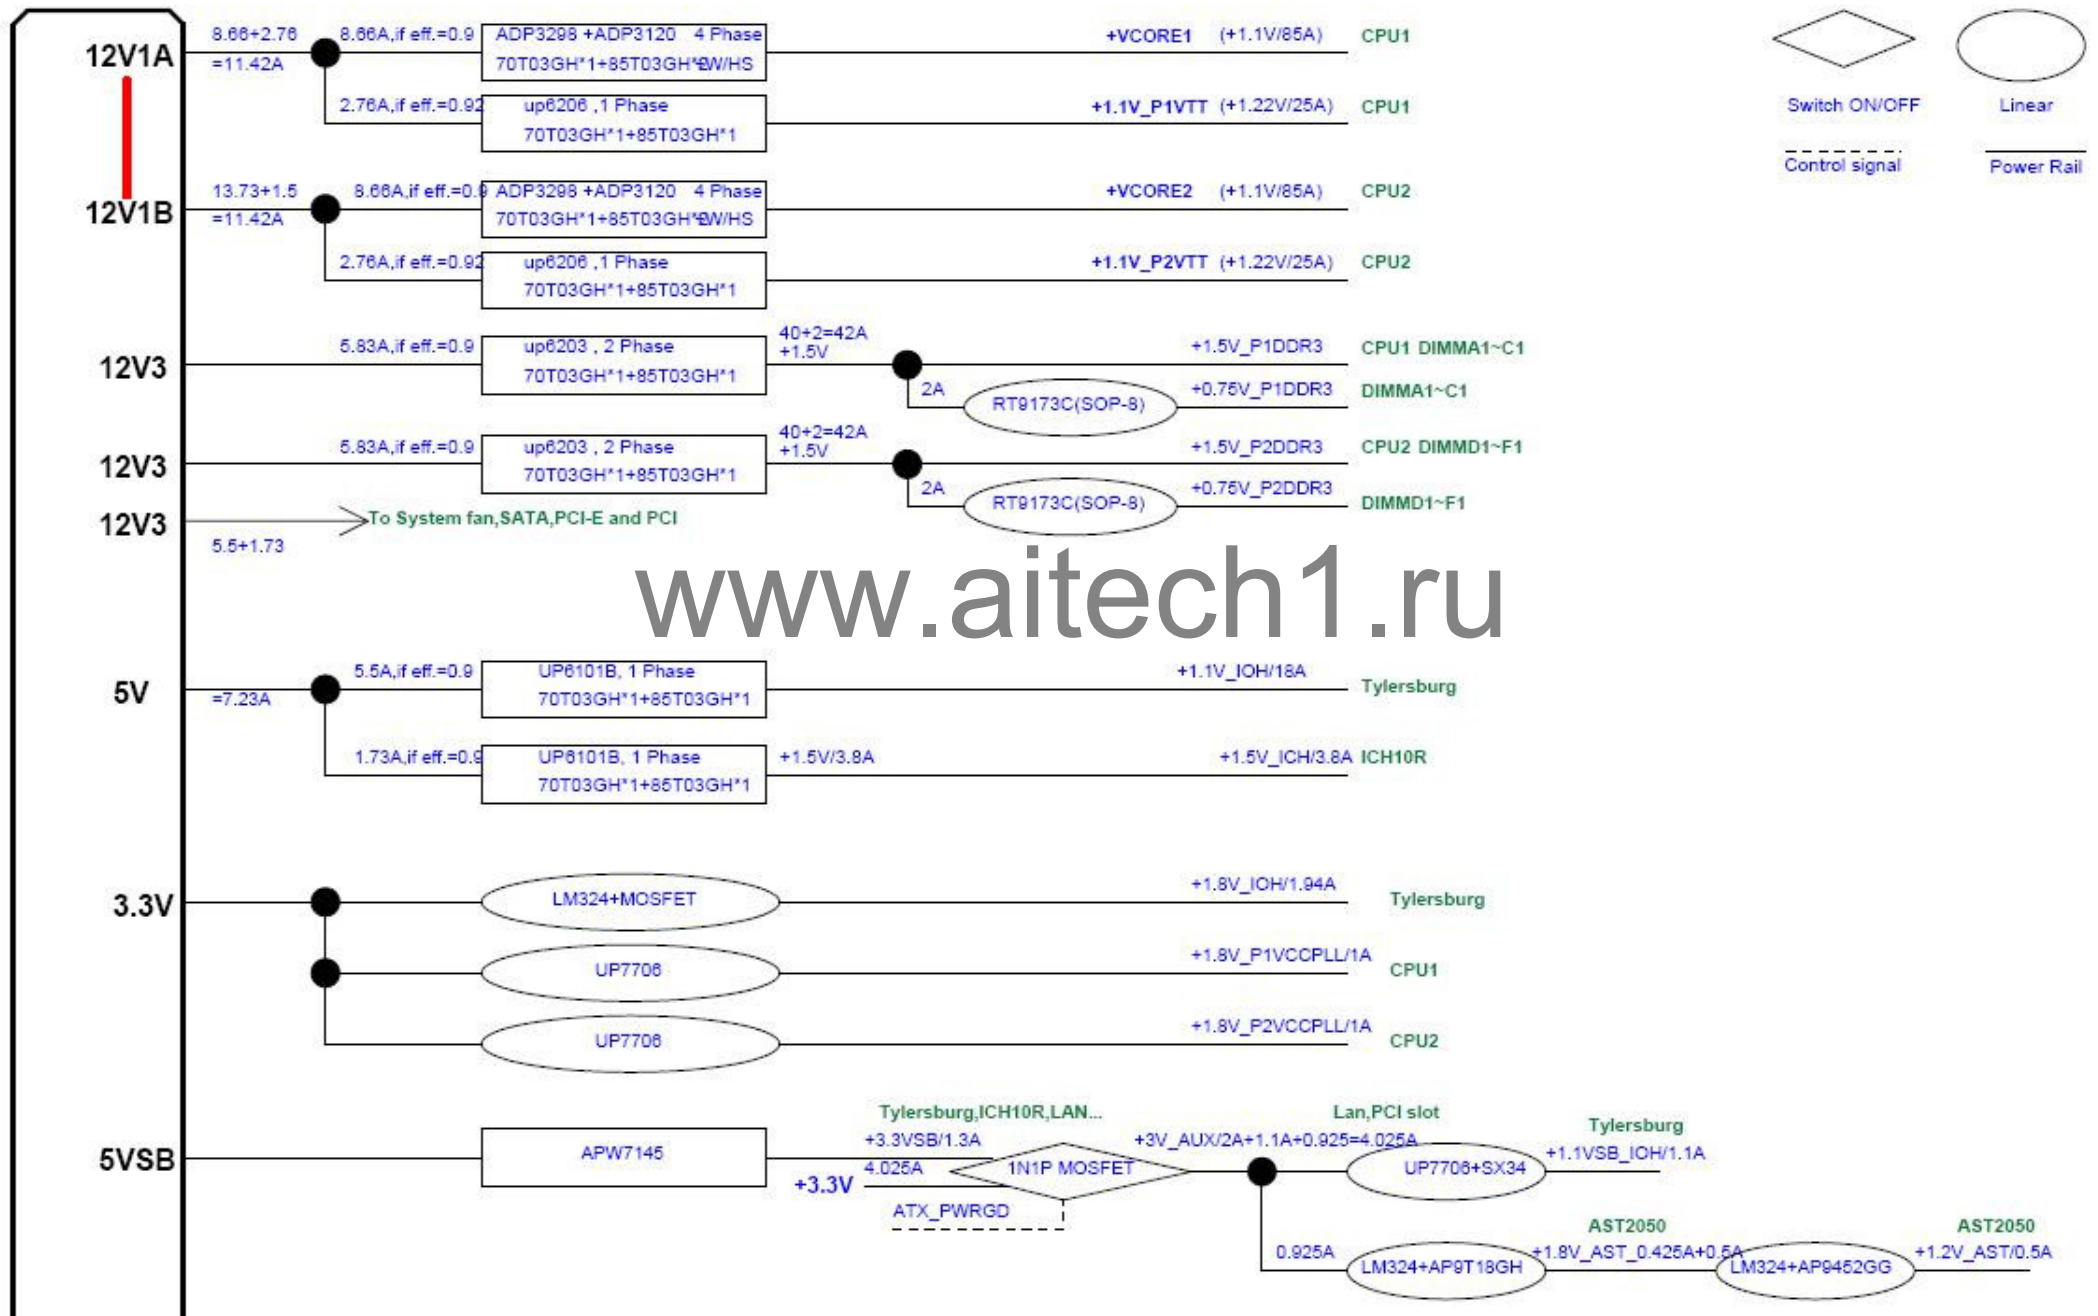

Voltage& Signal Measure Point

