


# K52F Repair Guide

2010/1/5  
Janmou\_chang  
CSC-GRMA

1	Block Diagram
2	System Setting
3	CPU (1)_DMI, SEG, FDI, CLK, MISC
4	CPU (2)_DDR3
5	CPU (3)_CPU, RSVD, GND
6	CPU (4)_PWR
16	DDR3 SO-DIMM_0
17	DDR3 SO-DIMM_1
18	DDR3 CA_DQ VOLTAGE
20	PCH_ITEK (1)_SATA, IDE, RTC, LPC
21	PCH_ITEK (2)_PCI, CLK, SSB, PEG
22	PCH_ITEK (3)_PDI, SMI, SYS_PWR
23	PCH_ITEK (4)_DP, I2S, CRT
24	PCH_ITEK (5)_PCI, MVRAM, USB
25	PCH_ITEK (6)_CPU, GPIO, MISC
26	PCH_ITEK (7)_POWER, GND
27	PCH_ITEK (8)_POWER, GND
28	PCH_SEI ROM, OTH
29	CLK_IC98LFR362
30	EC_IT8502 (1/2)
31	EC_IT8502 (2/2) KE, TP
32	Reset Circuit
36	CODEC-CH20672
37	AUD_Amp & Jack
44	ECG_Debug
45	CRT_LCD Panel
50	FAN_Fan & Sensor
51	WCD_WCD & OCO
58	MINICARD (WLAN)
59	LED_Indicator
57	DOG_Discharge
60	DC_DC & BAT Conn.
61	EC_Bluetooth
65	ME_Conn & Skew Hole

## BLOCK DIAGRAM

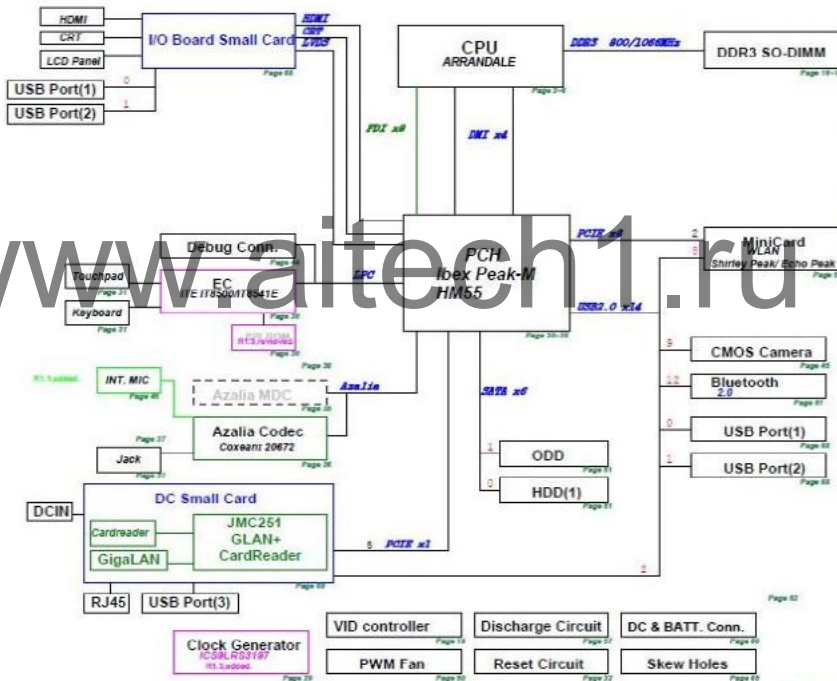

VCORE	Page 51
System	Page 51
1.5VS & 1.8VS	Page 52
DDR & VTT	Page 53
+2.5VS	Page 54
Charger	Page 55
Detect	Page 56
Load Switch	Page 57
Power Protect	Page 58


www.aitech1.ru

# K52F Repair Guide

2010/1/5  
Janmou\_chang  
CSC-GRMA


AC-IN Mode

M52J Power On Sequence Diagram Rev. 0.31

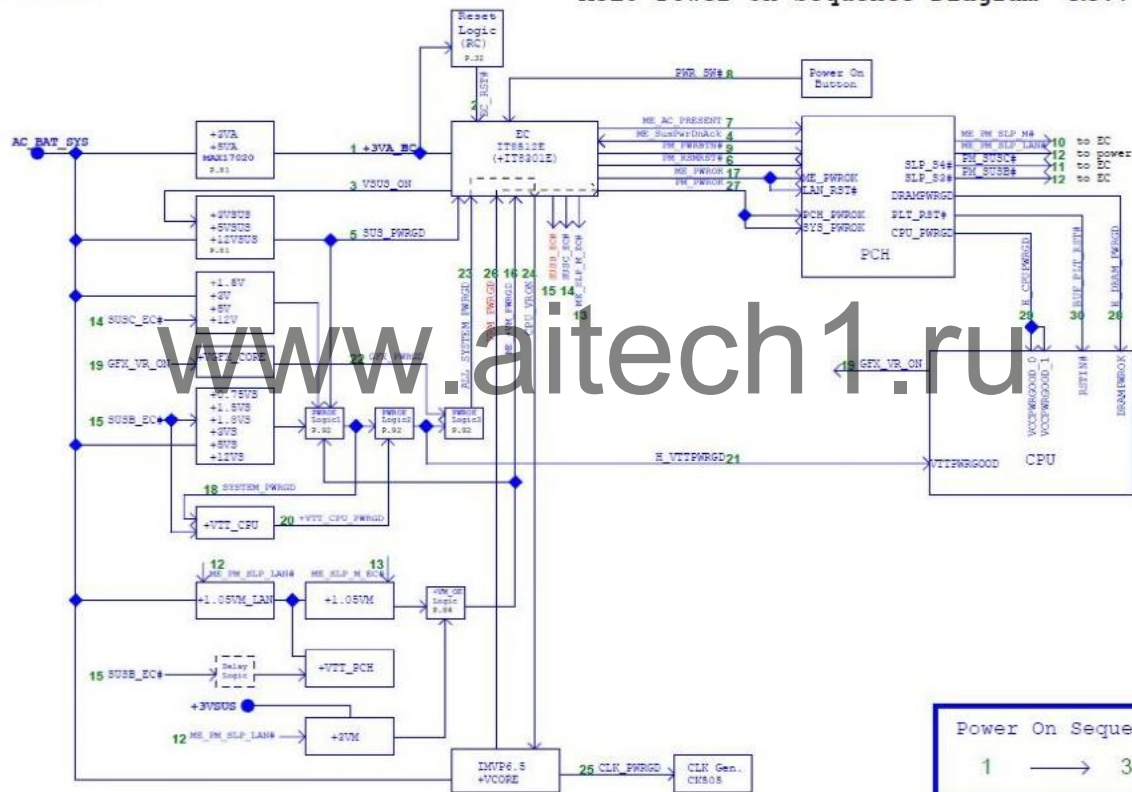

# K52F Repair Guide

2010/1/5  
Janmous\_chang  
CSC-GRMA

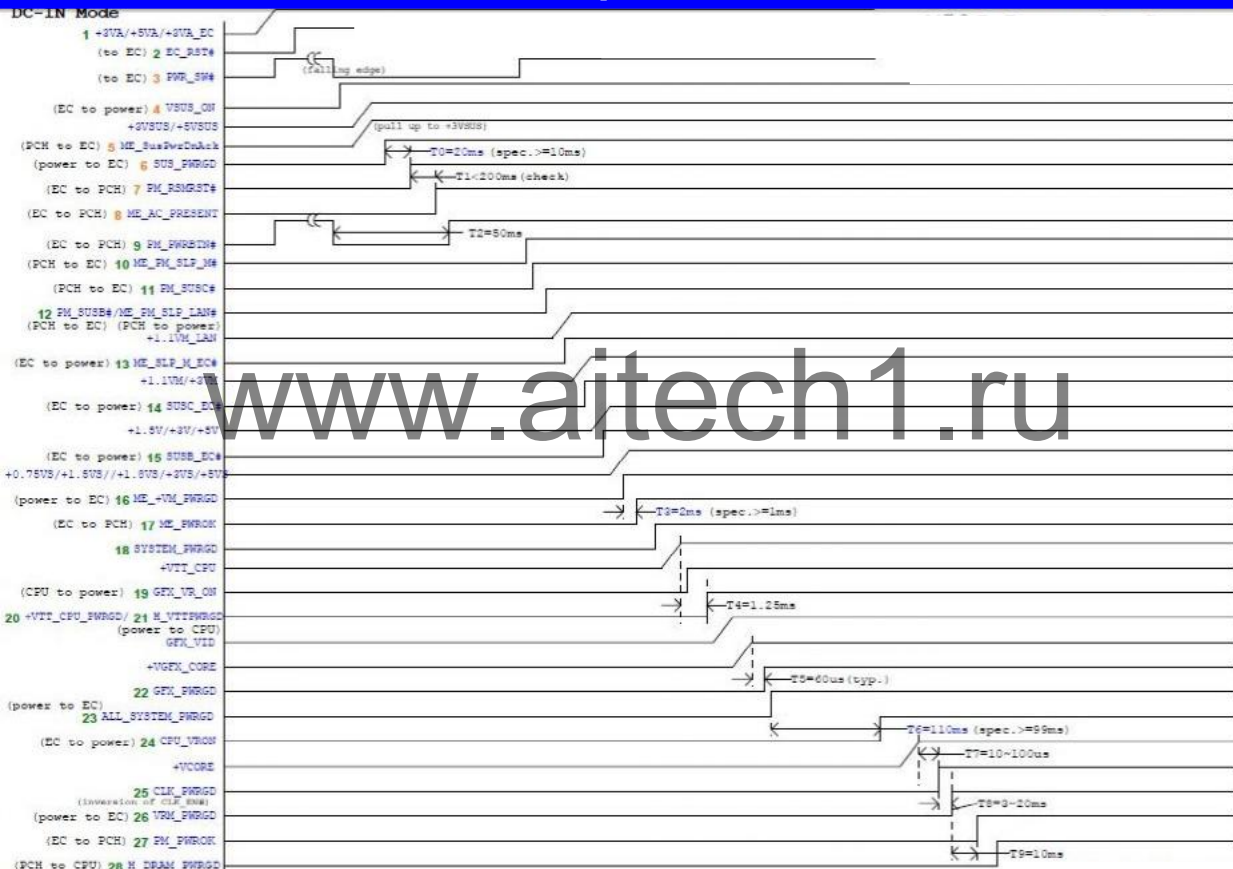

# K52F Repair Guide(TOP)

2010/1/5  
Janmou\_chang  
CSC-GRMA



# K52F Repair Guide(Bottom)

2010/1/5  
Janmous\_chang  
CSC-GRMA

