



# N46VZ Repair Guide


## N46VZ/ VM R2.0

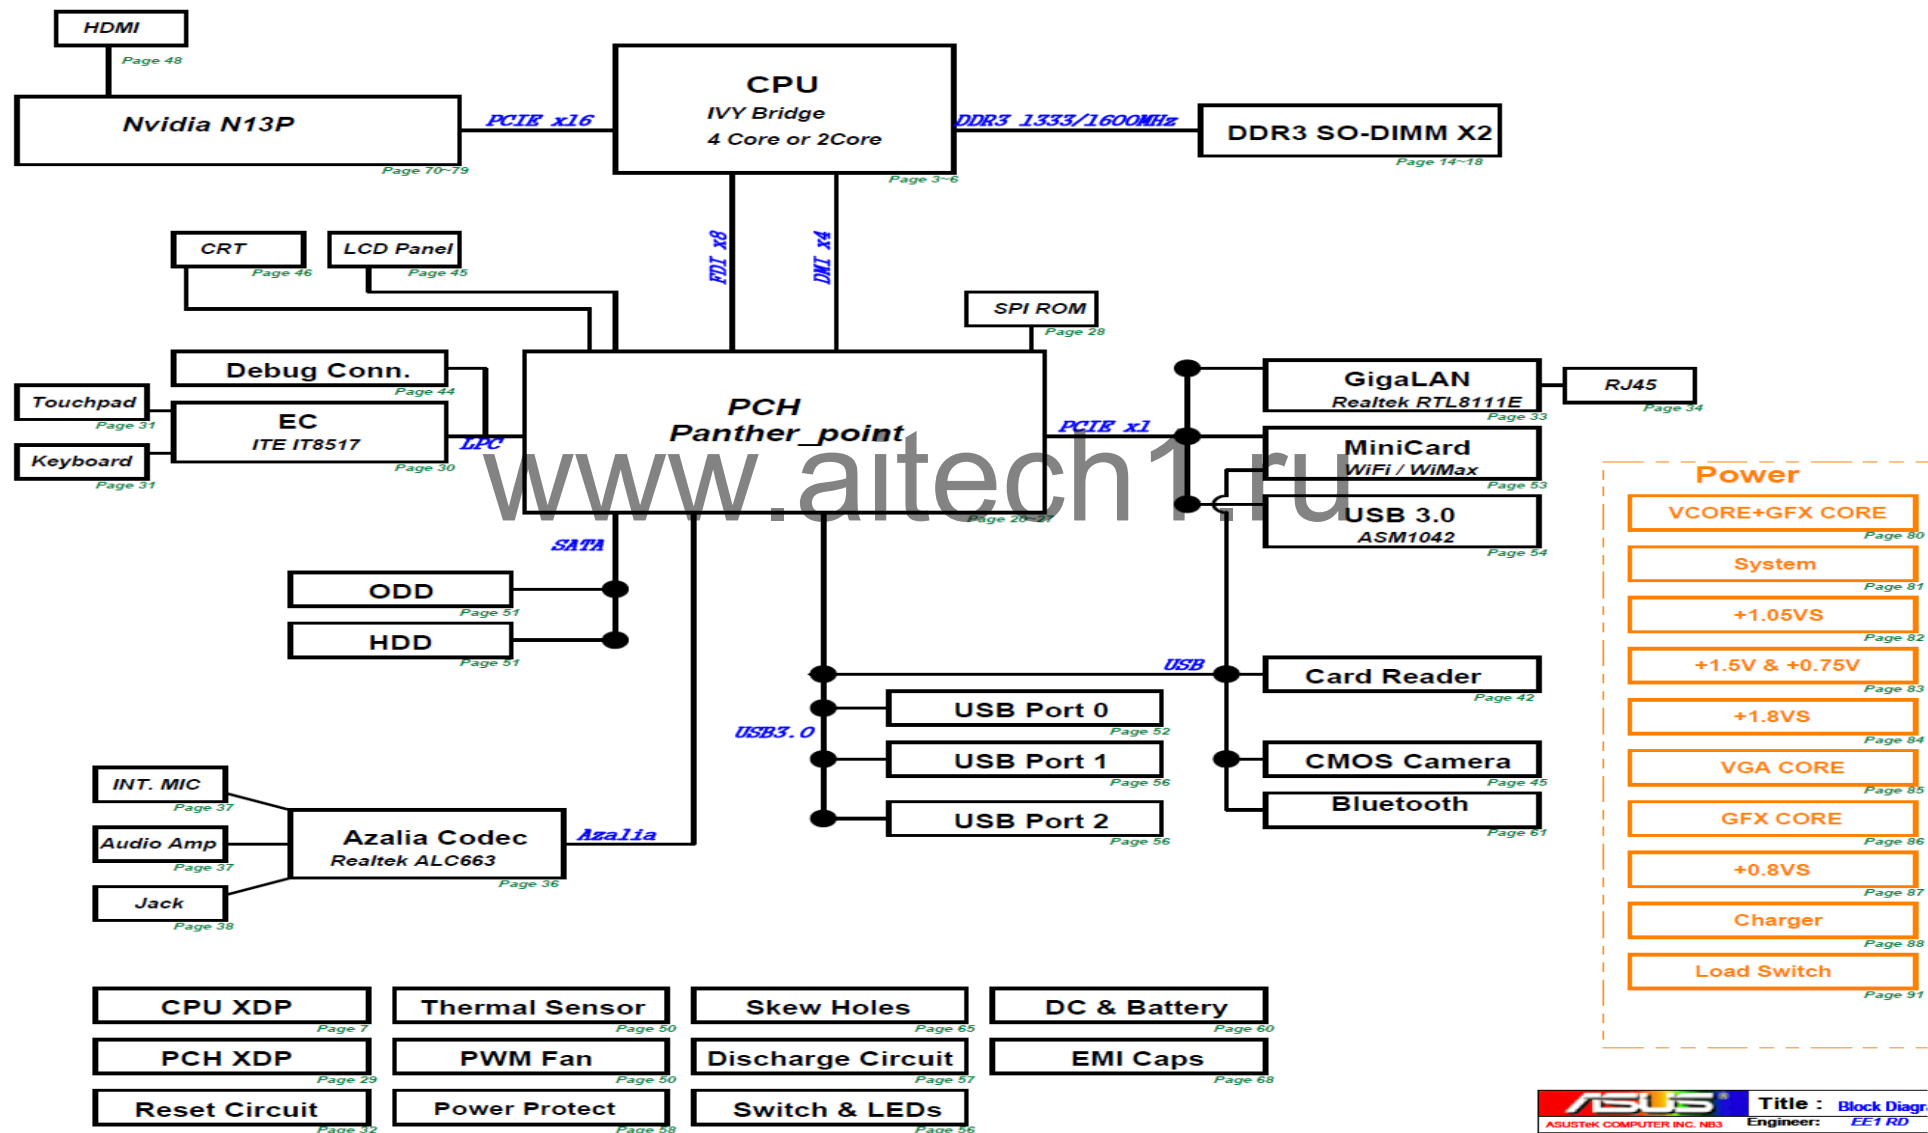

# POWER FLOW

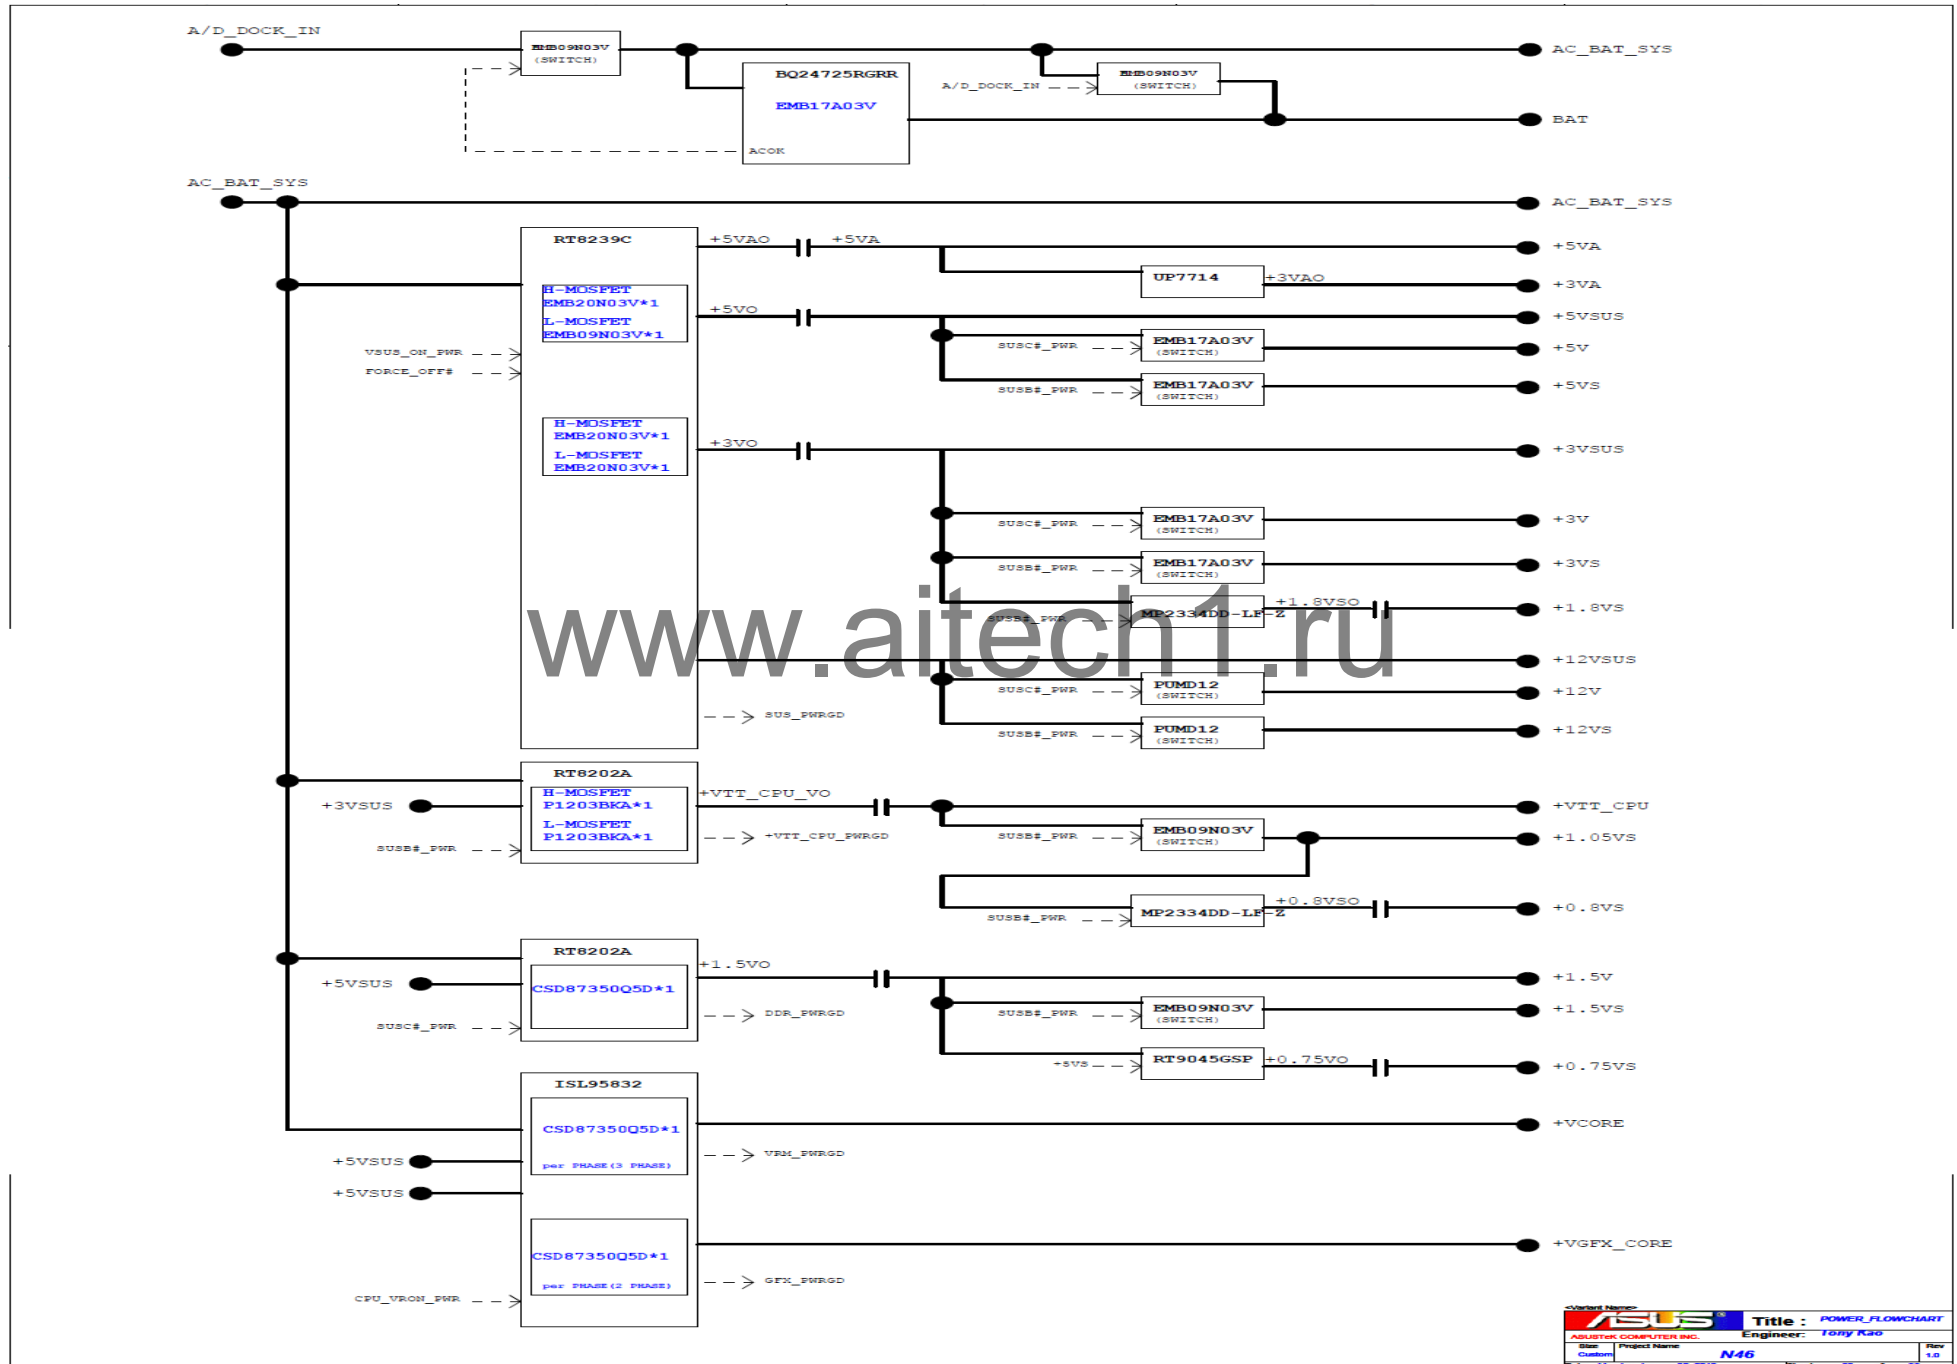

# POWER ON SEQUENCE

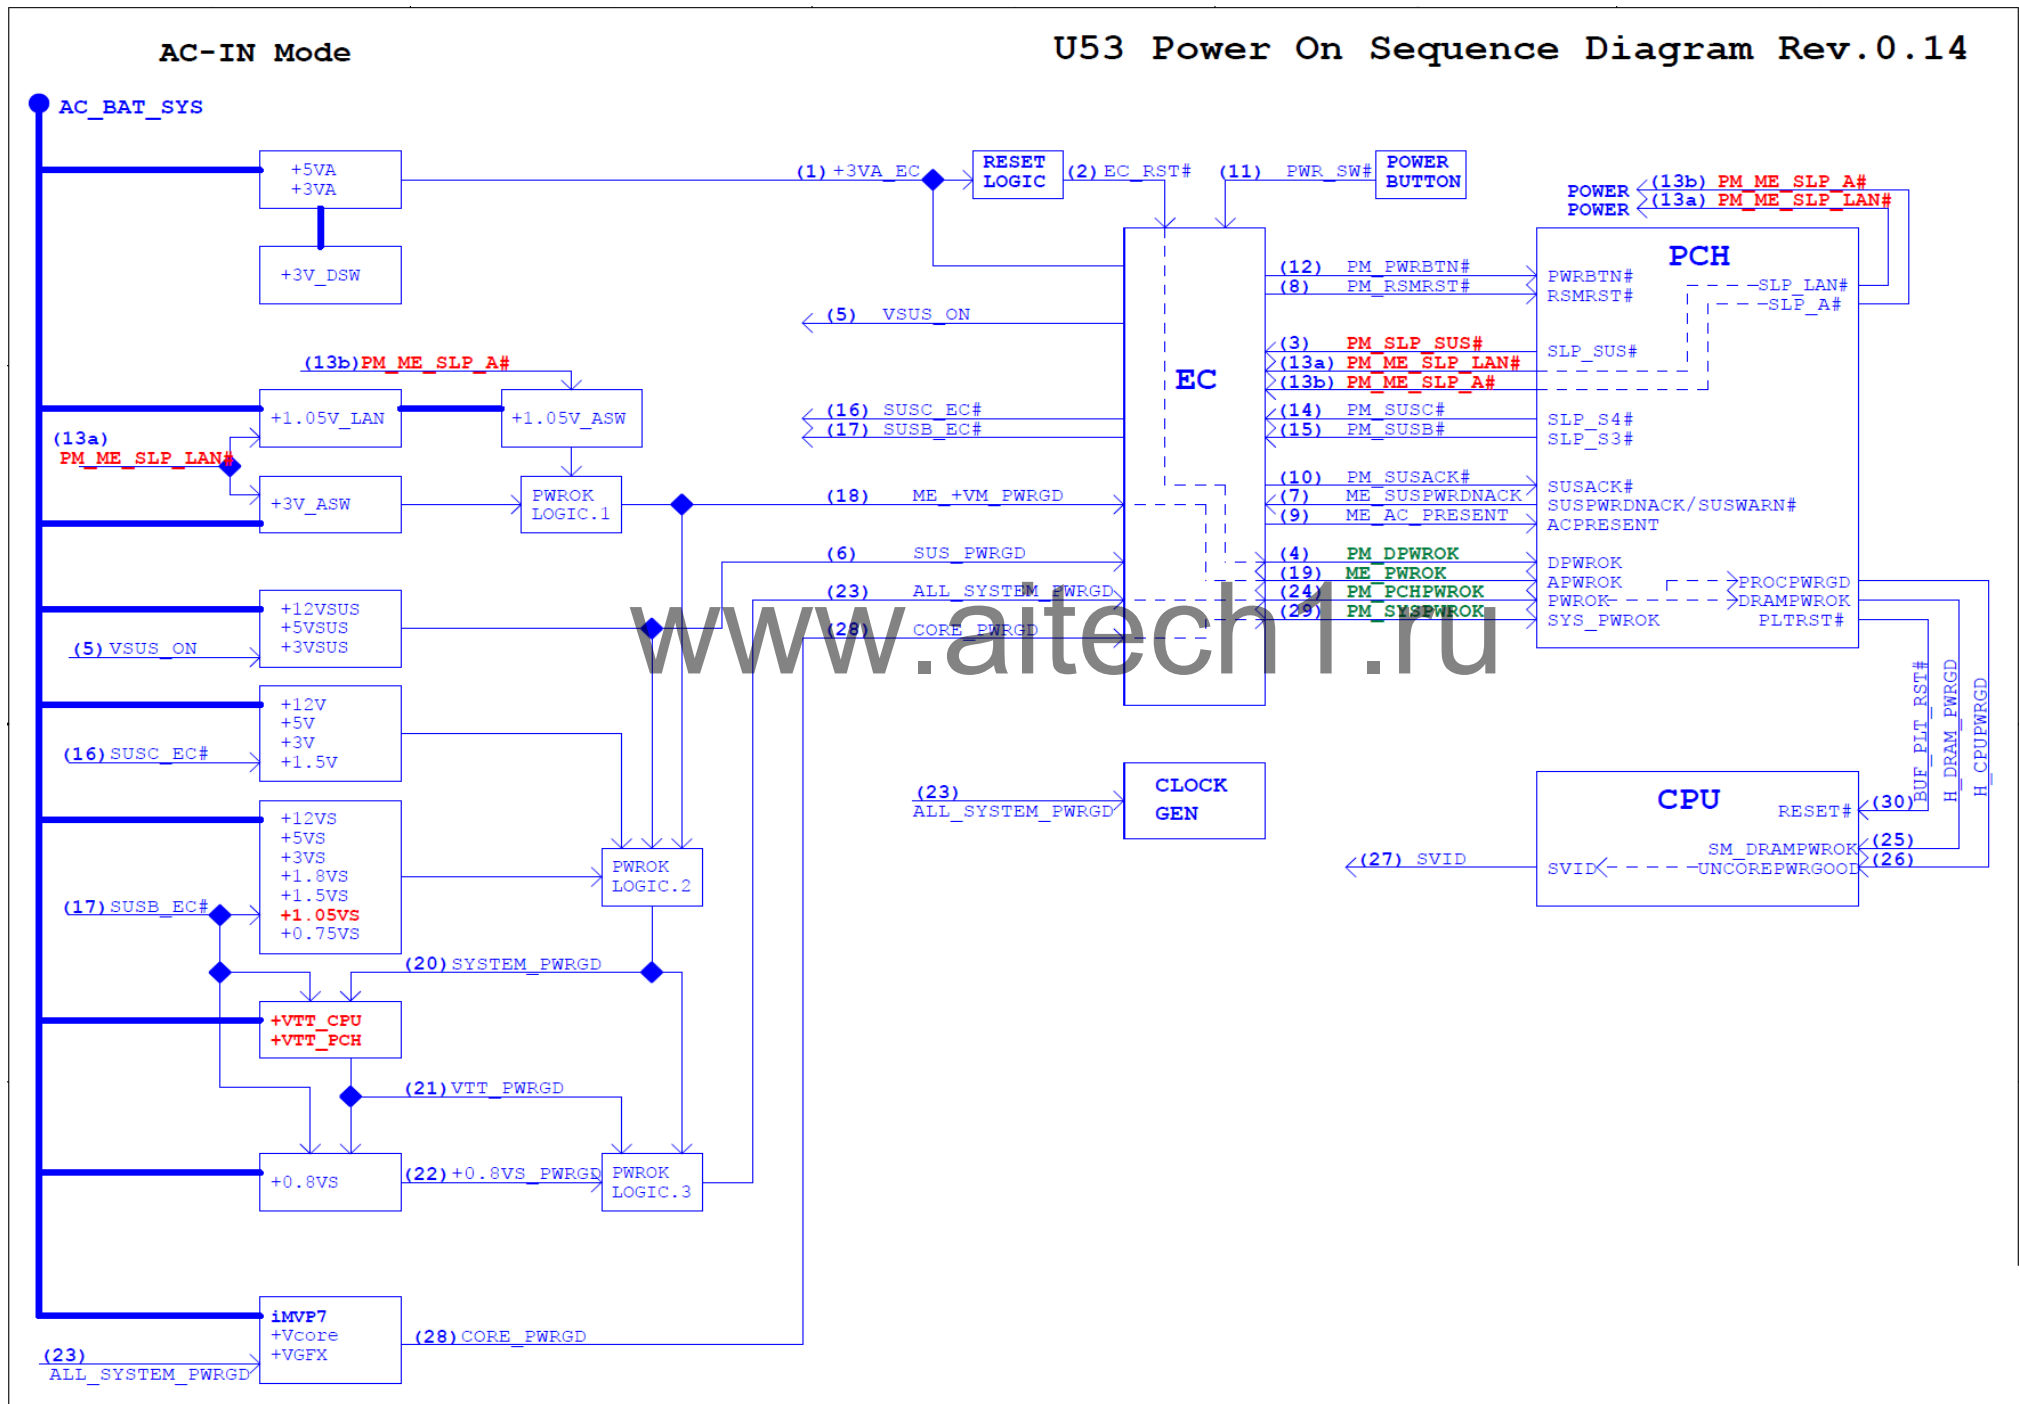

## Voltage & Signal Measure Point TOP

