




# N76VM Repair Guide

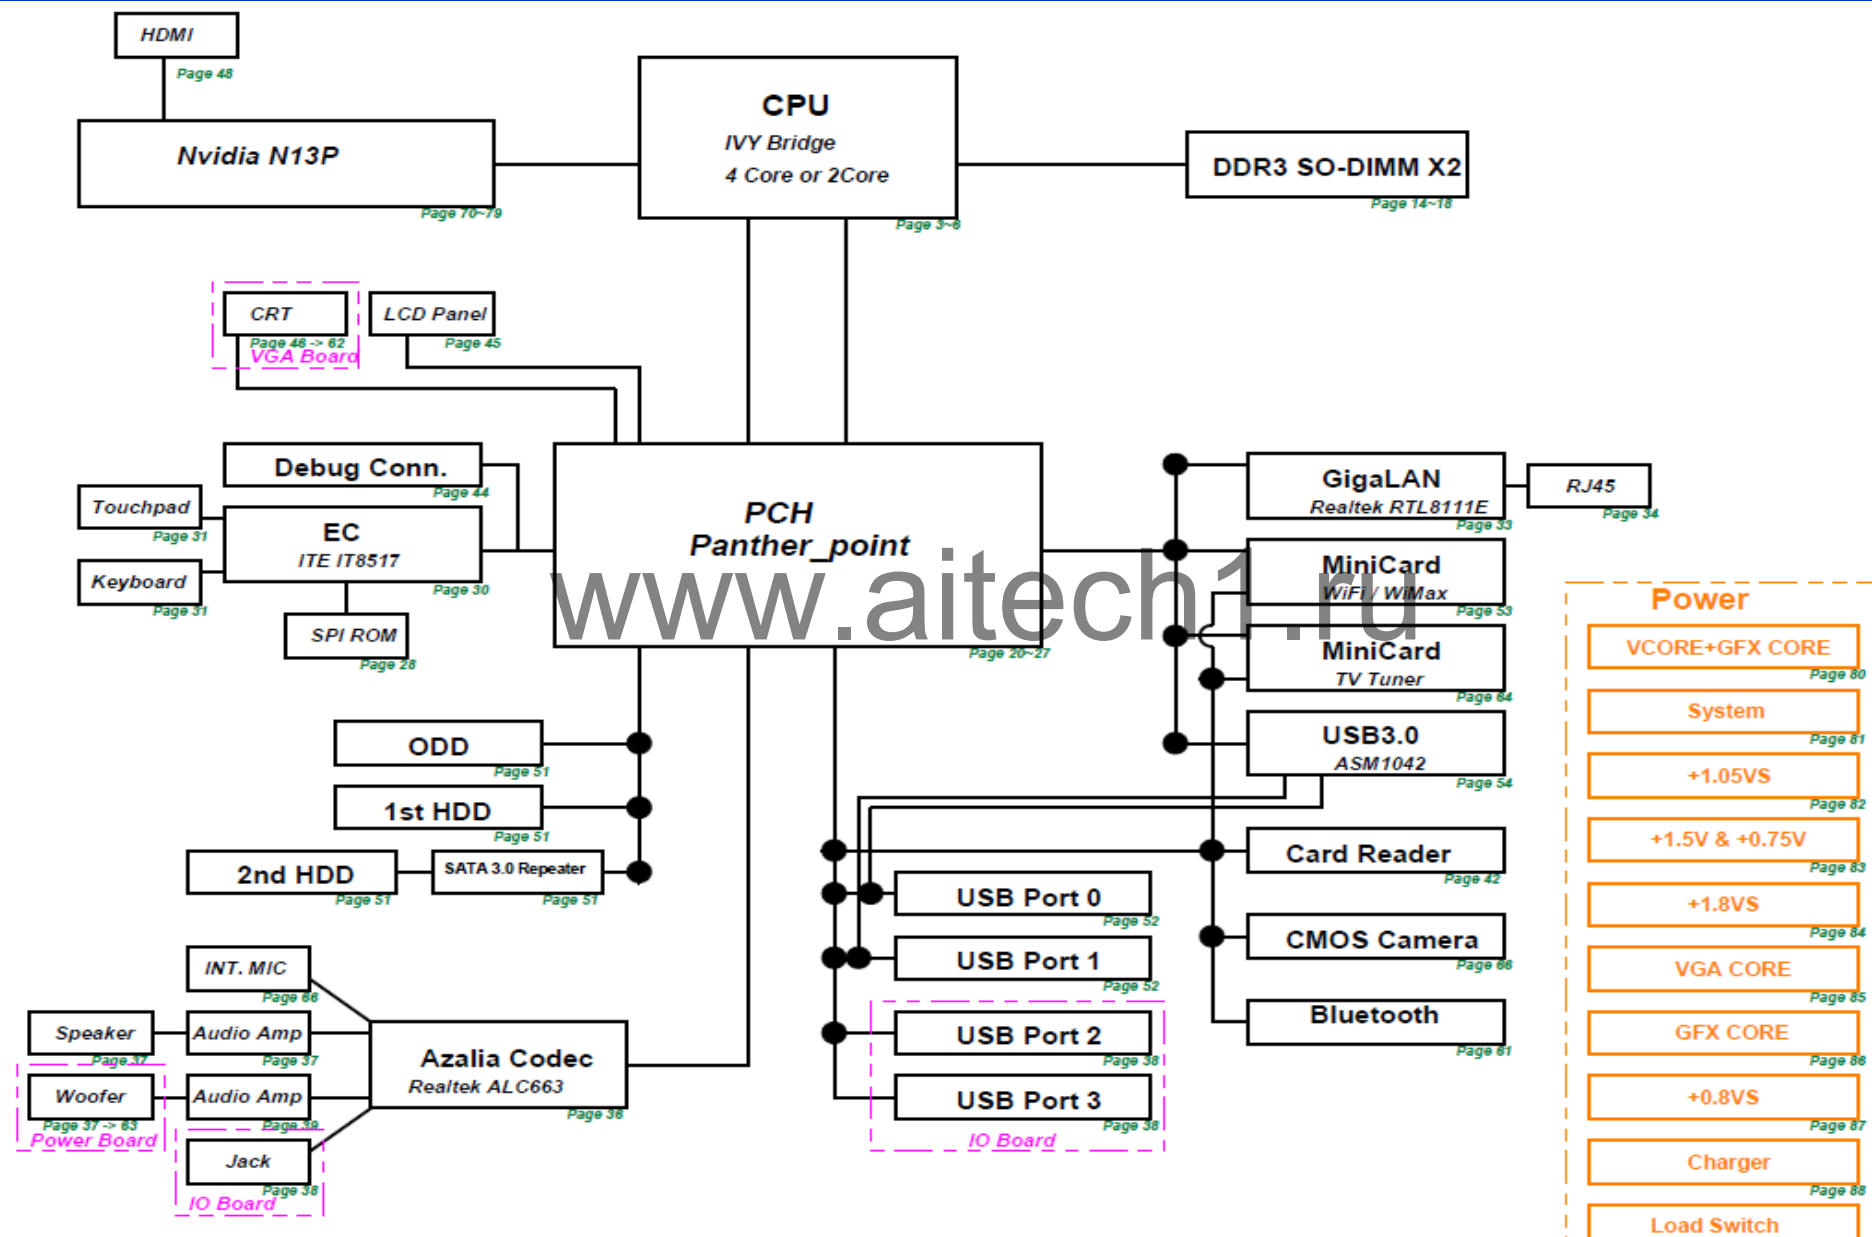

# POWER FLOW

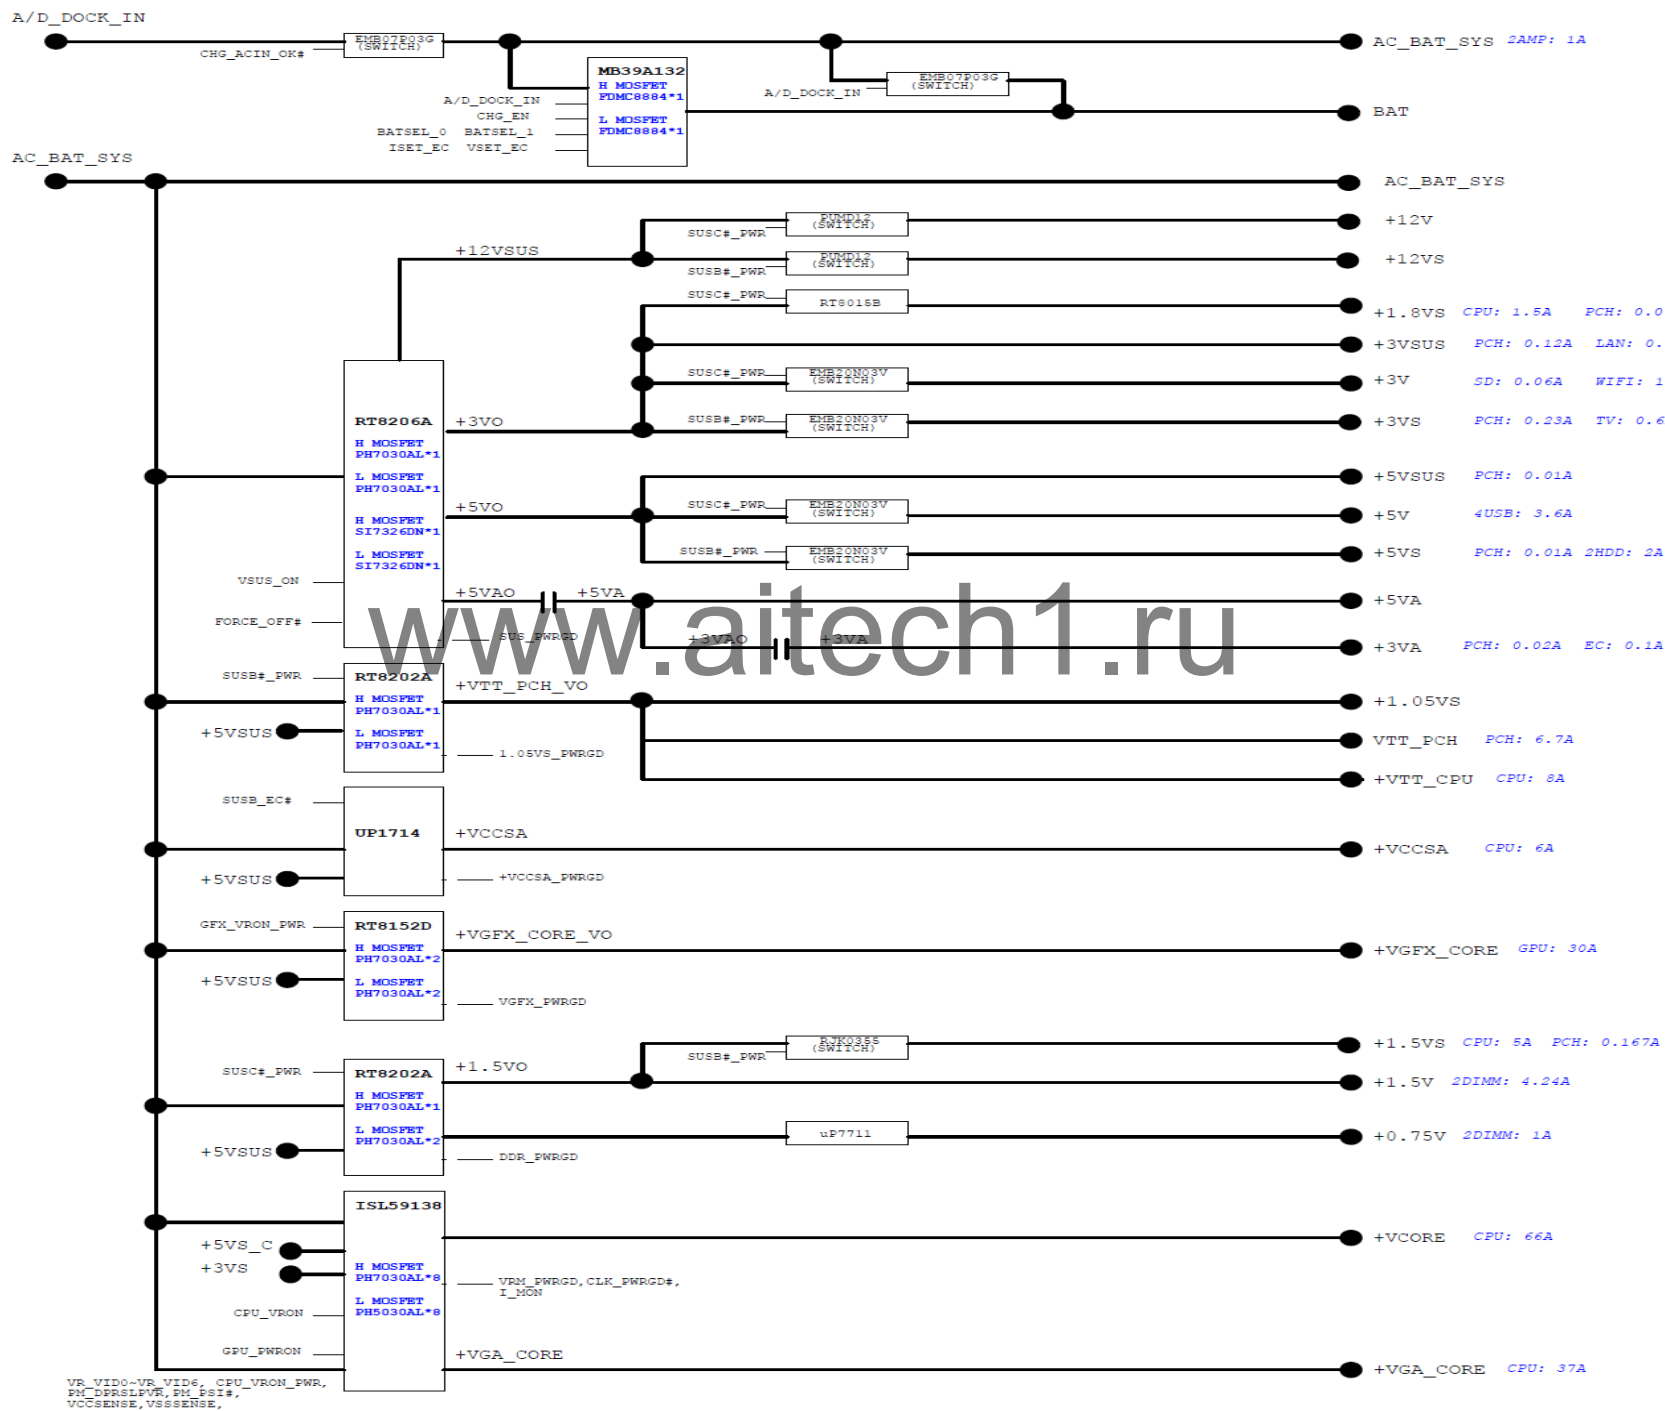

# POWER ON SEQUENCE

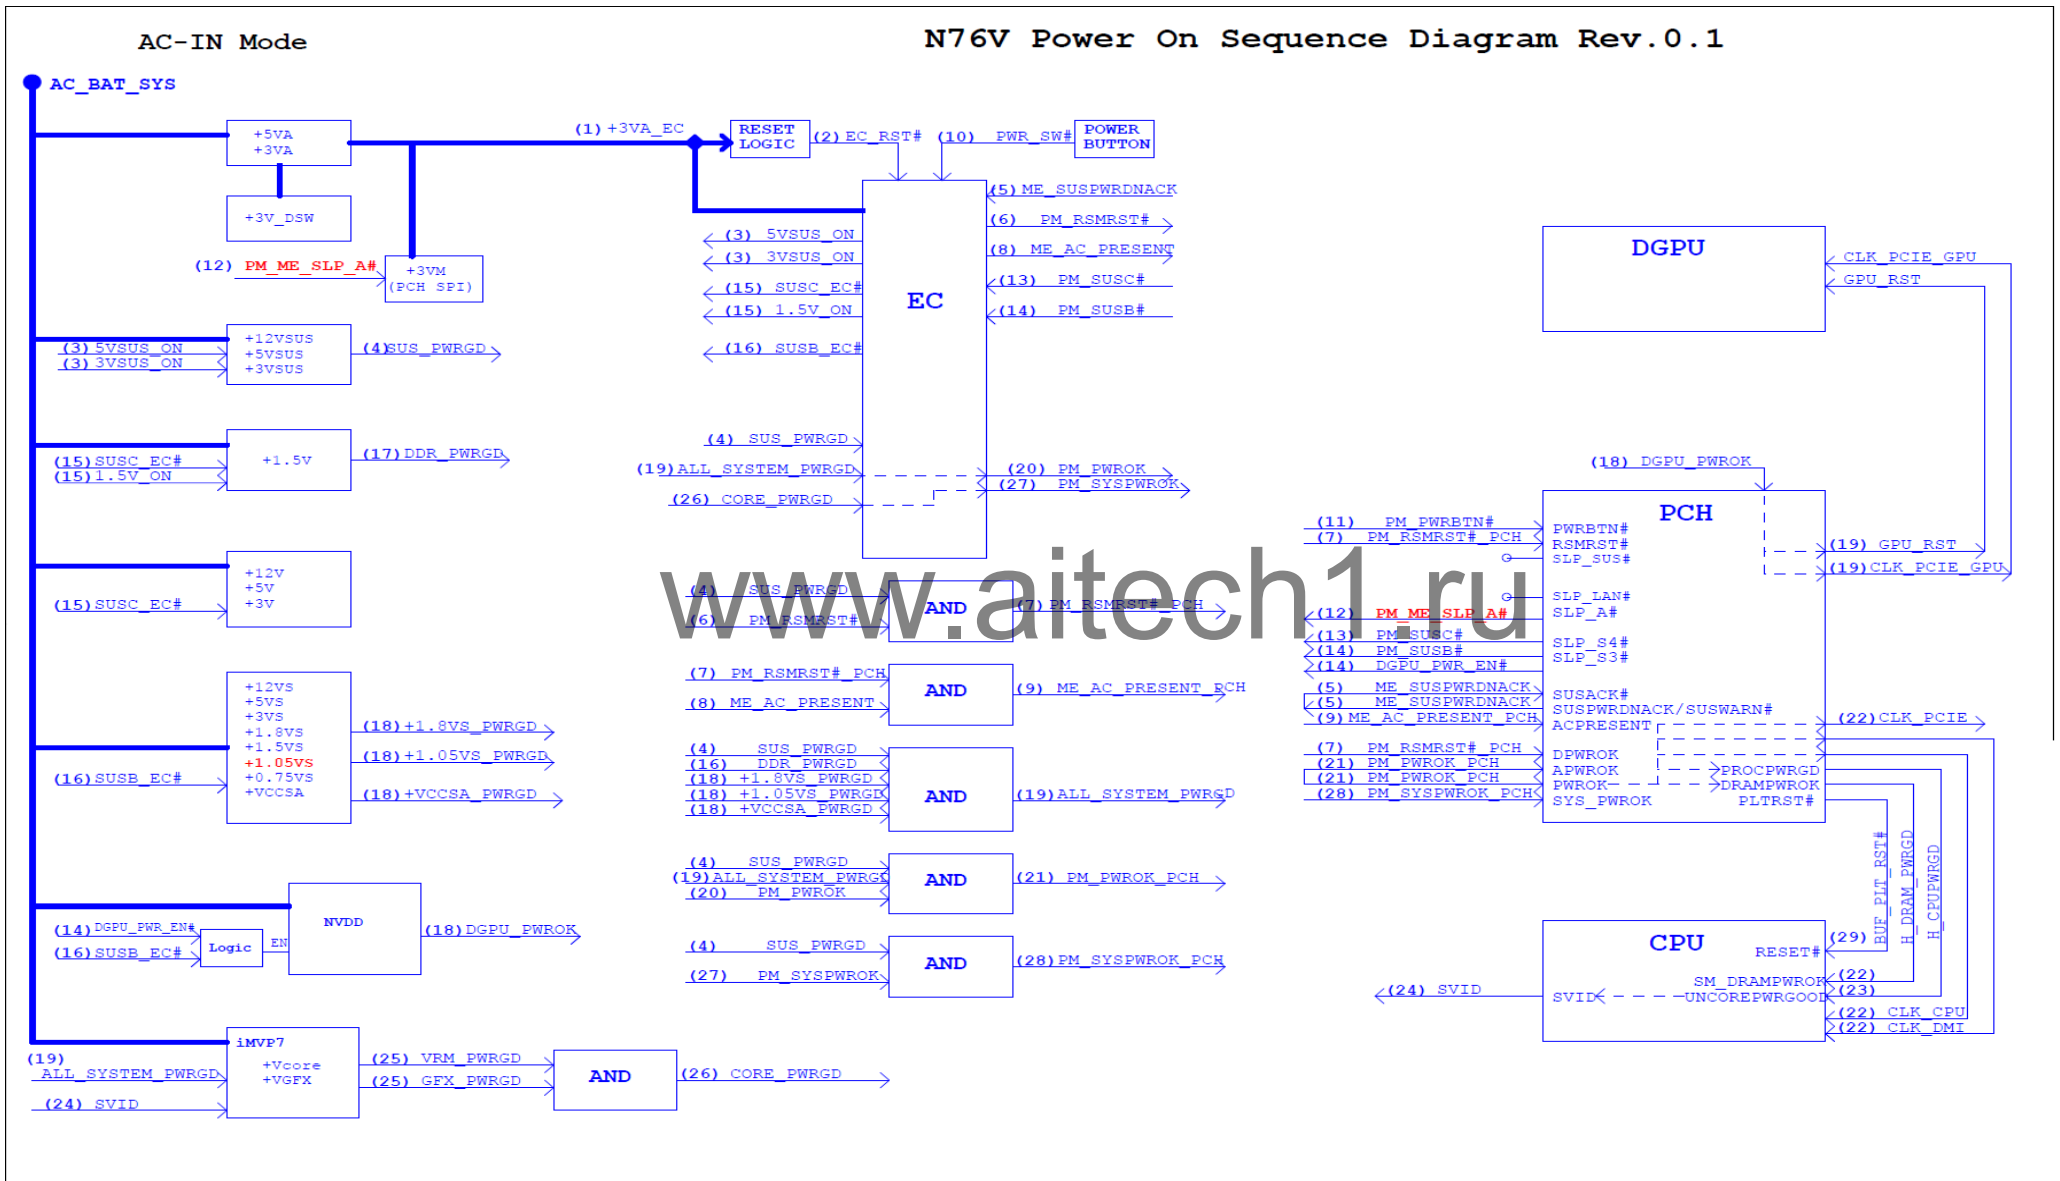

## Voltage & Signal Measure Point TOP

