



TP500LA Repair Guide


BLOCK DIAGRAM

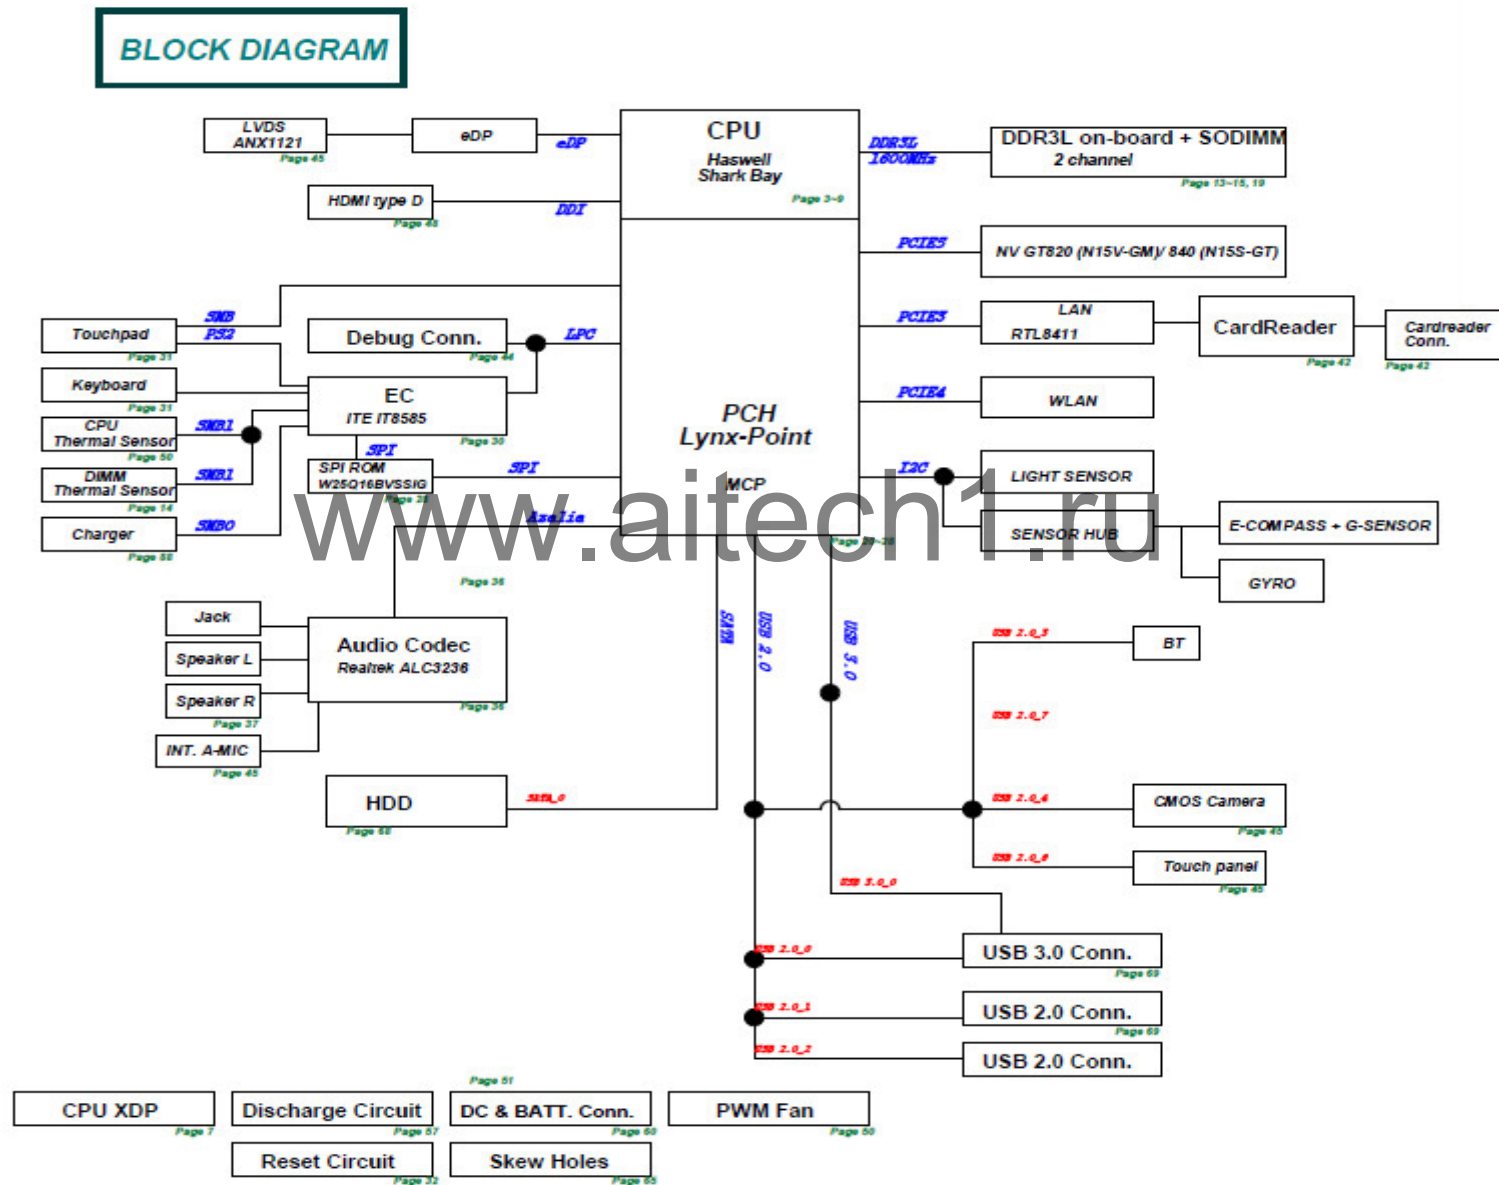


POWER FLOW

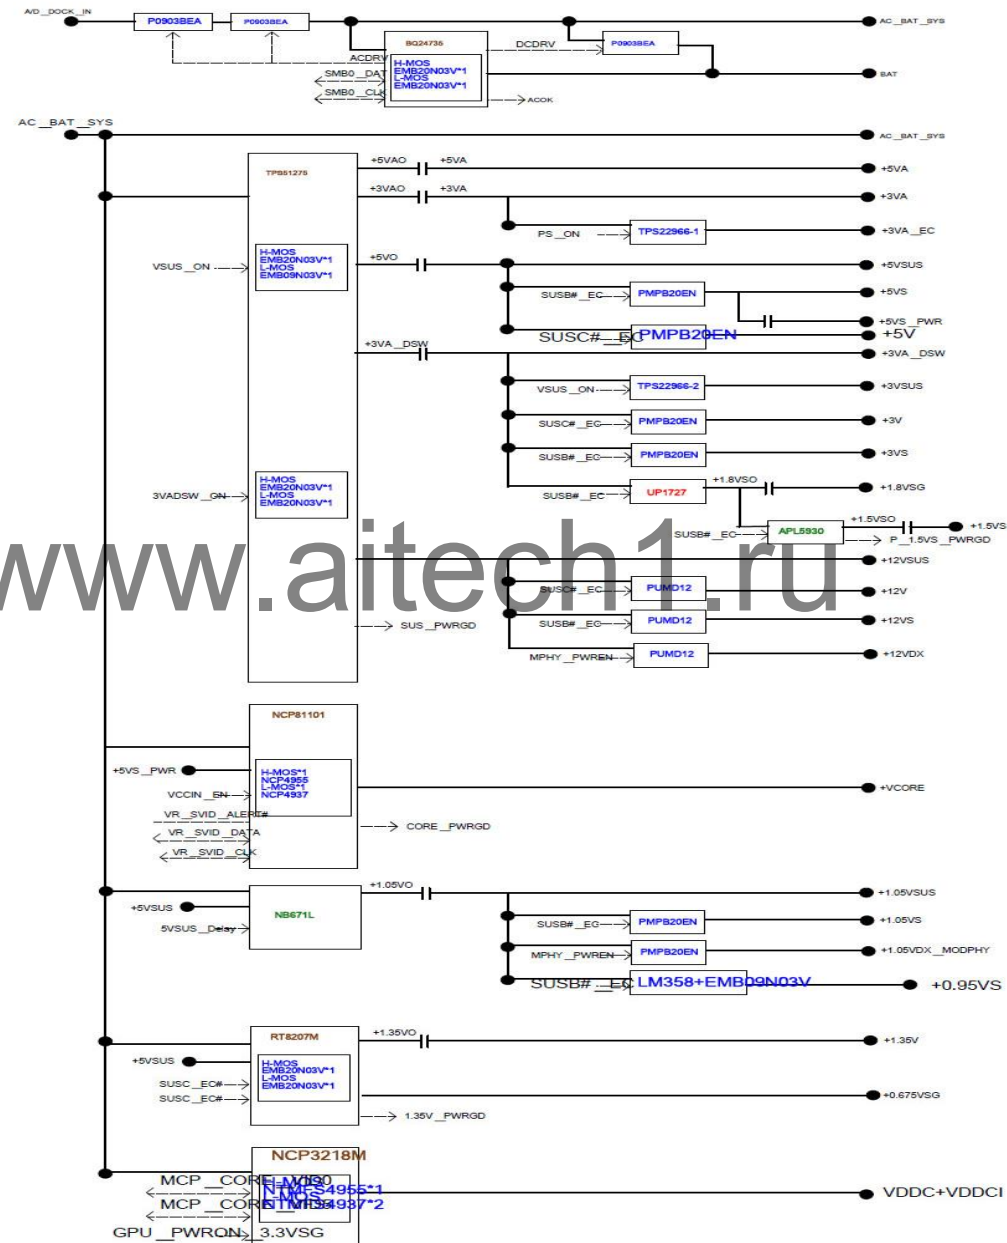

POWER ON SEQUENCE

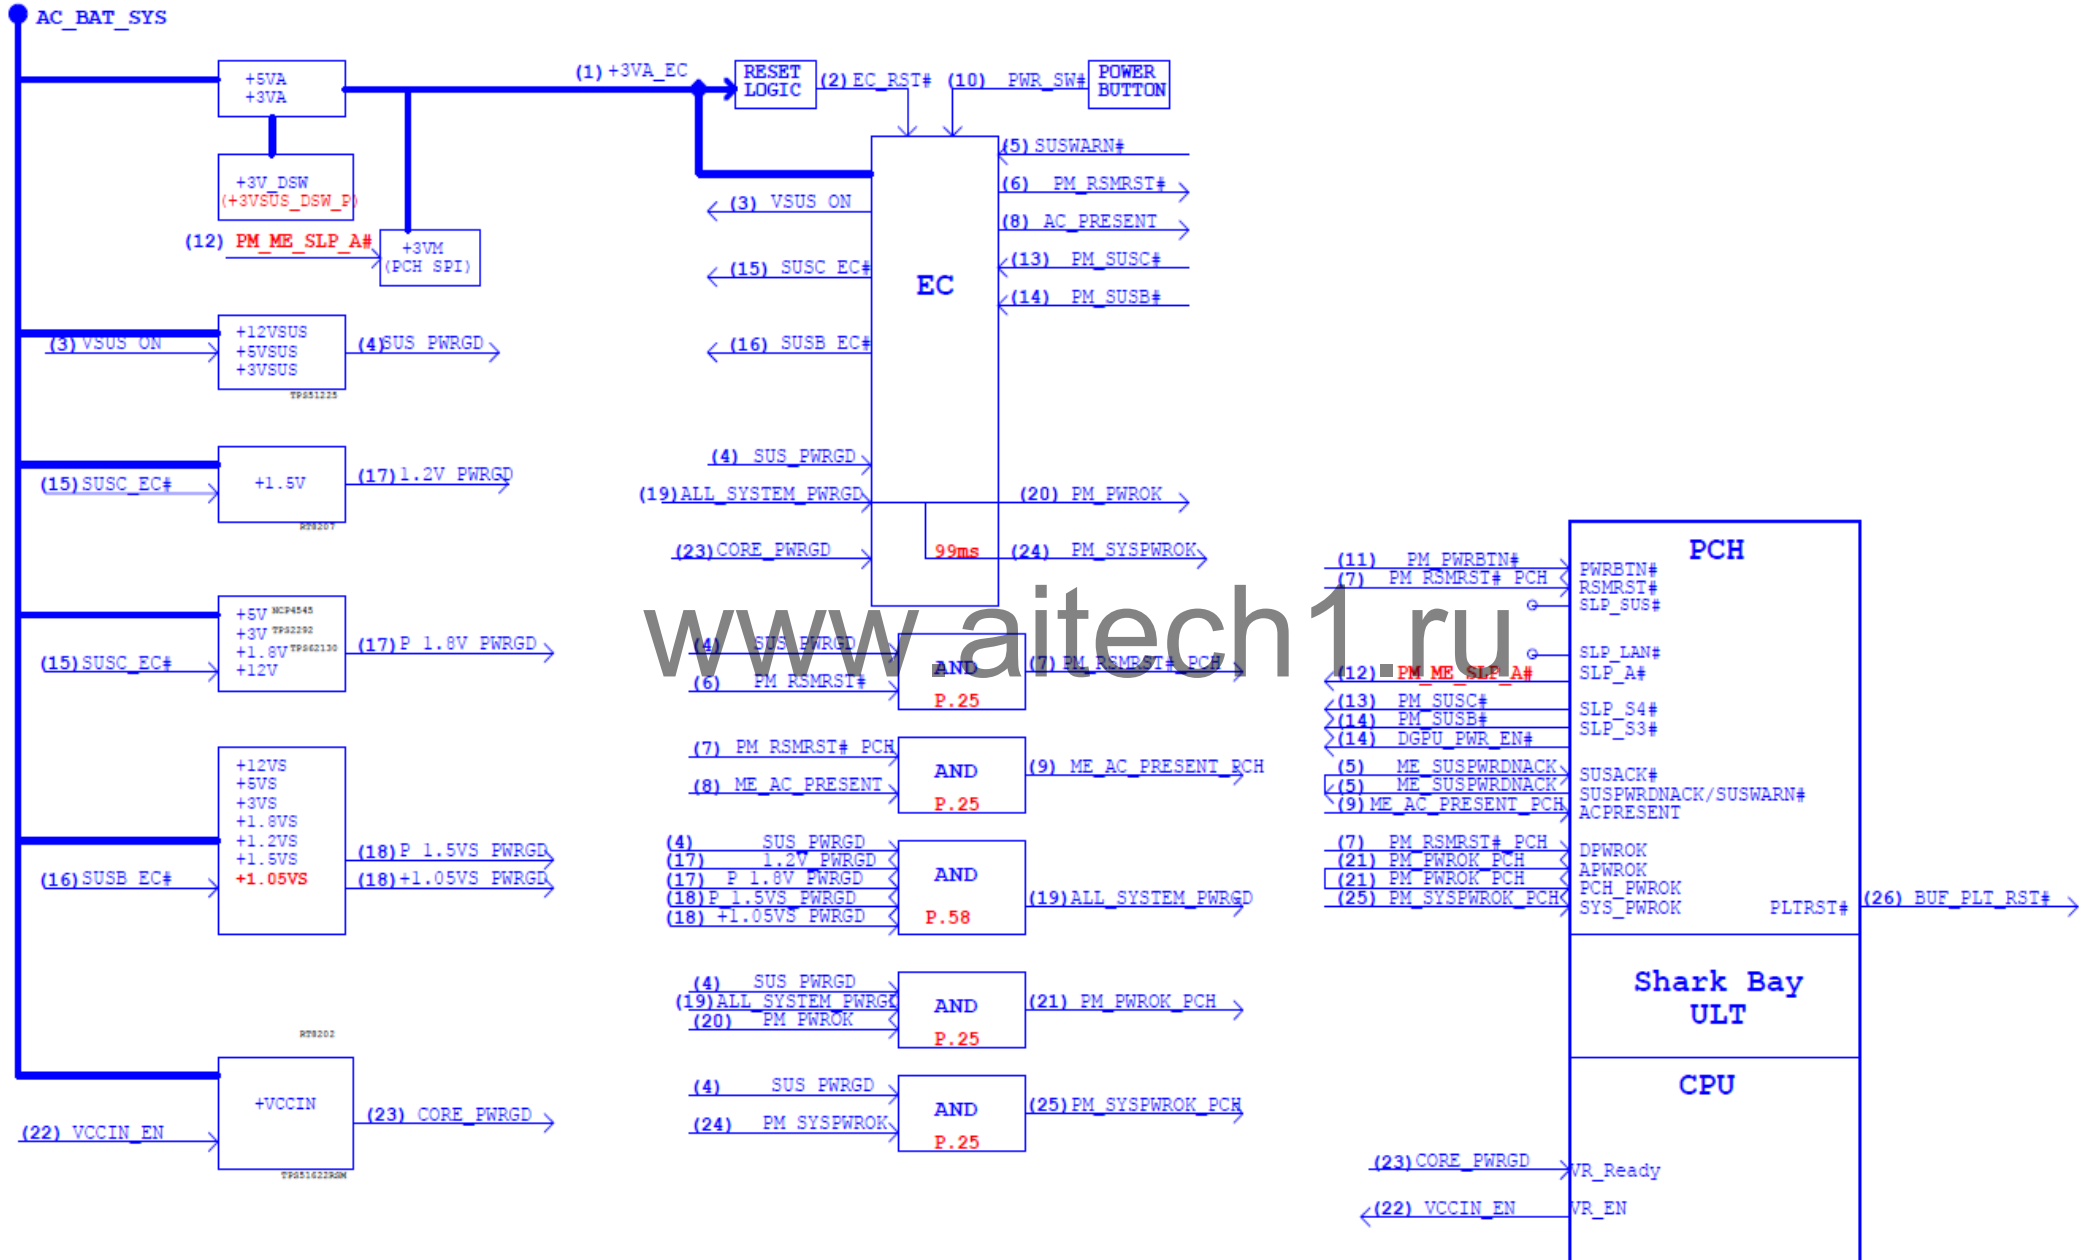

Signal Measure Point-Bottom

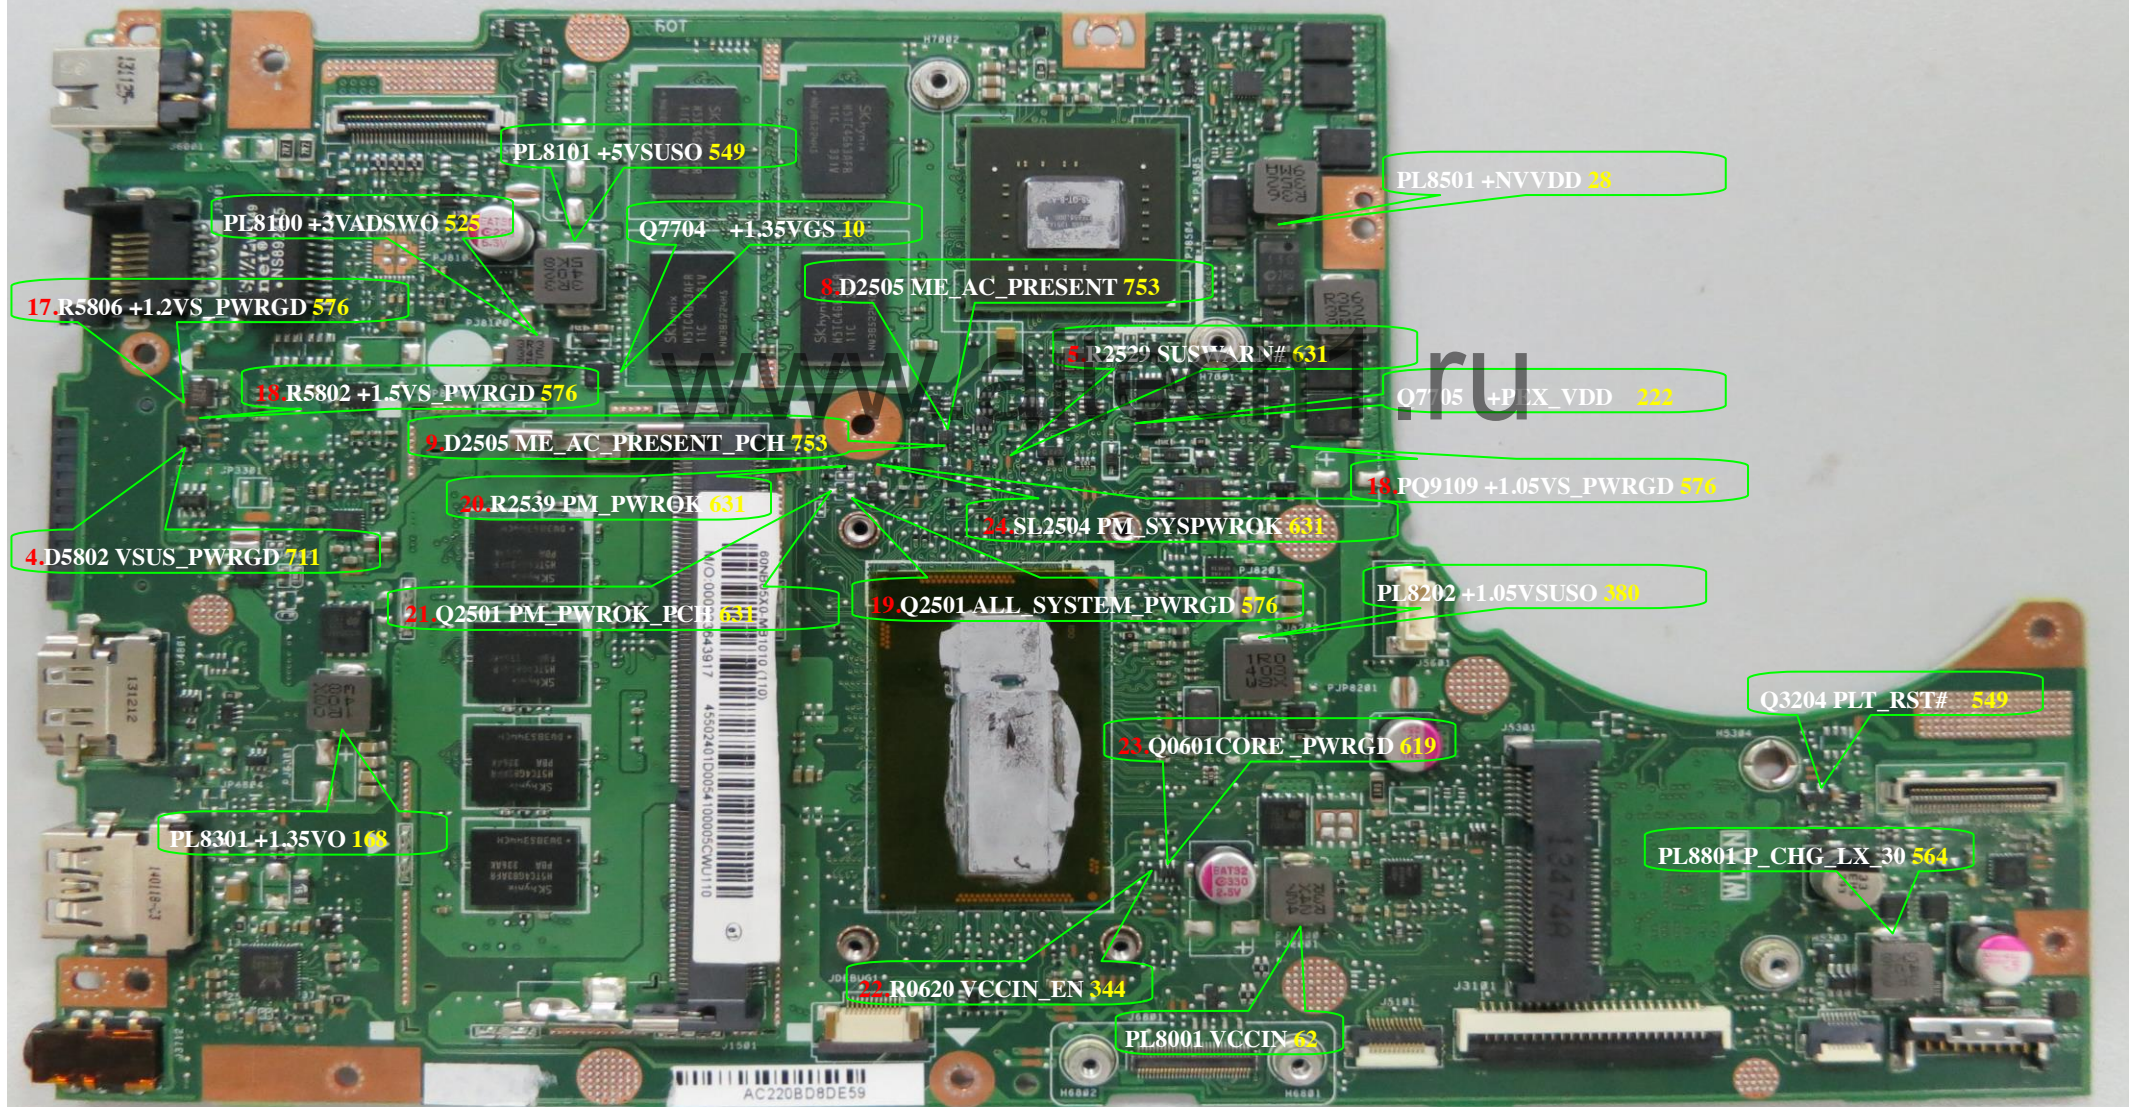

Signal Measure Point-Top

