




U41SV Repair Guide

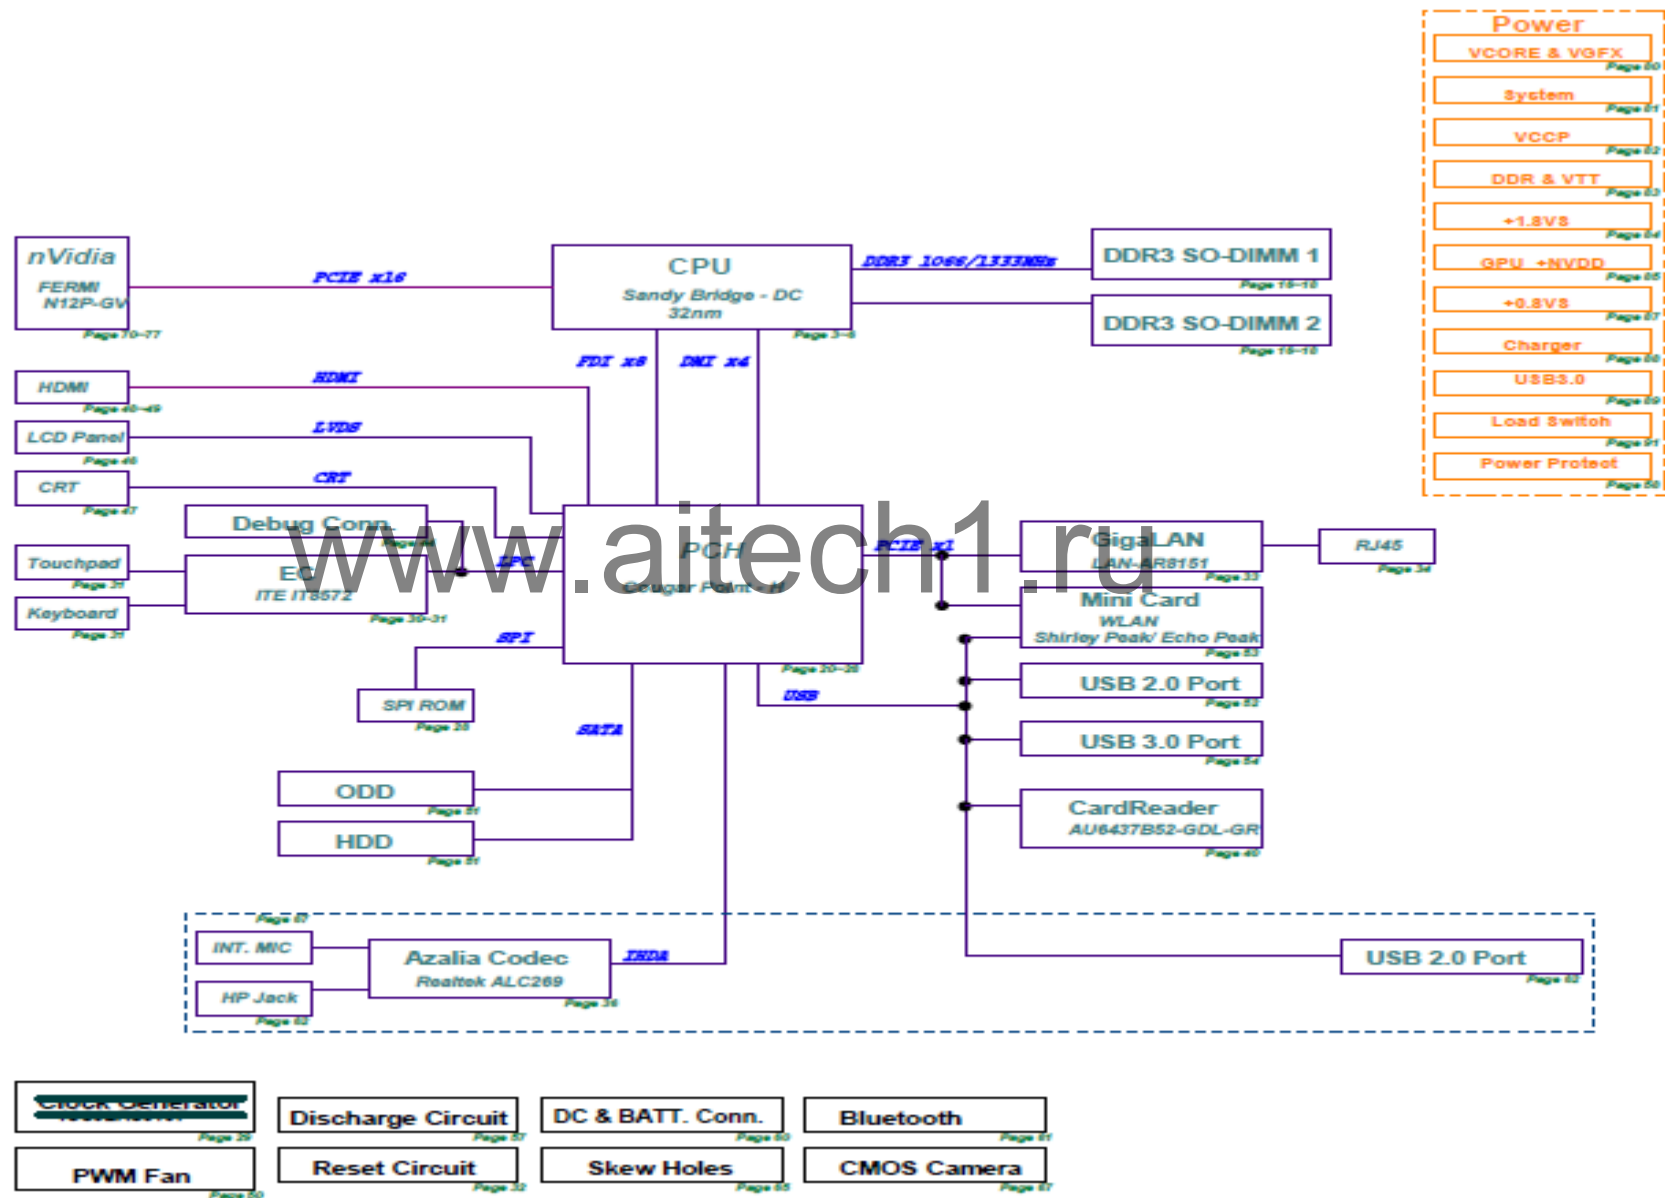


POWER FLOW

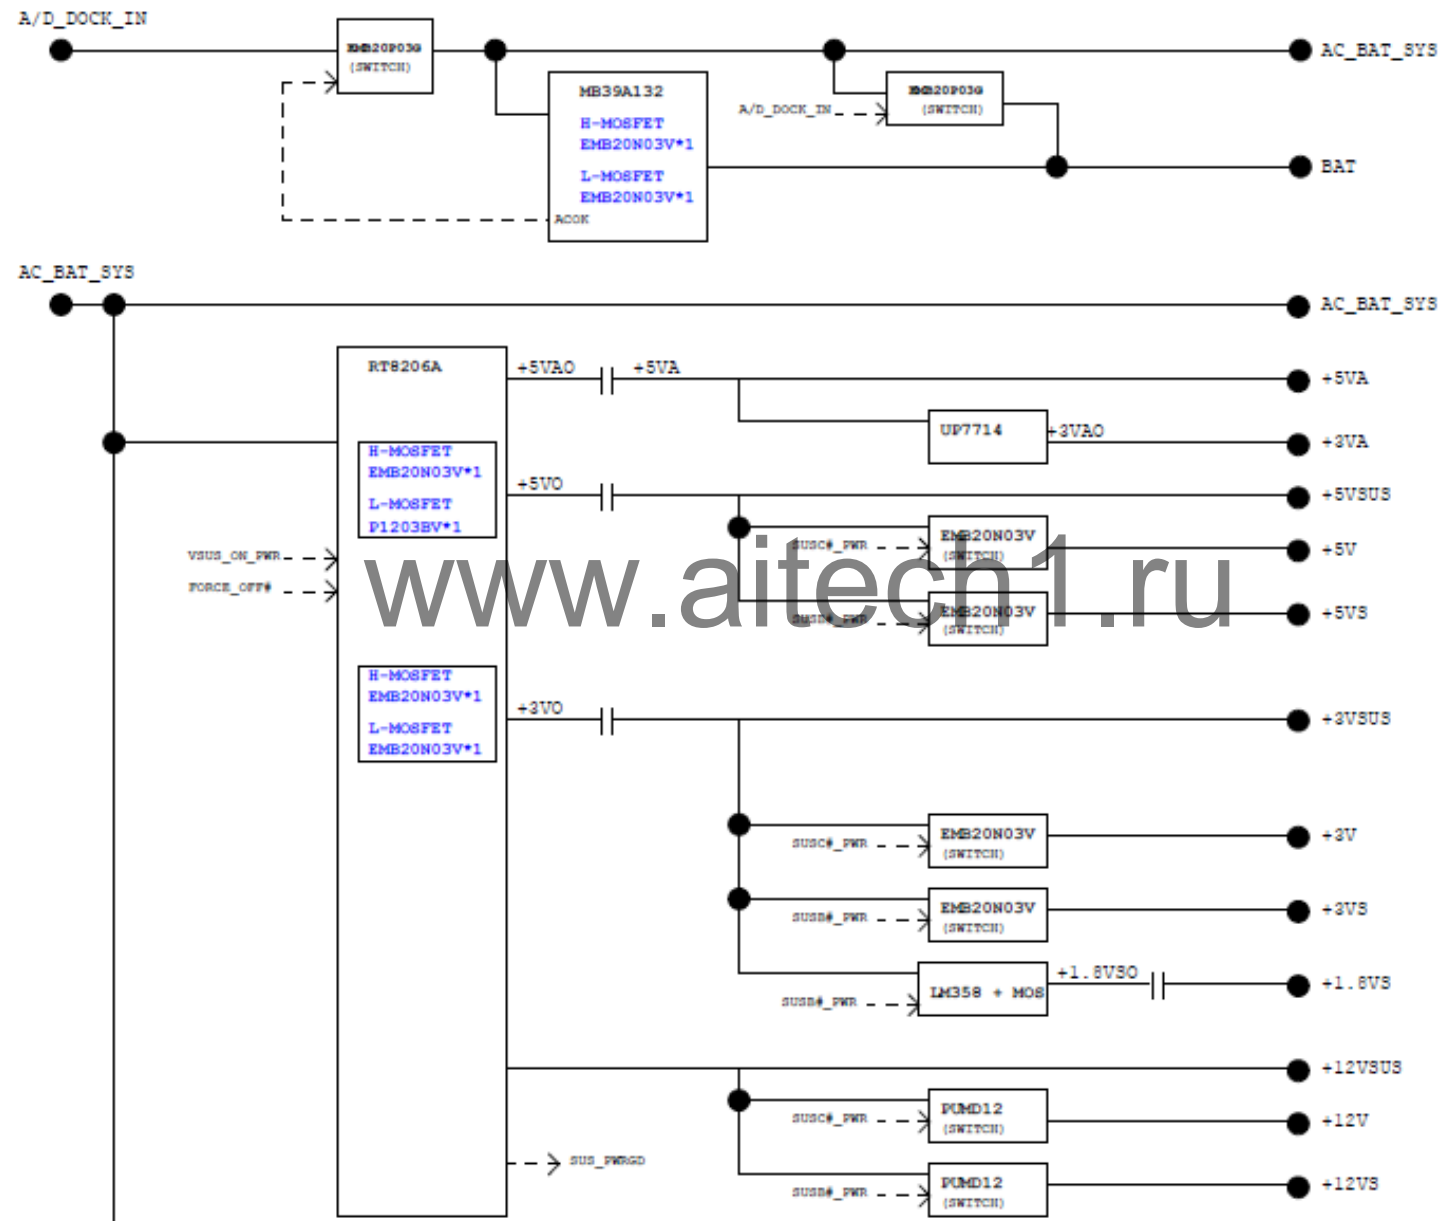

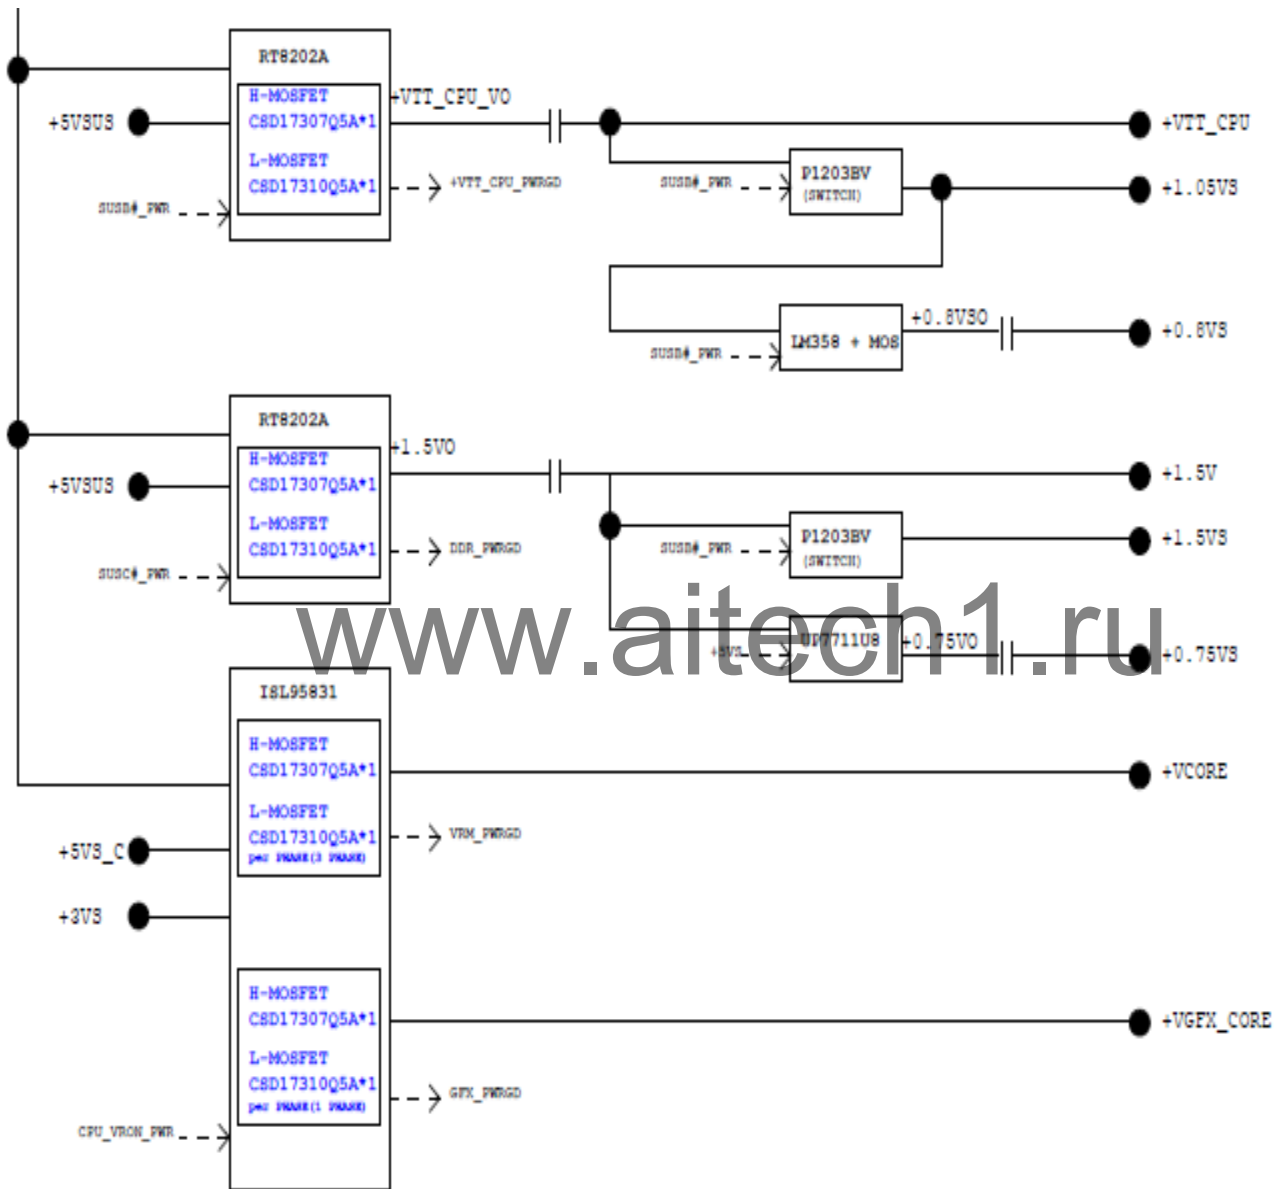


www.aitech1.ru

AC-IN Mode

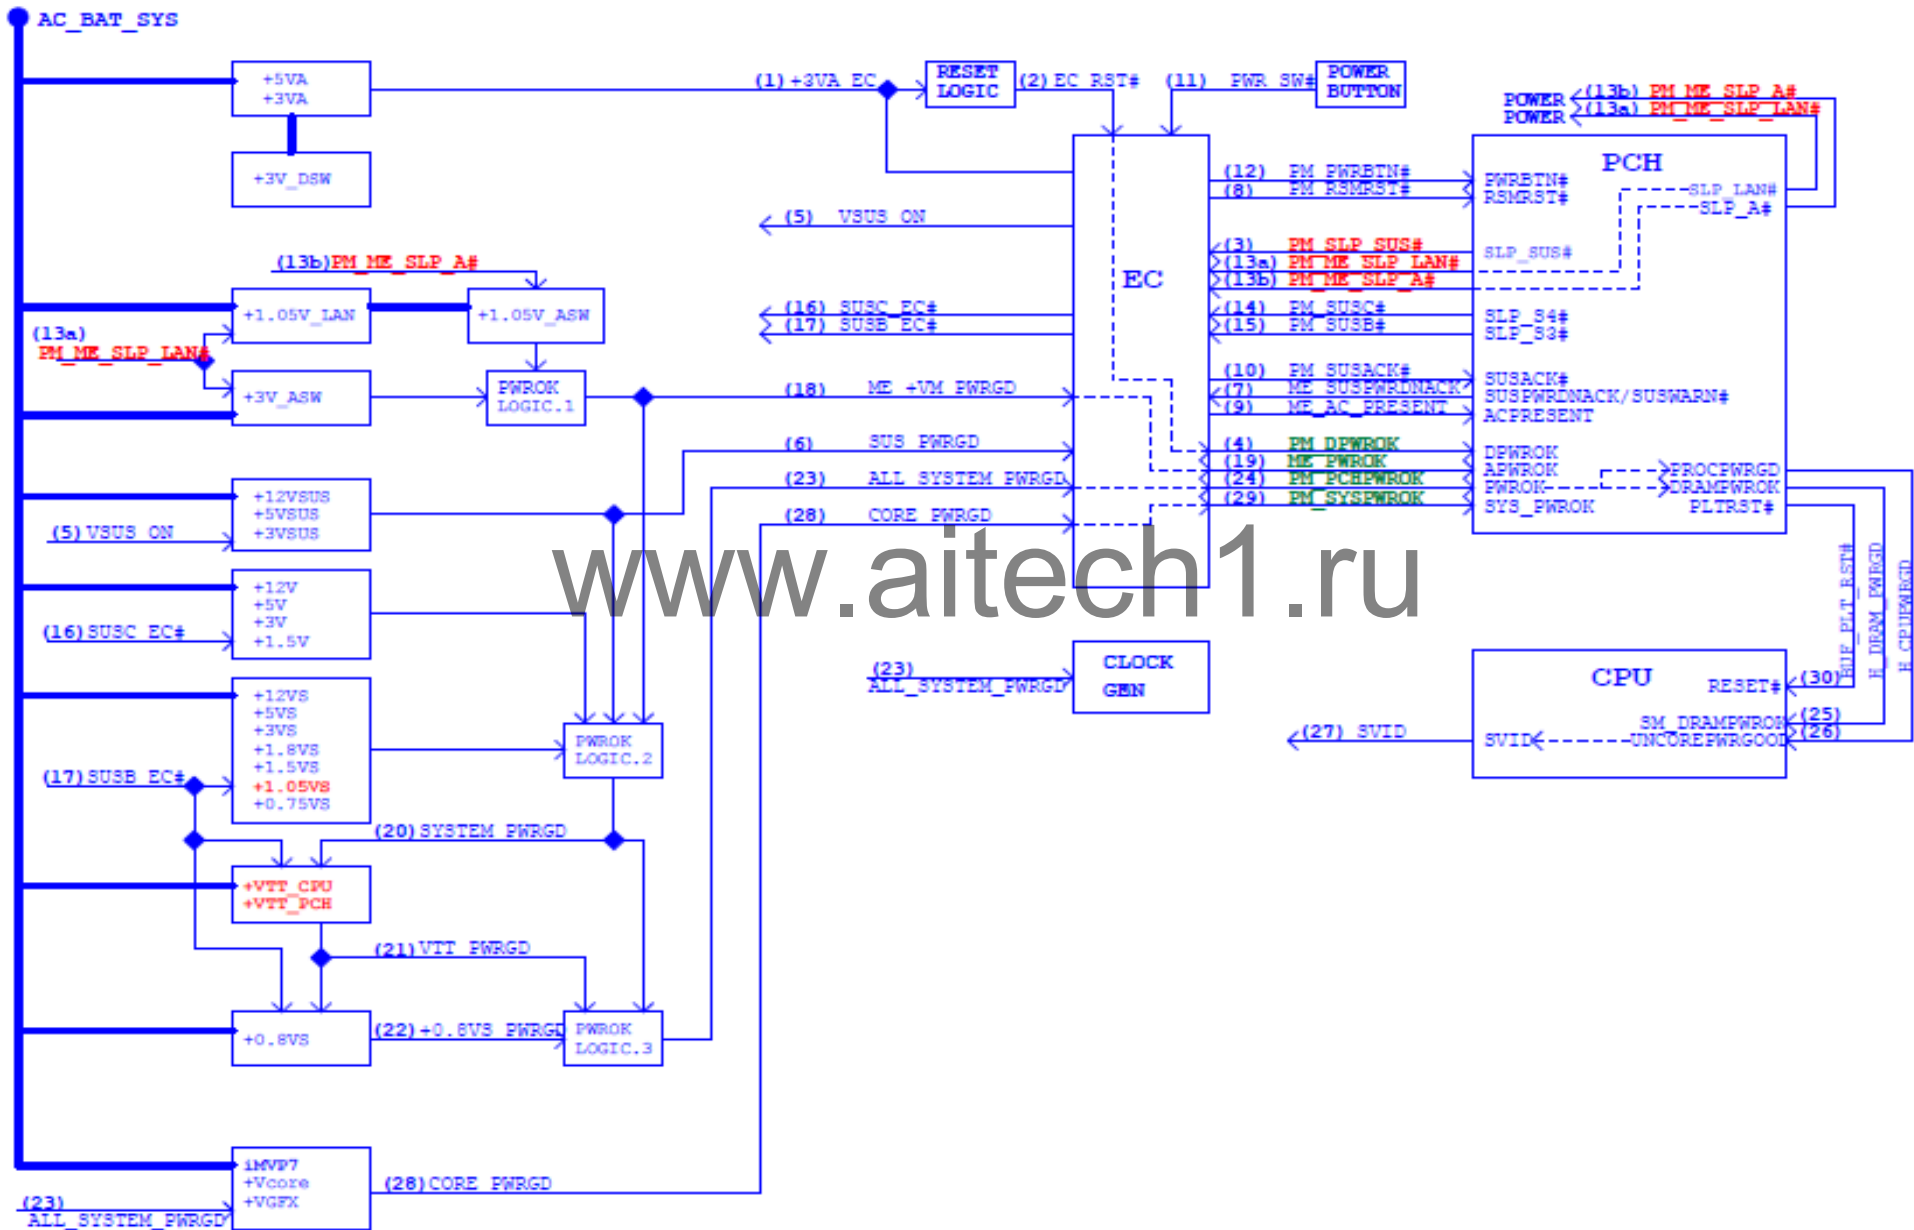

Voltage & Signal Measure Point TOP

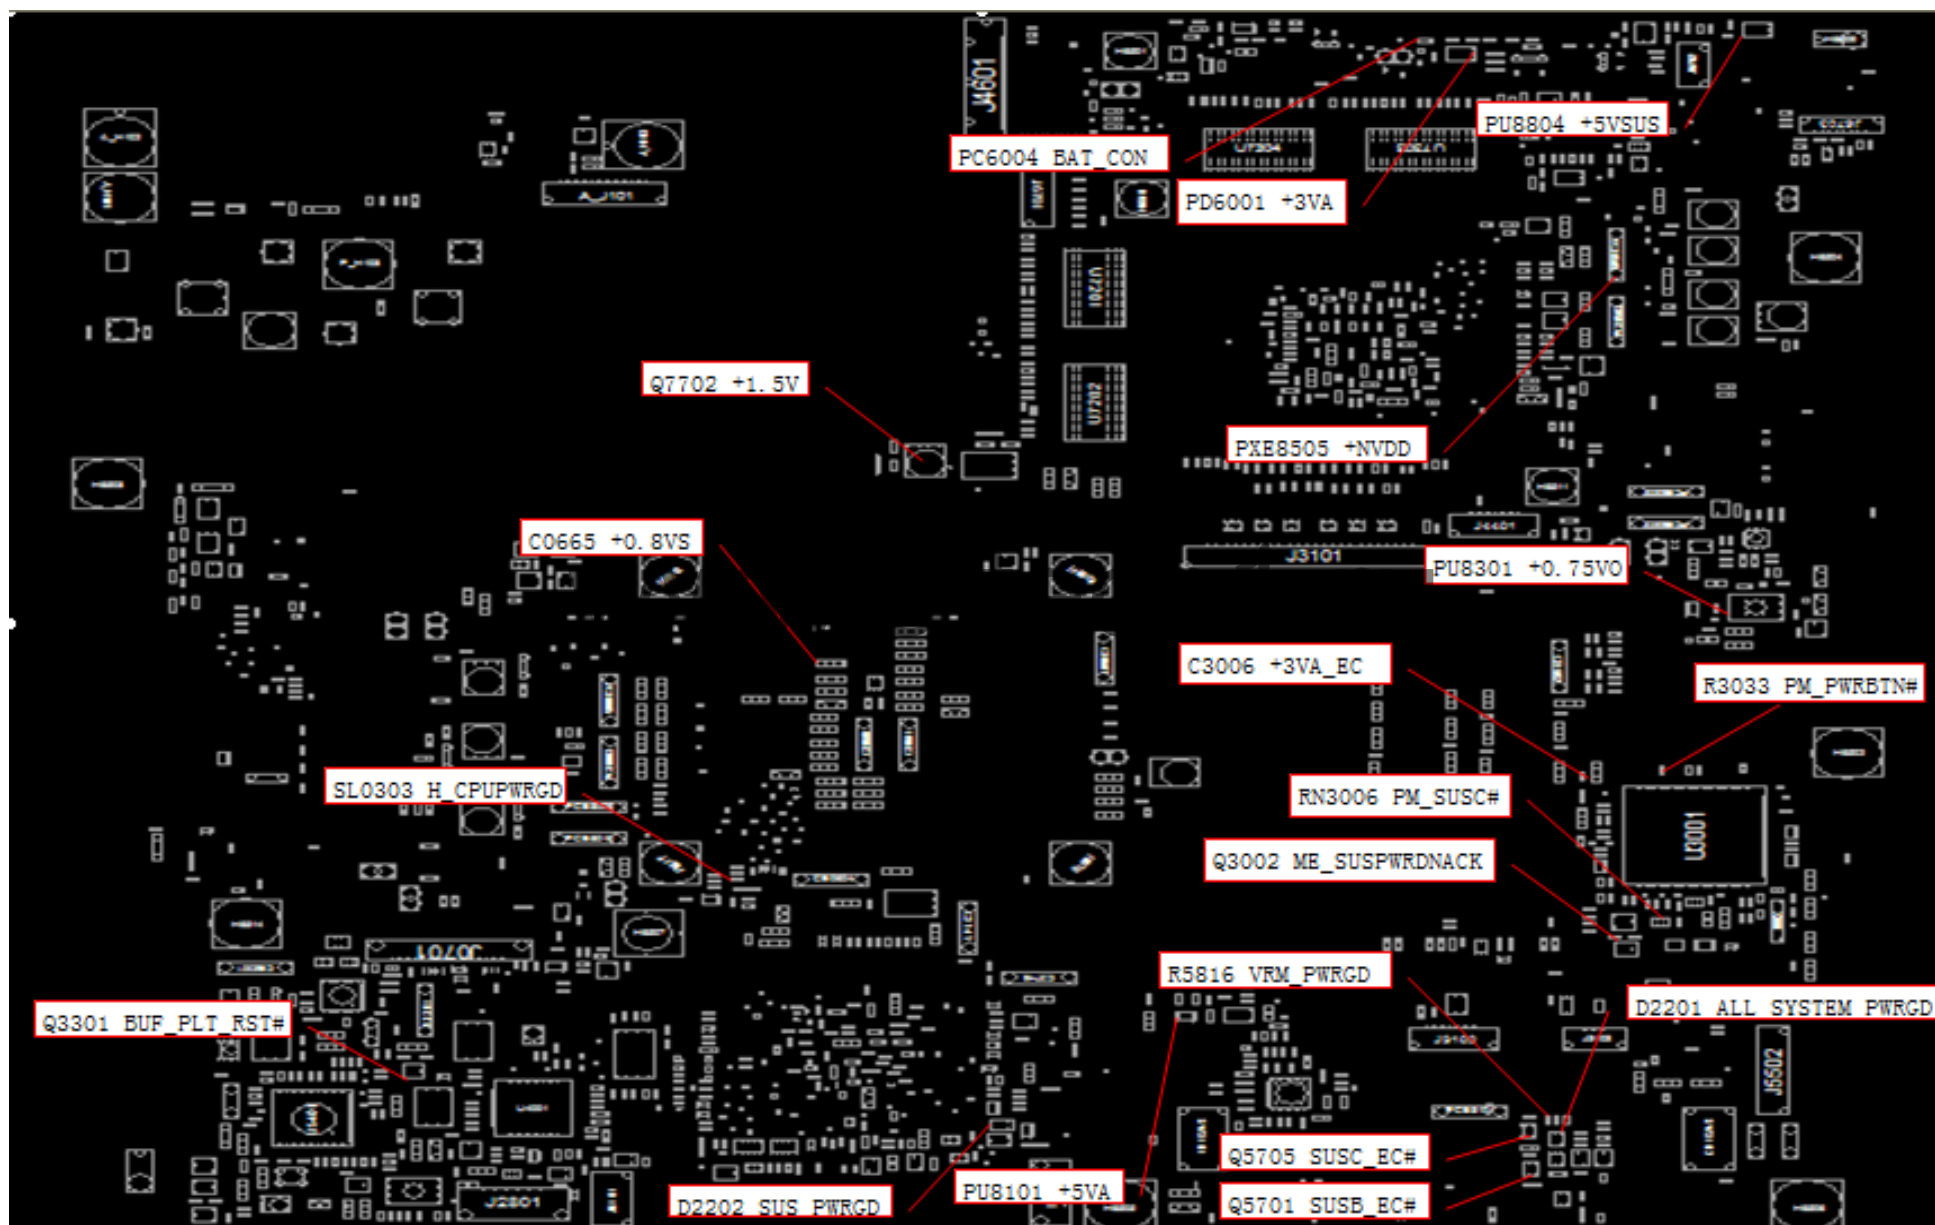

Voltage& Signal Measure Point Bottom

