



U47A Repair Guide

U47A Block Diagram

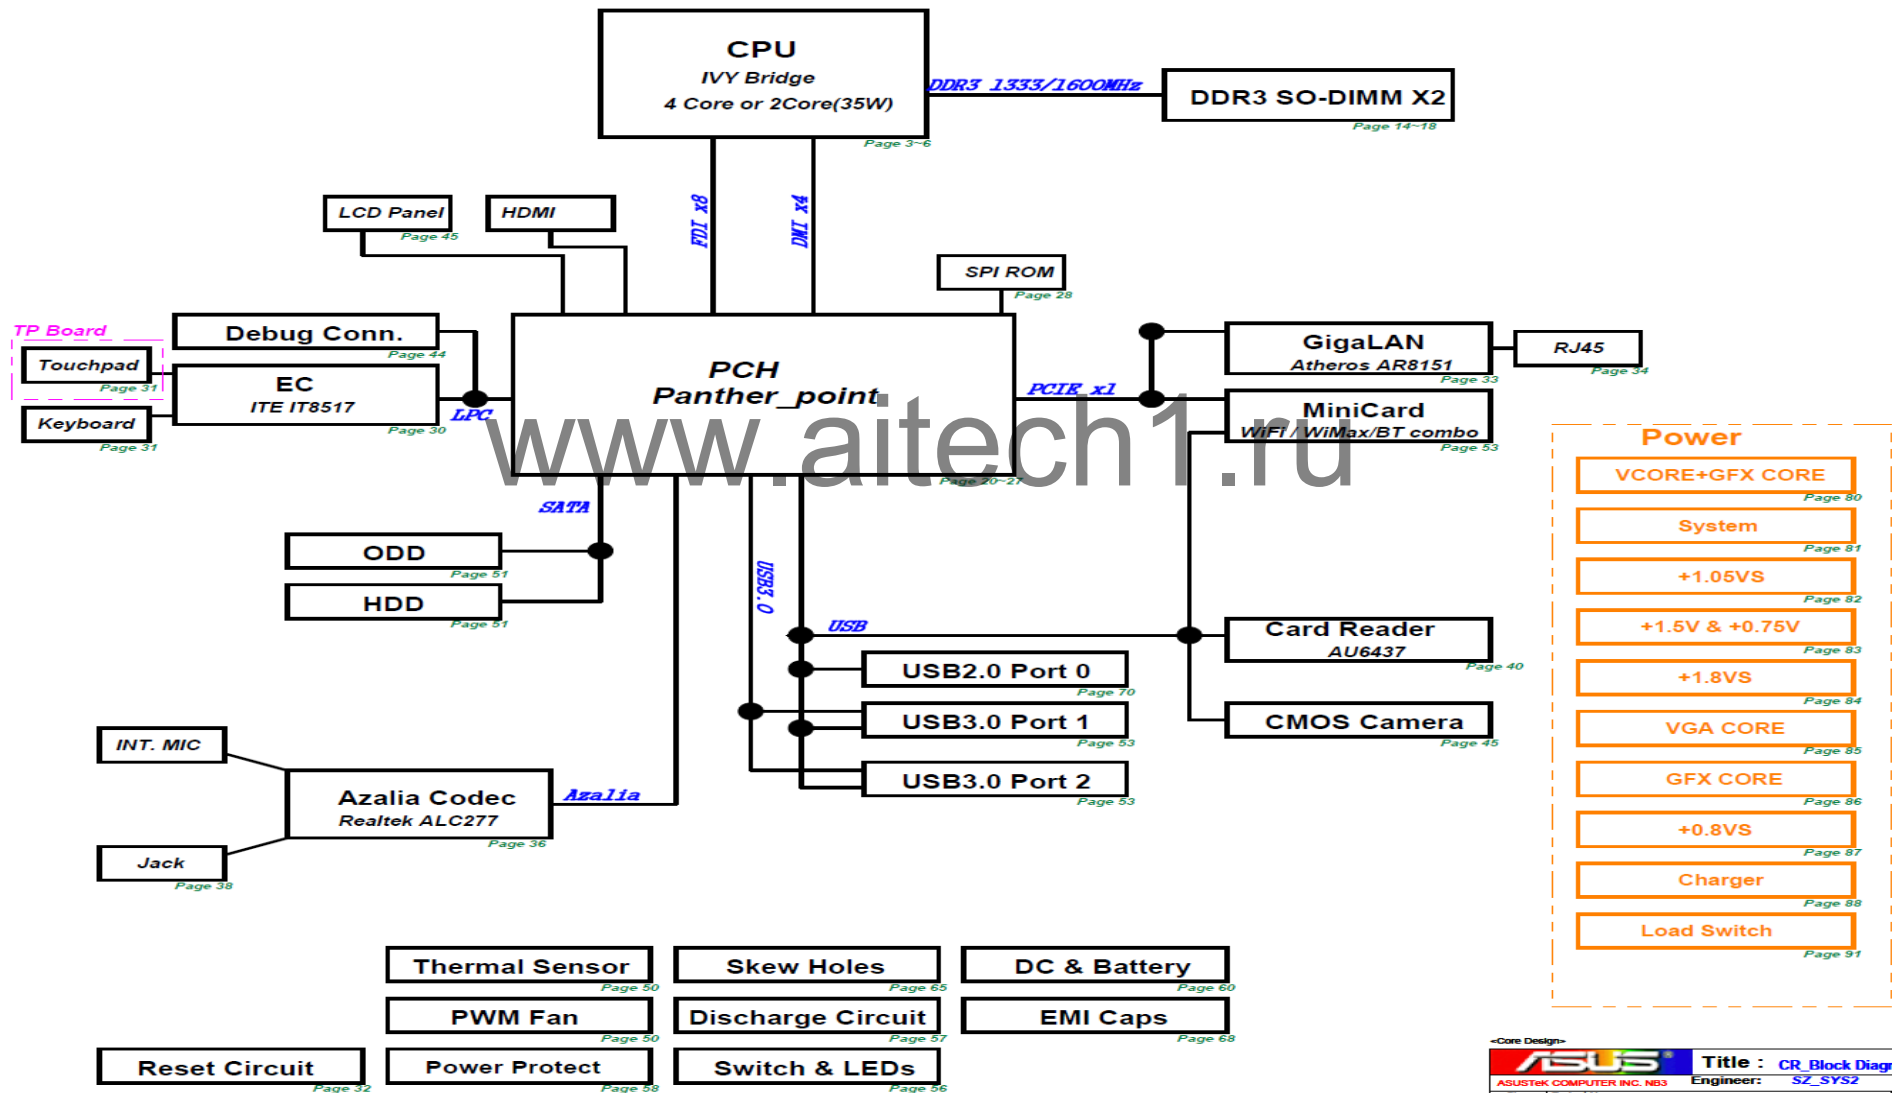


<Core Design>


POWER FLOW

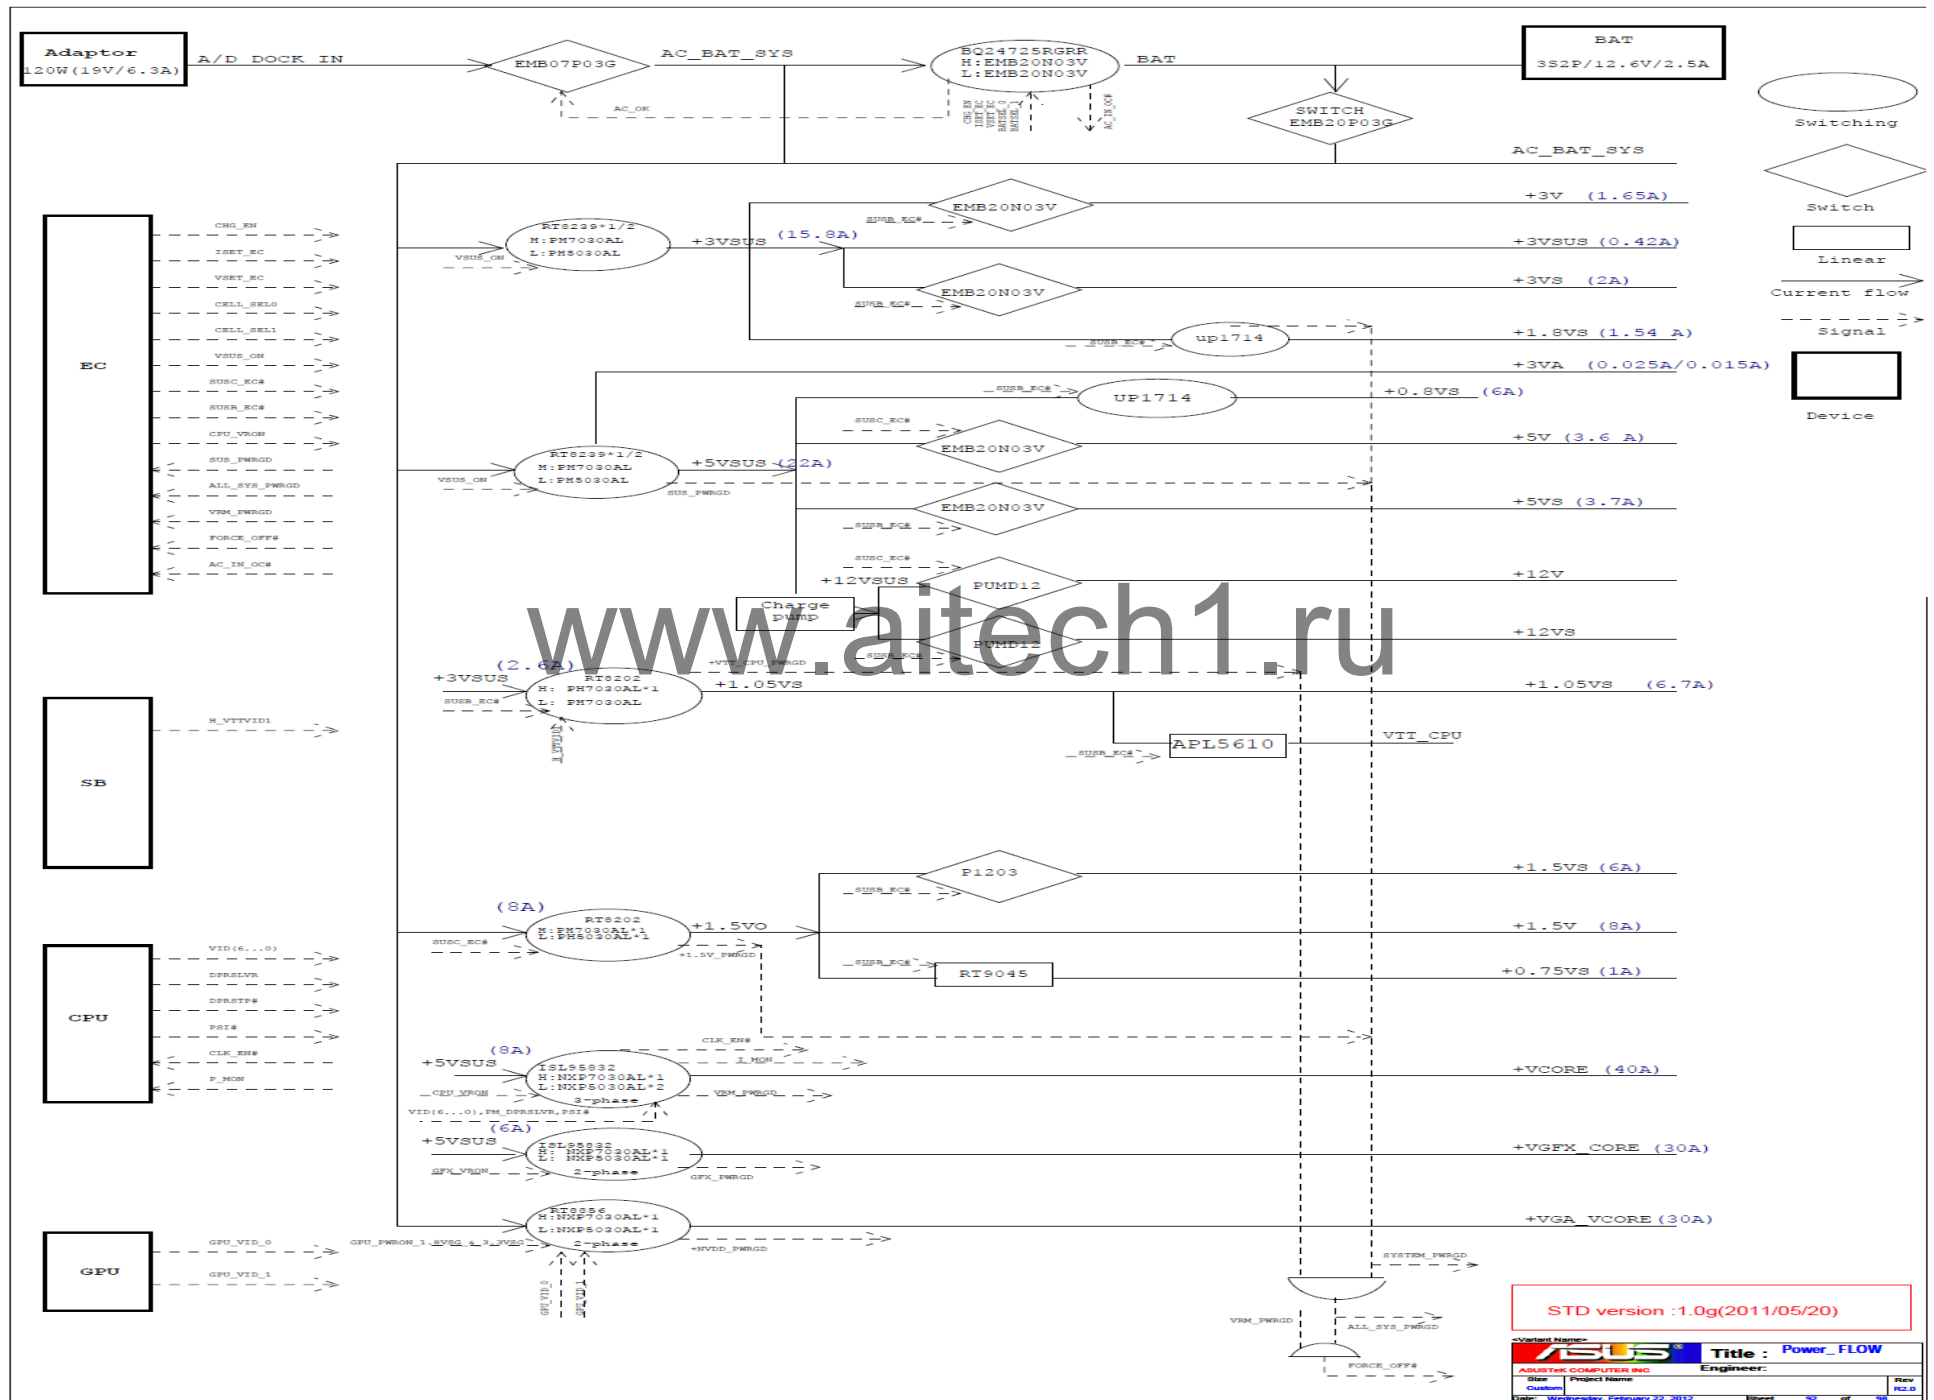

POWER ON SEQUENCE

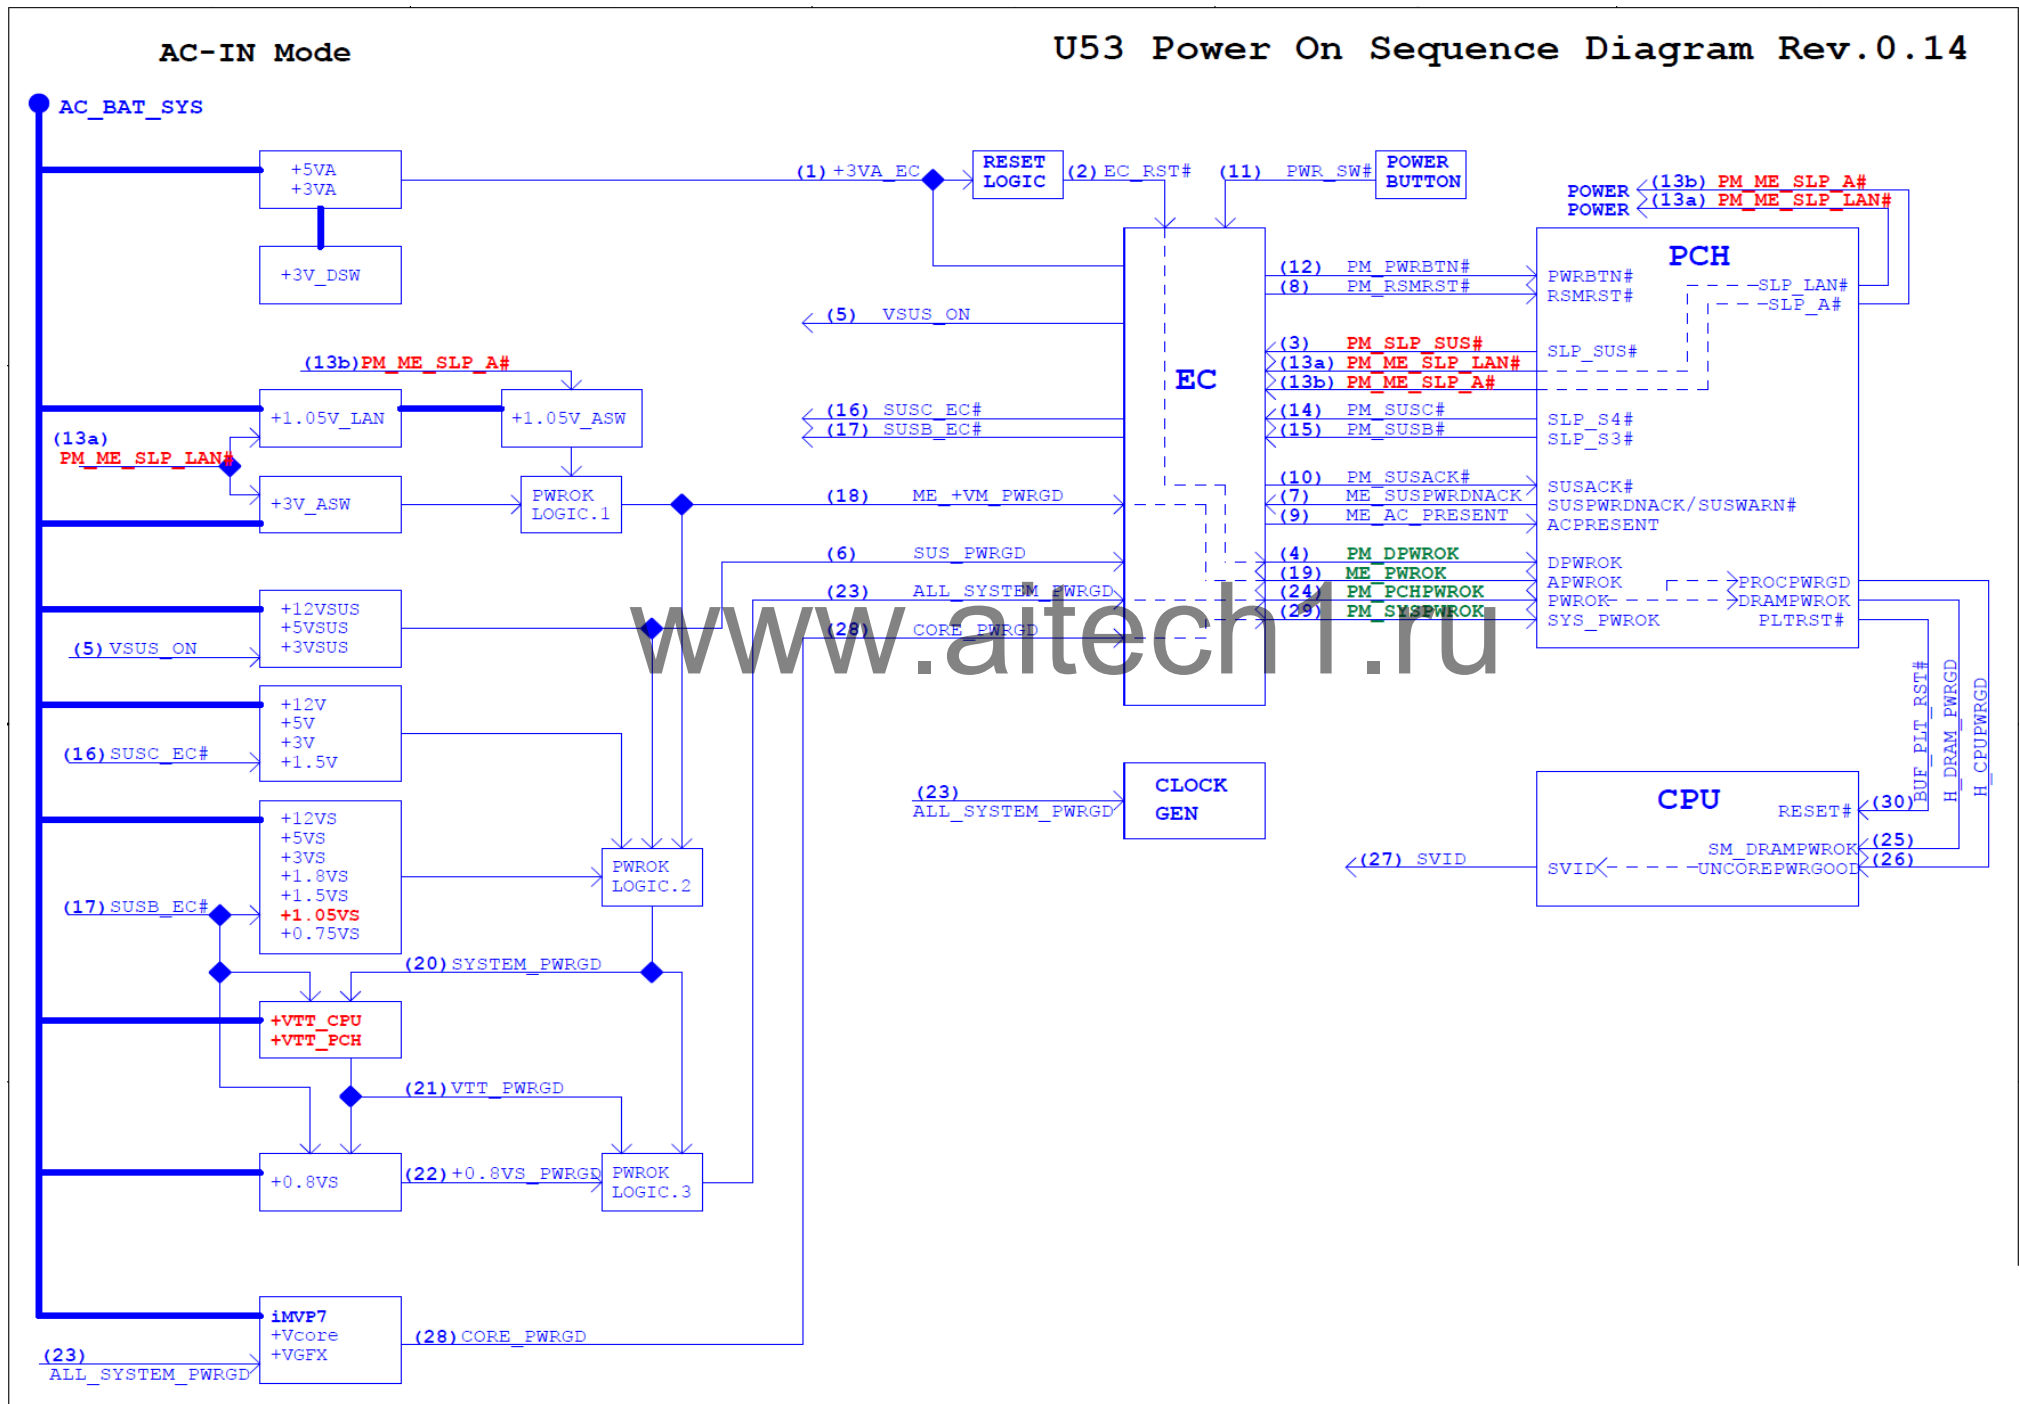

Voltage & Signal Measure Point TOP

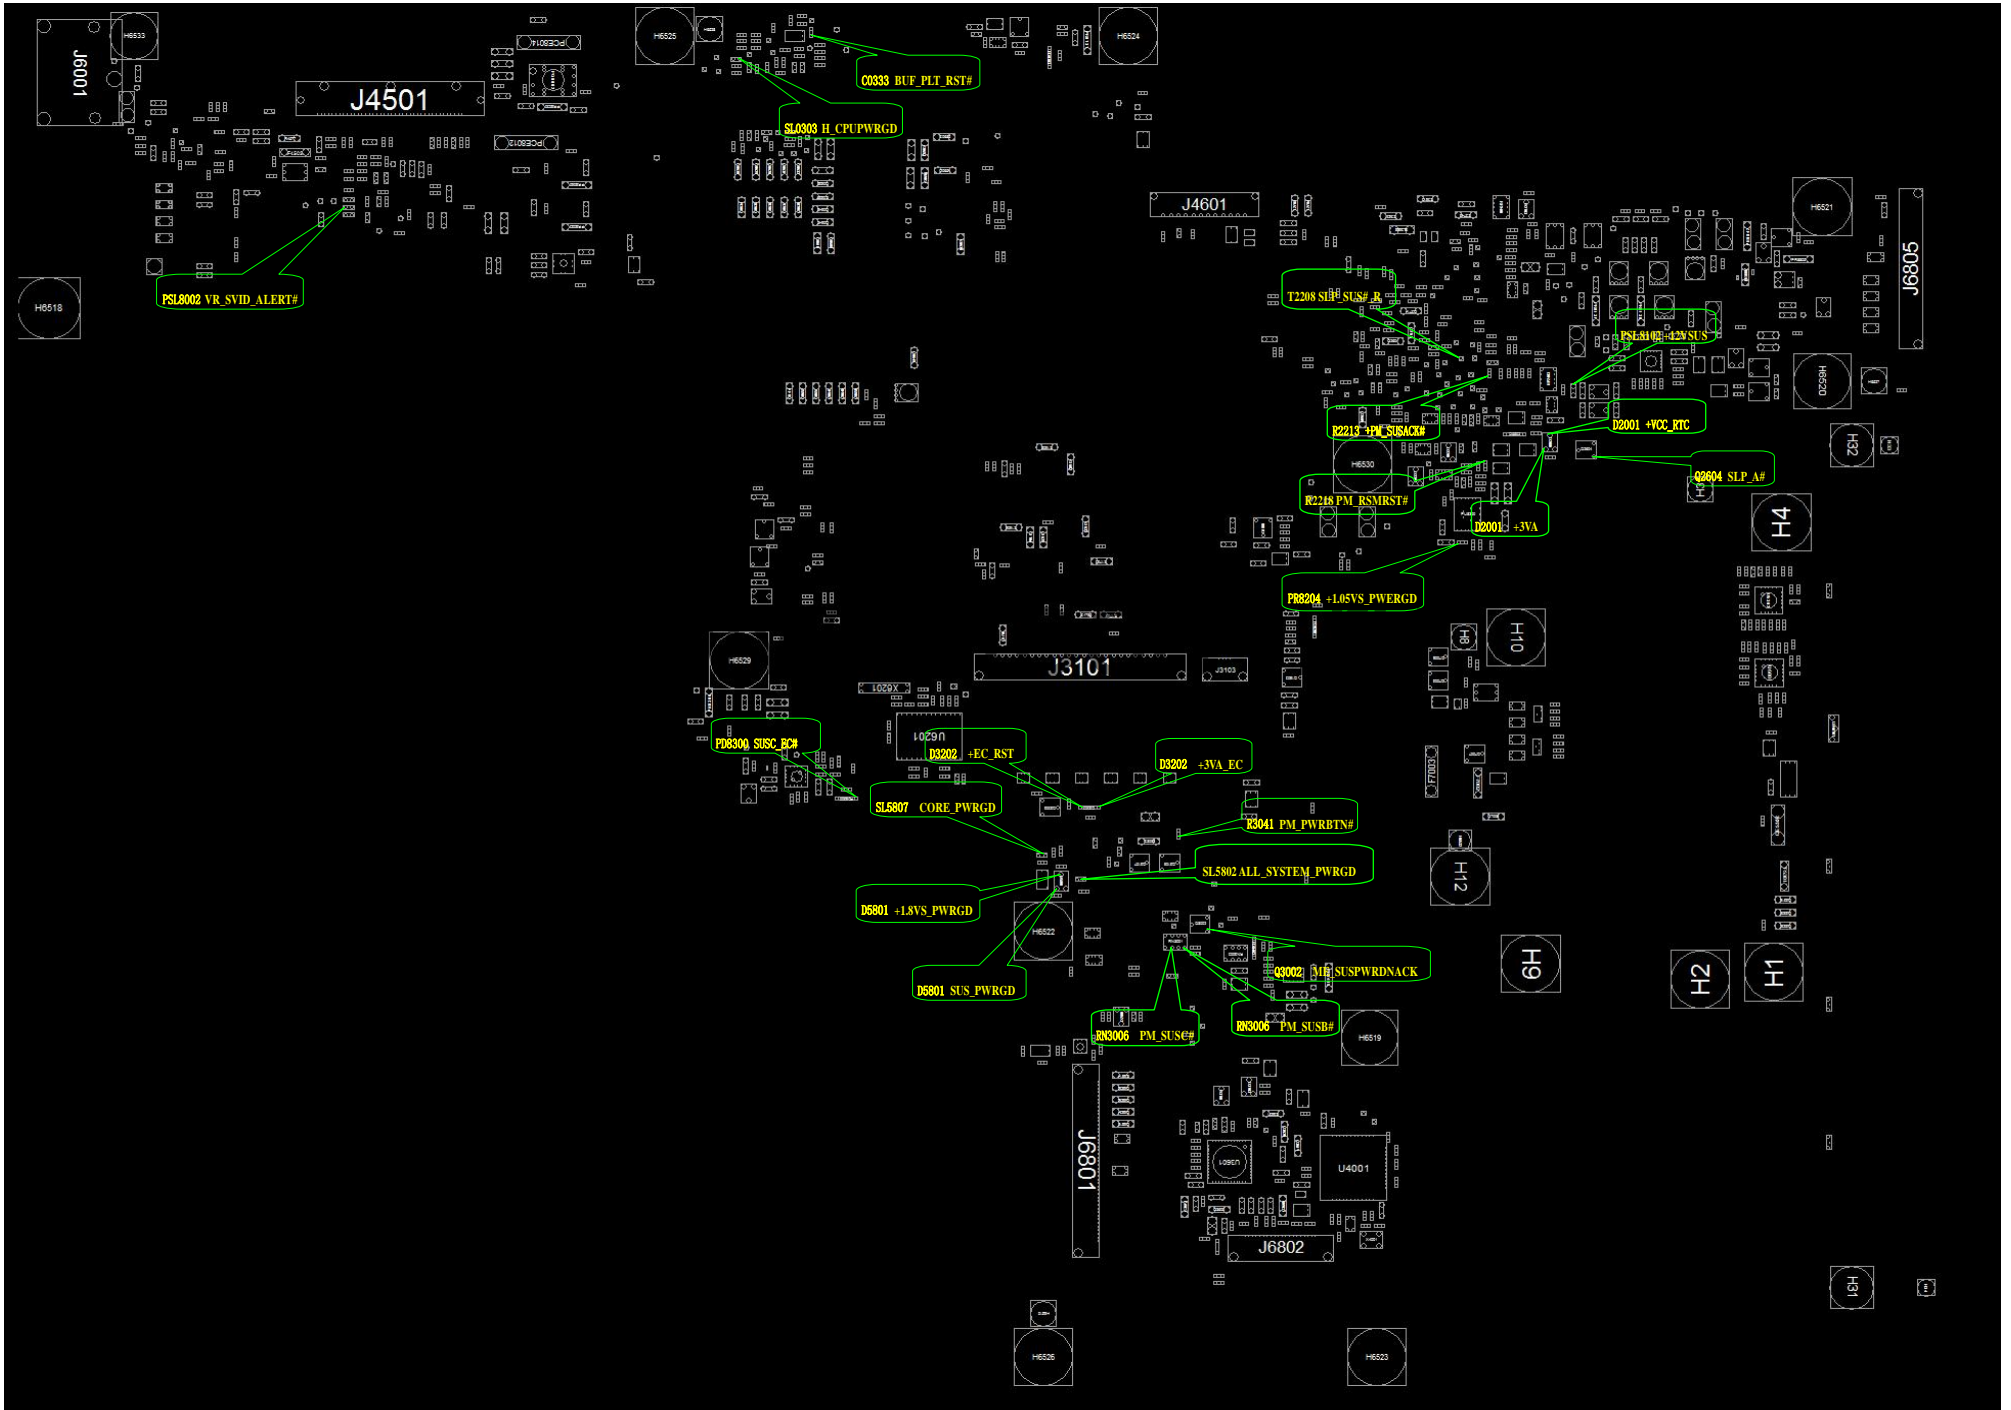

1091f
1070f

