



A58M-E Repair Guide


03/04 2014
Leilei52_Chen
CSC-GRMA

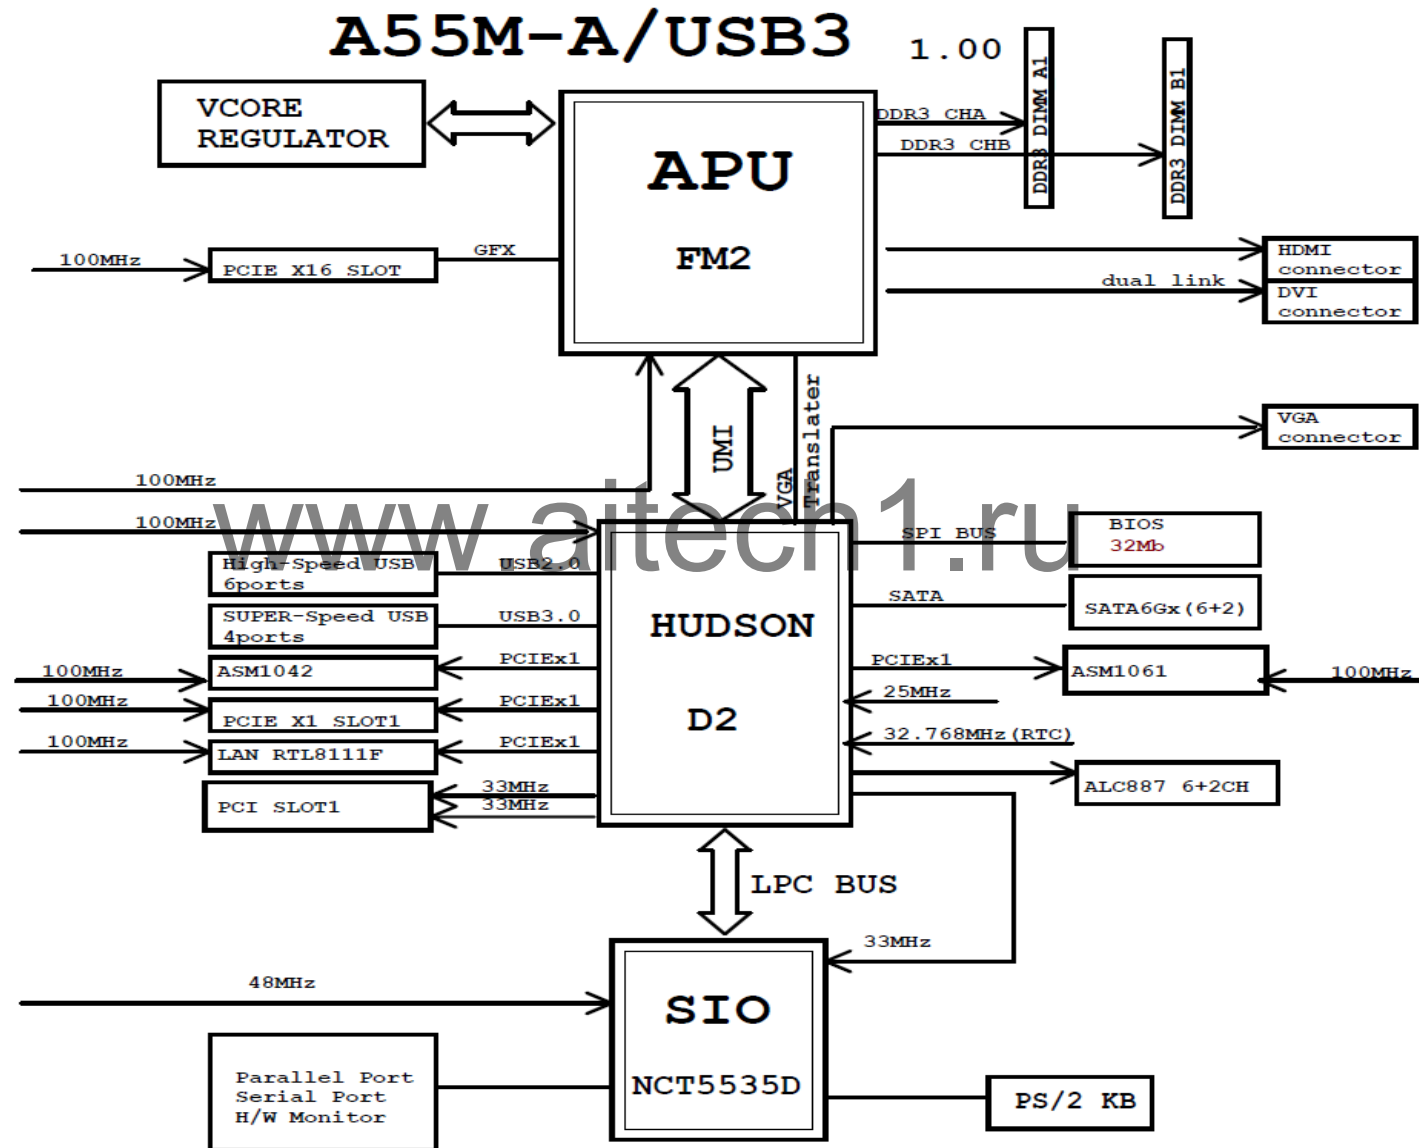


POWER FLOW

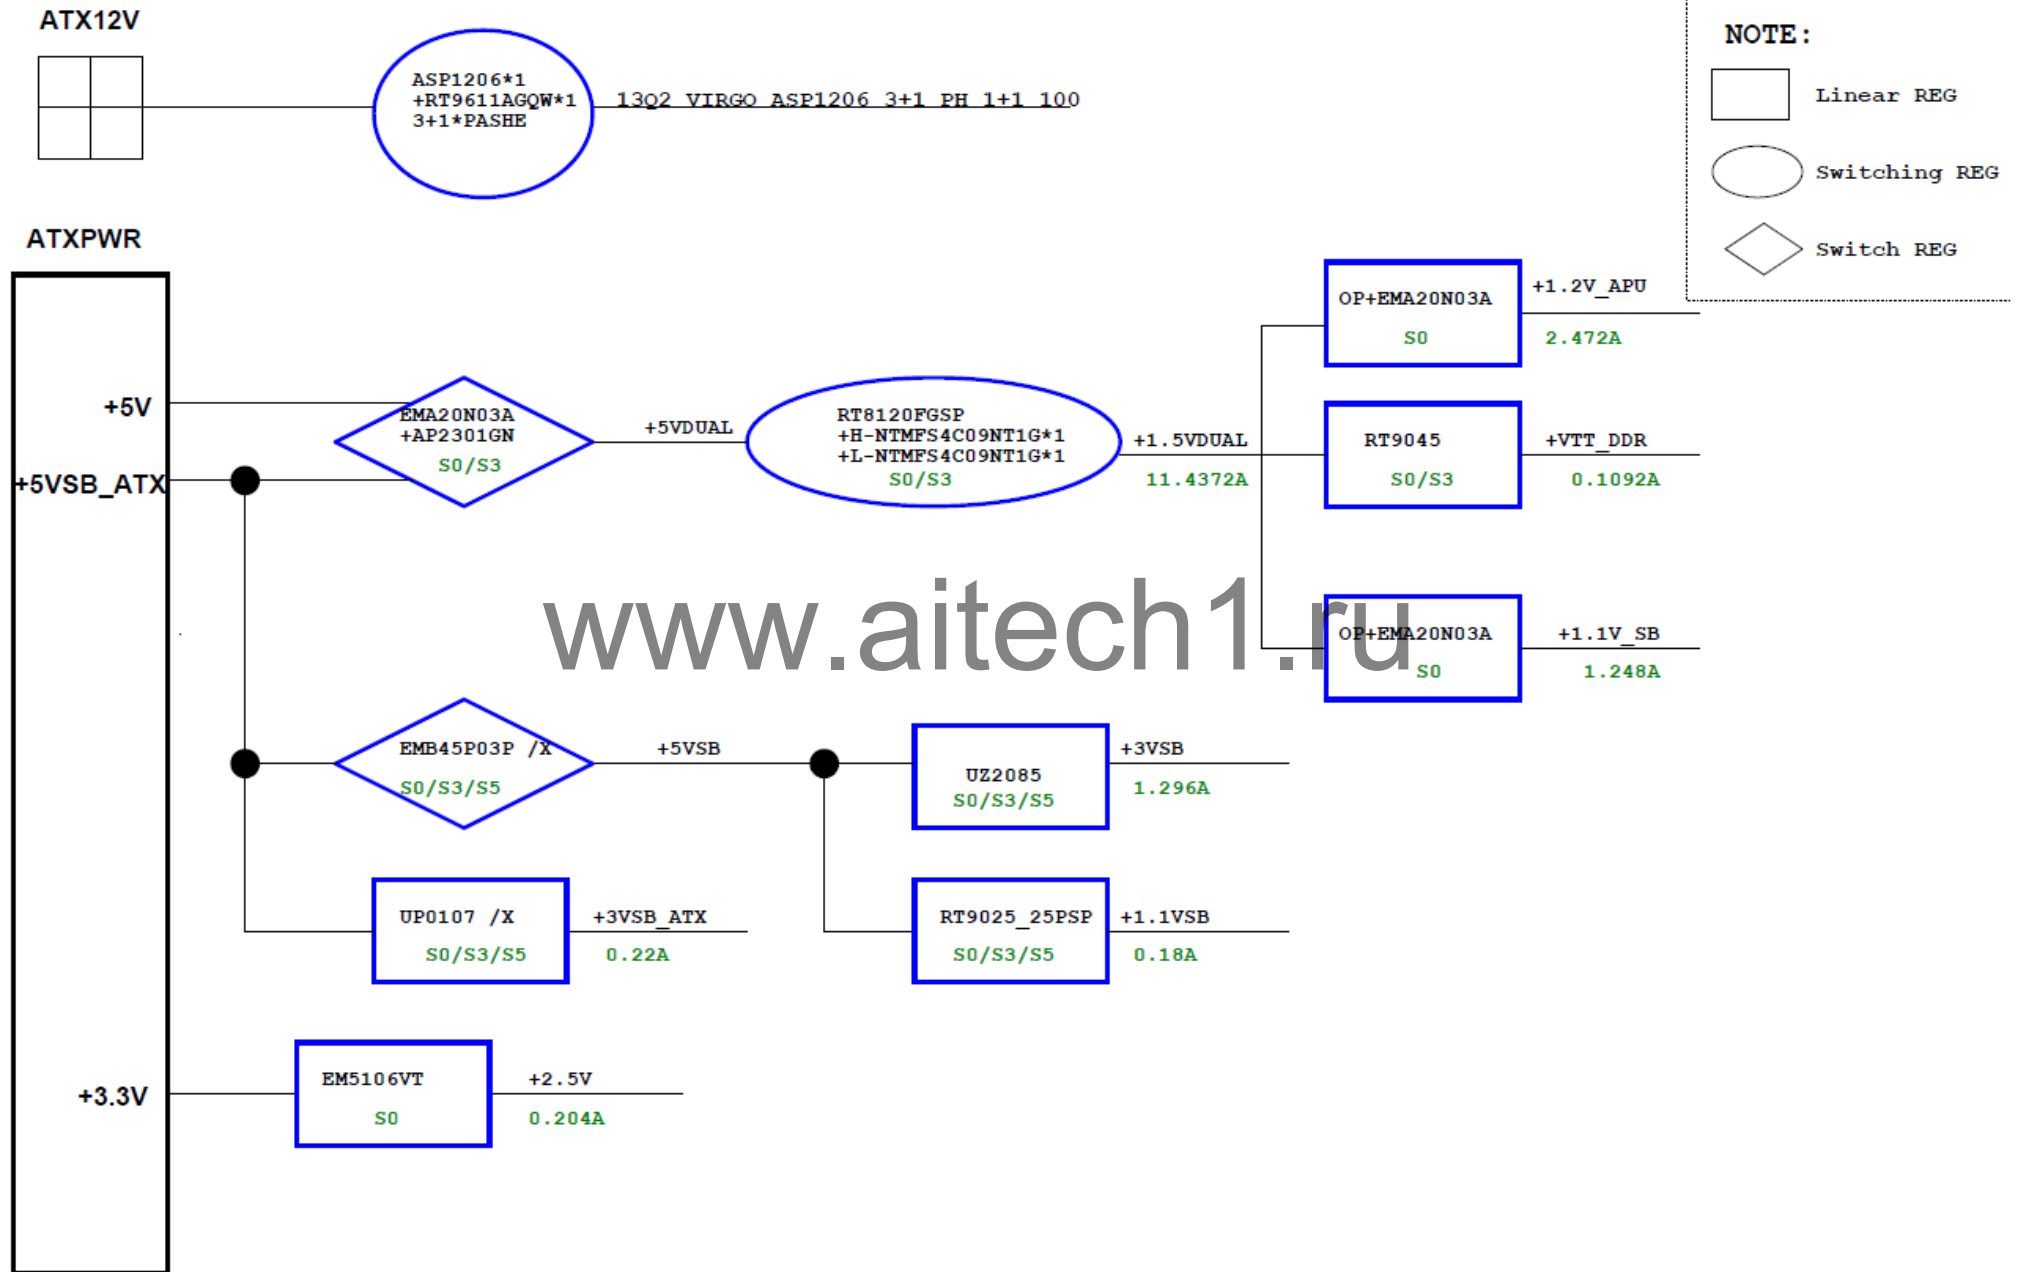


POWER ON SEQUENCE

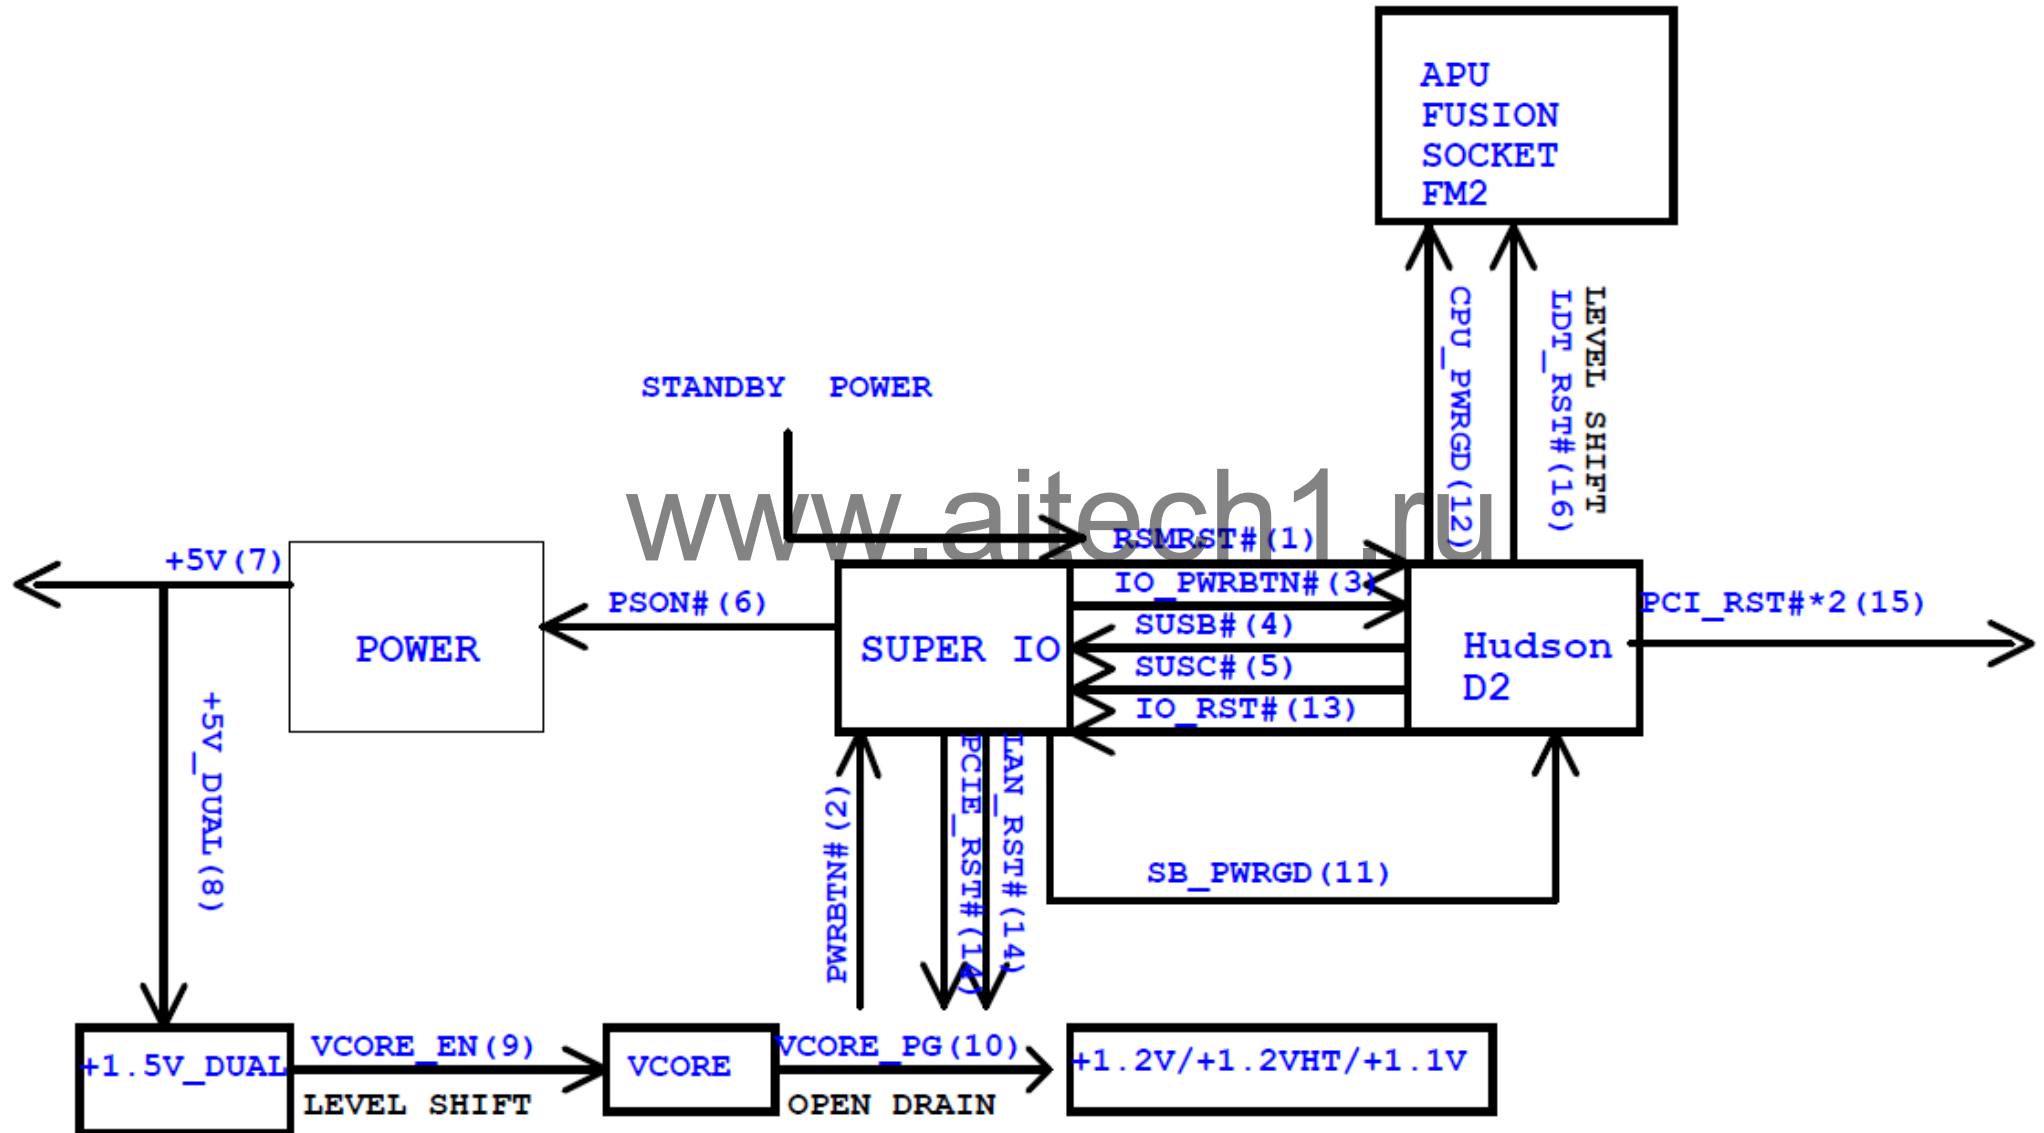

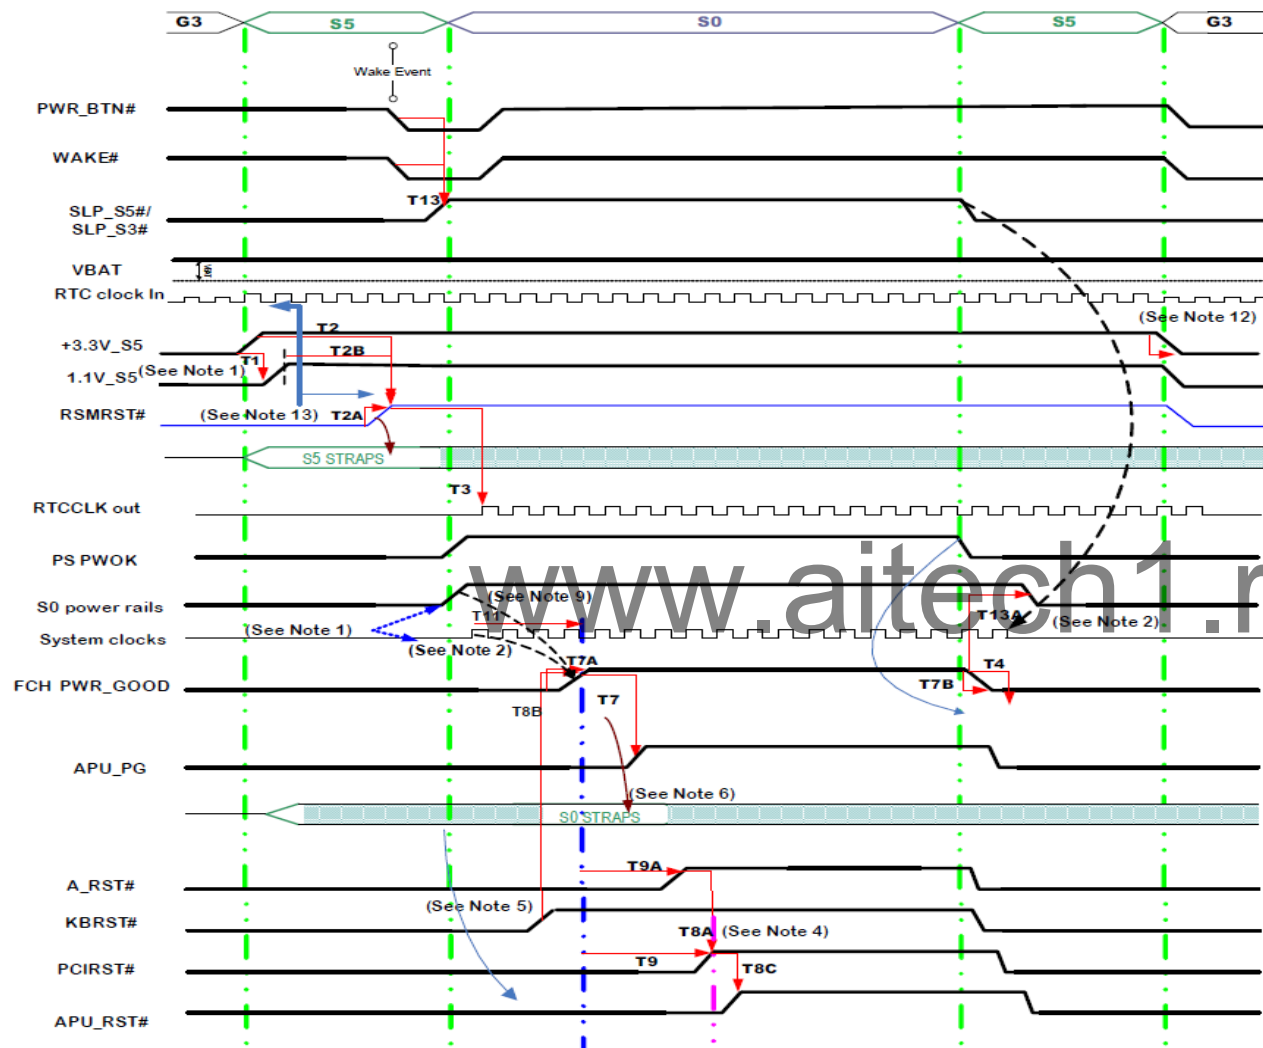

FCH Power Sequence (S5-to-S0-to-S5)


Frequency Flow

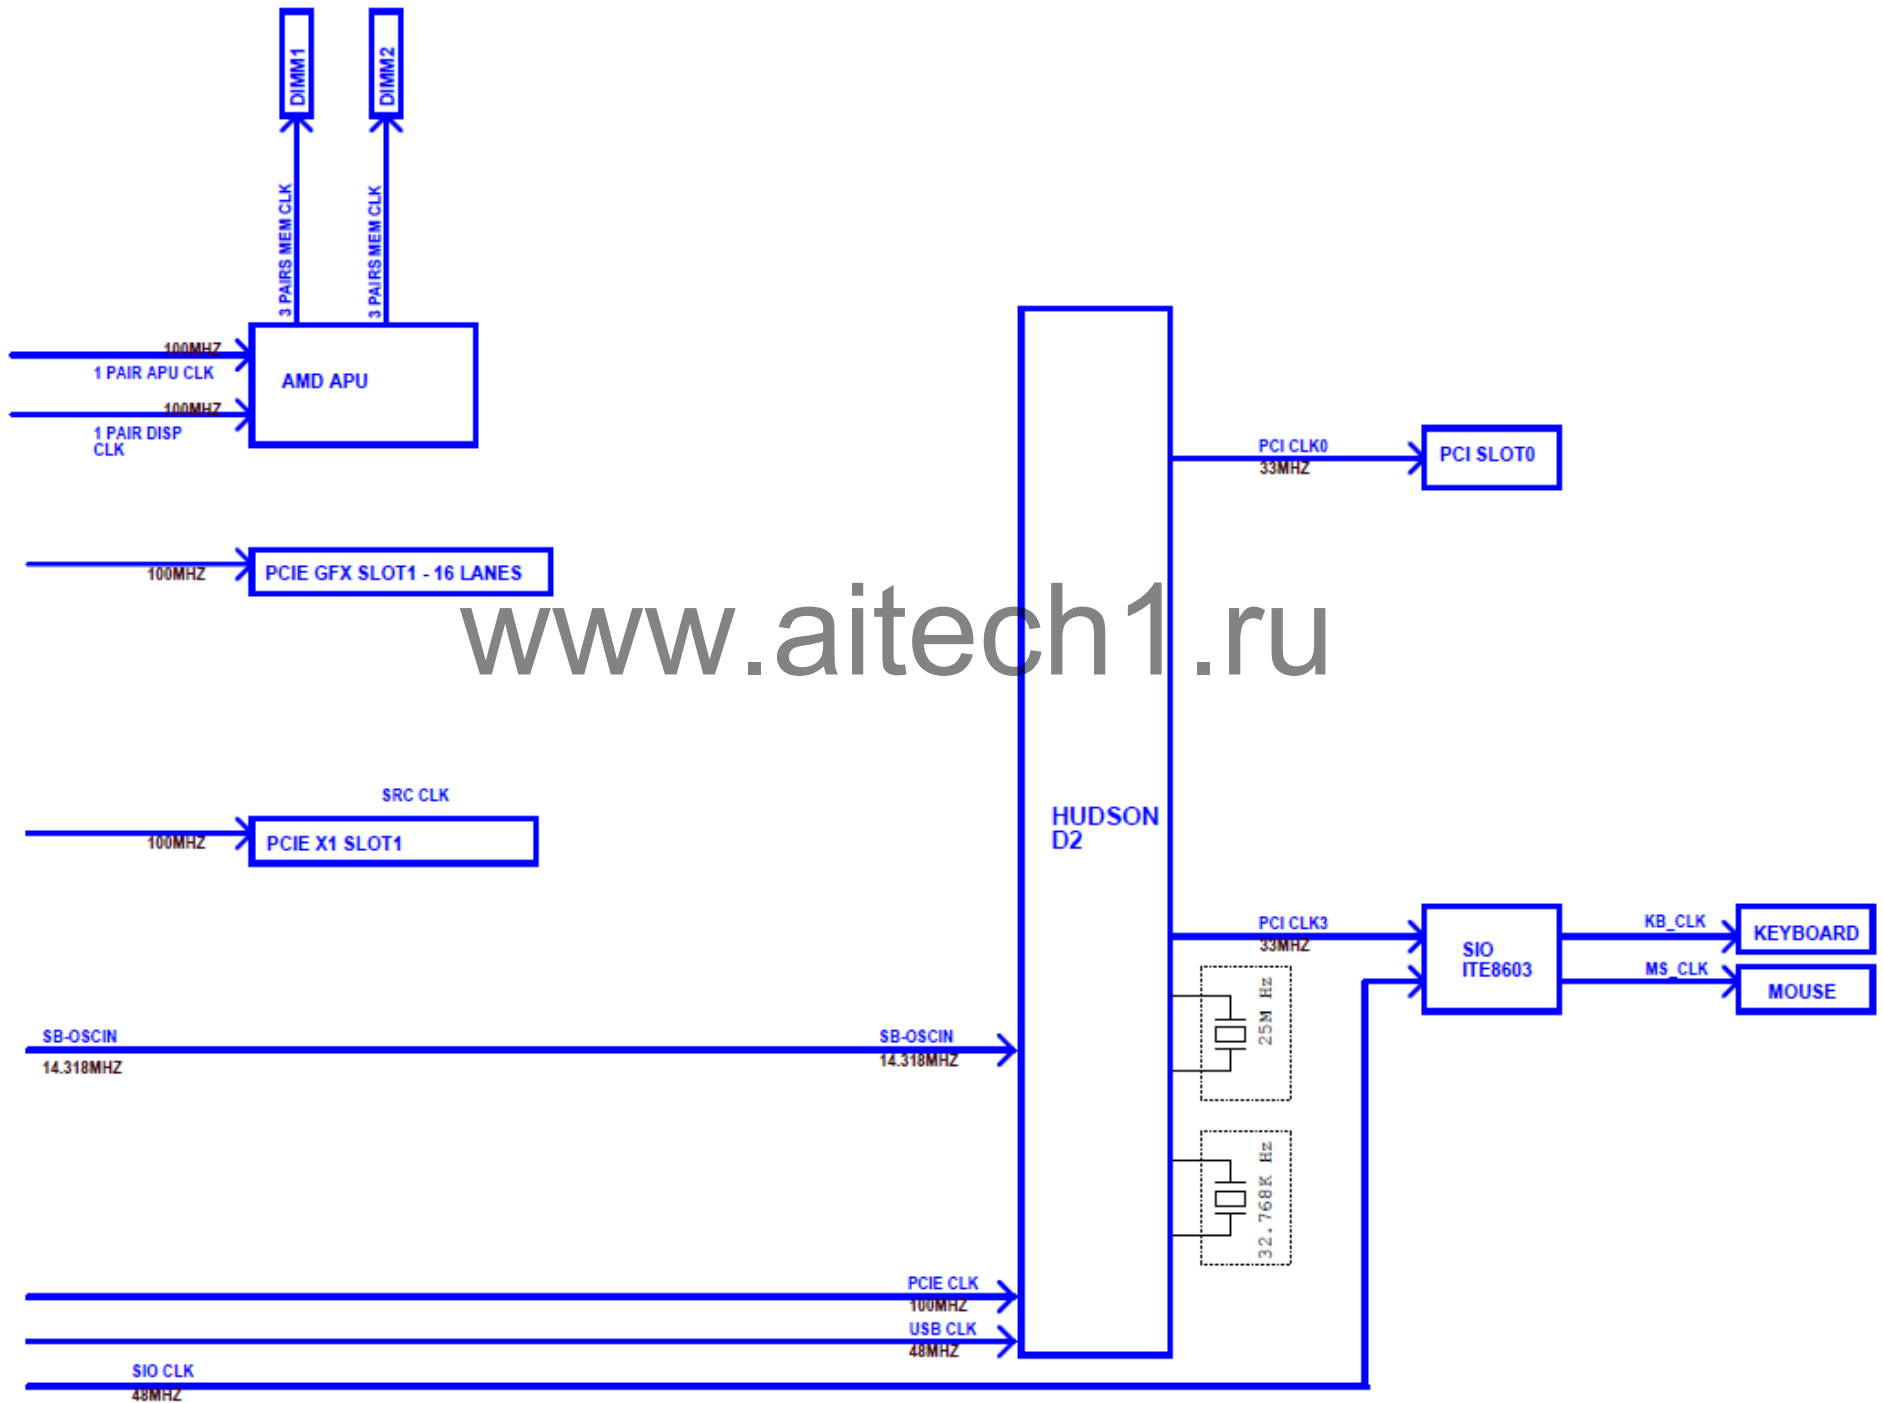

Pink number is the GND diode resistance (without any part on MB)multimeter type DH-1240

Voltage Measure Point

multi meter “VΩmA” port touch here

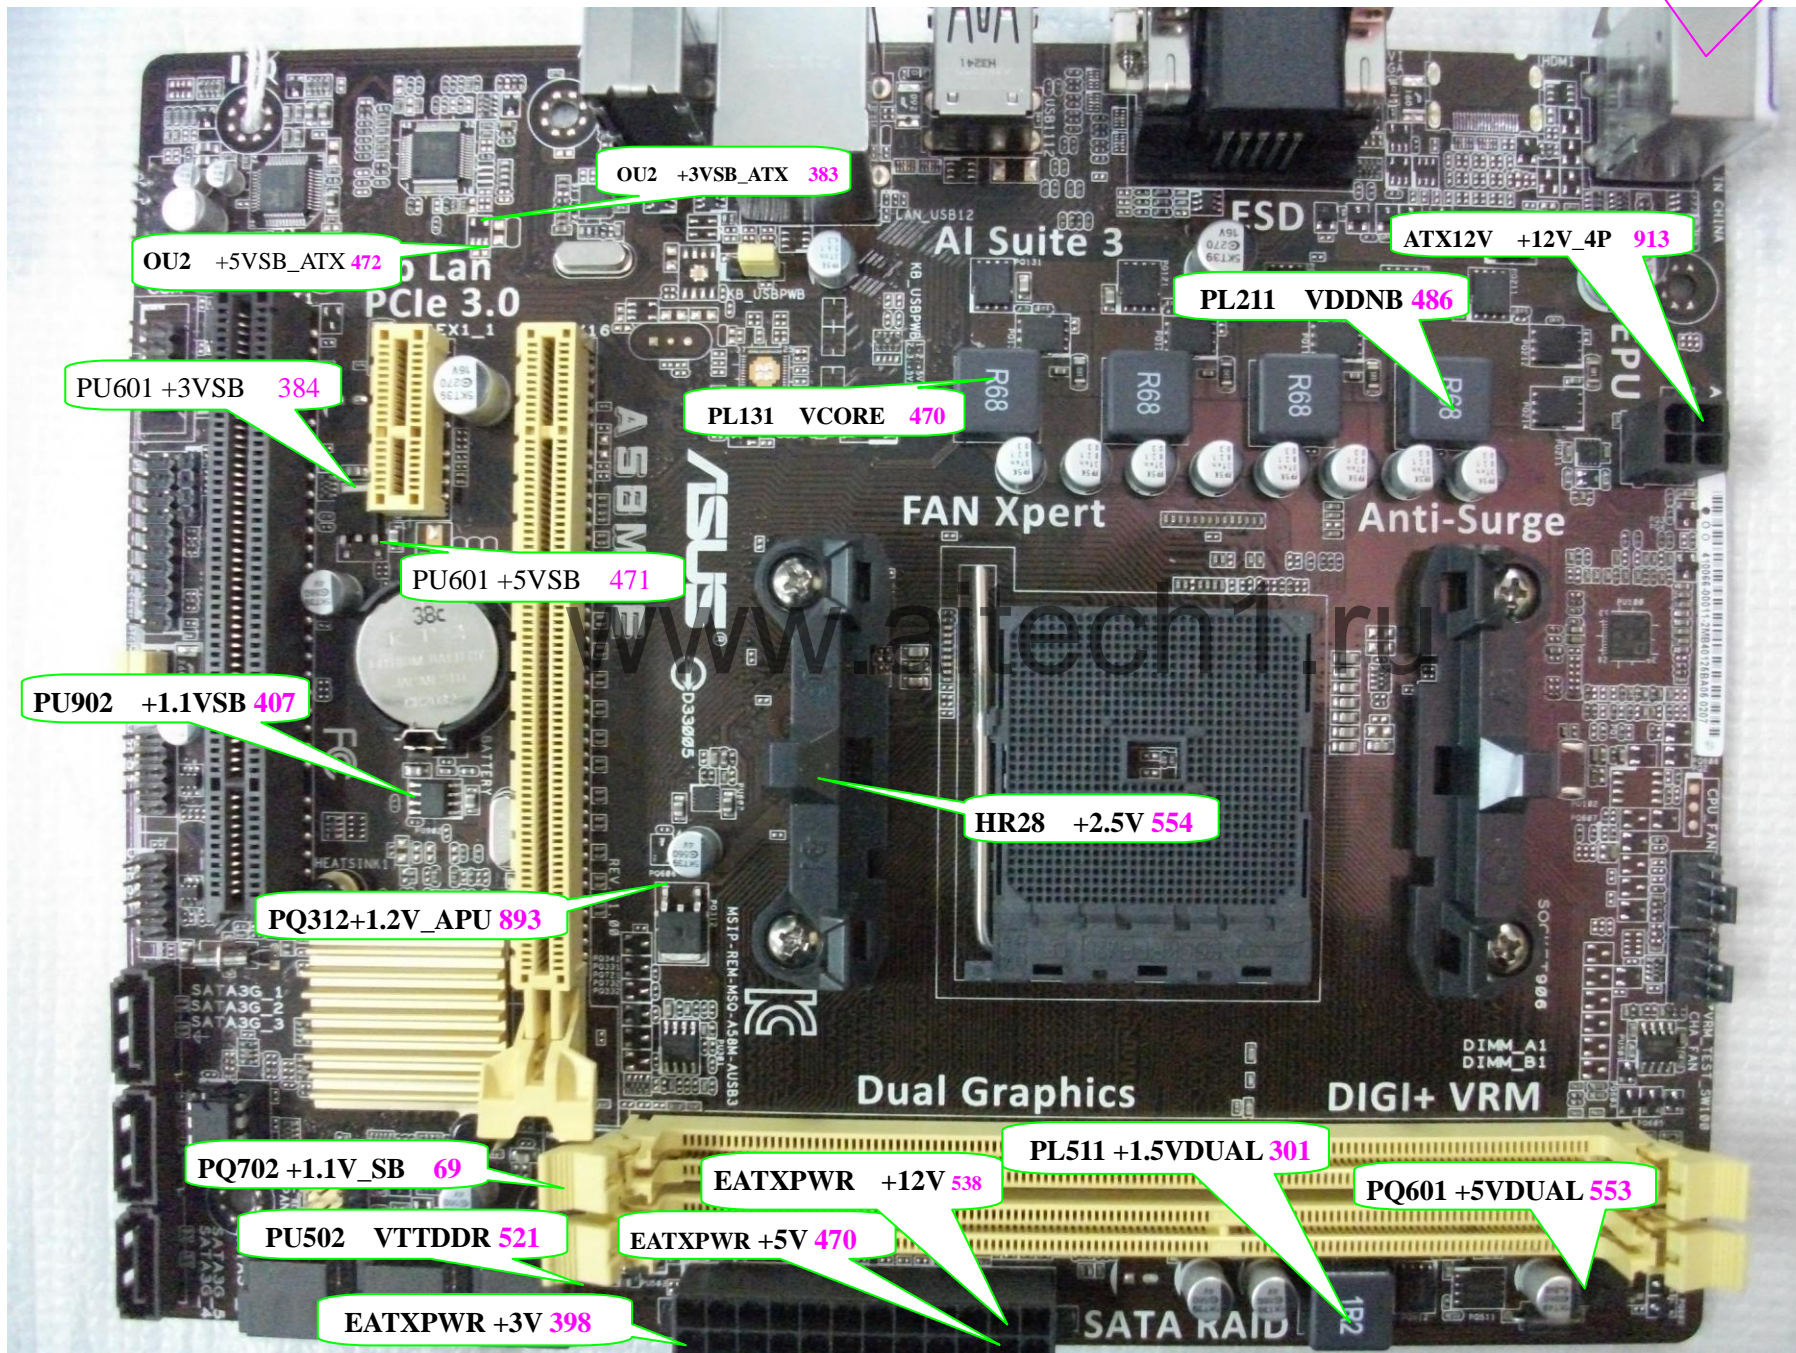

Signal Measure Point

