



A55BM-A/USB3 Repair Guide


08/09/2013
Leilei52_Chen
CSC-GRMA

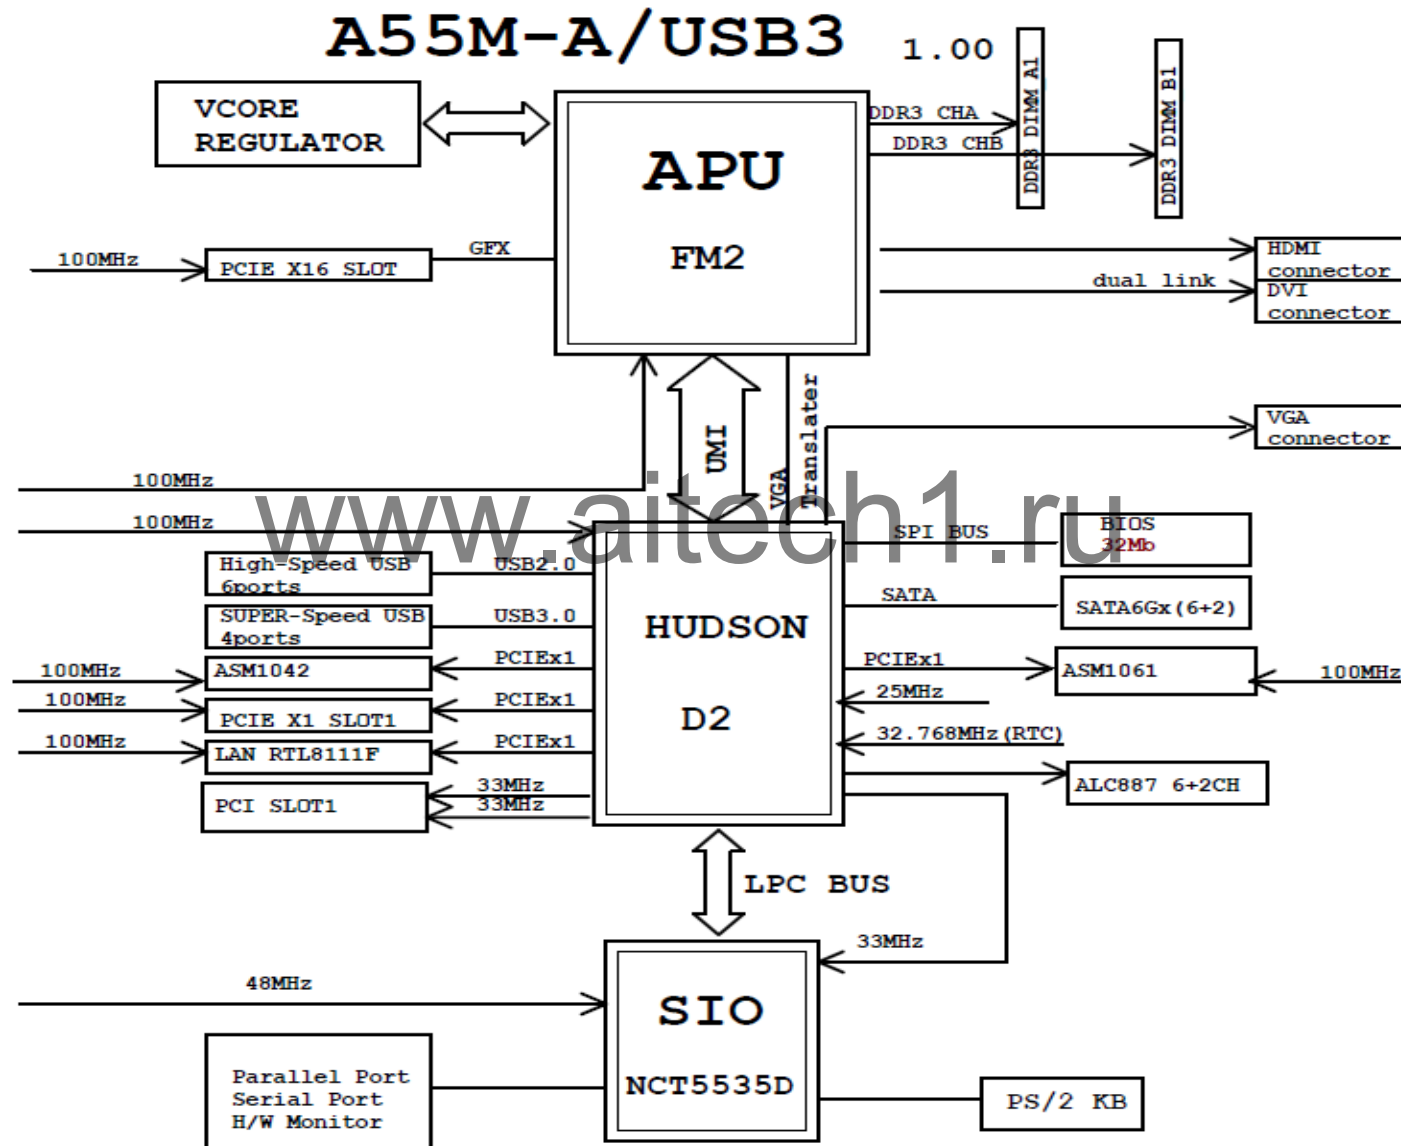


POWER FLOW

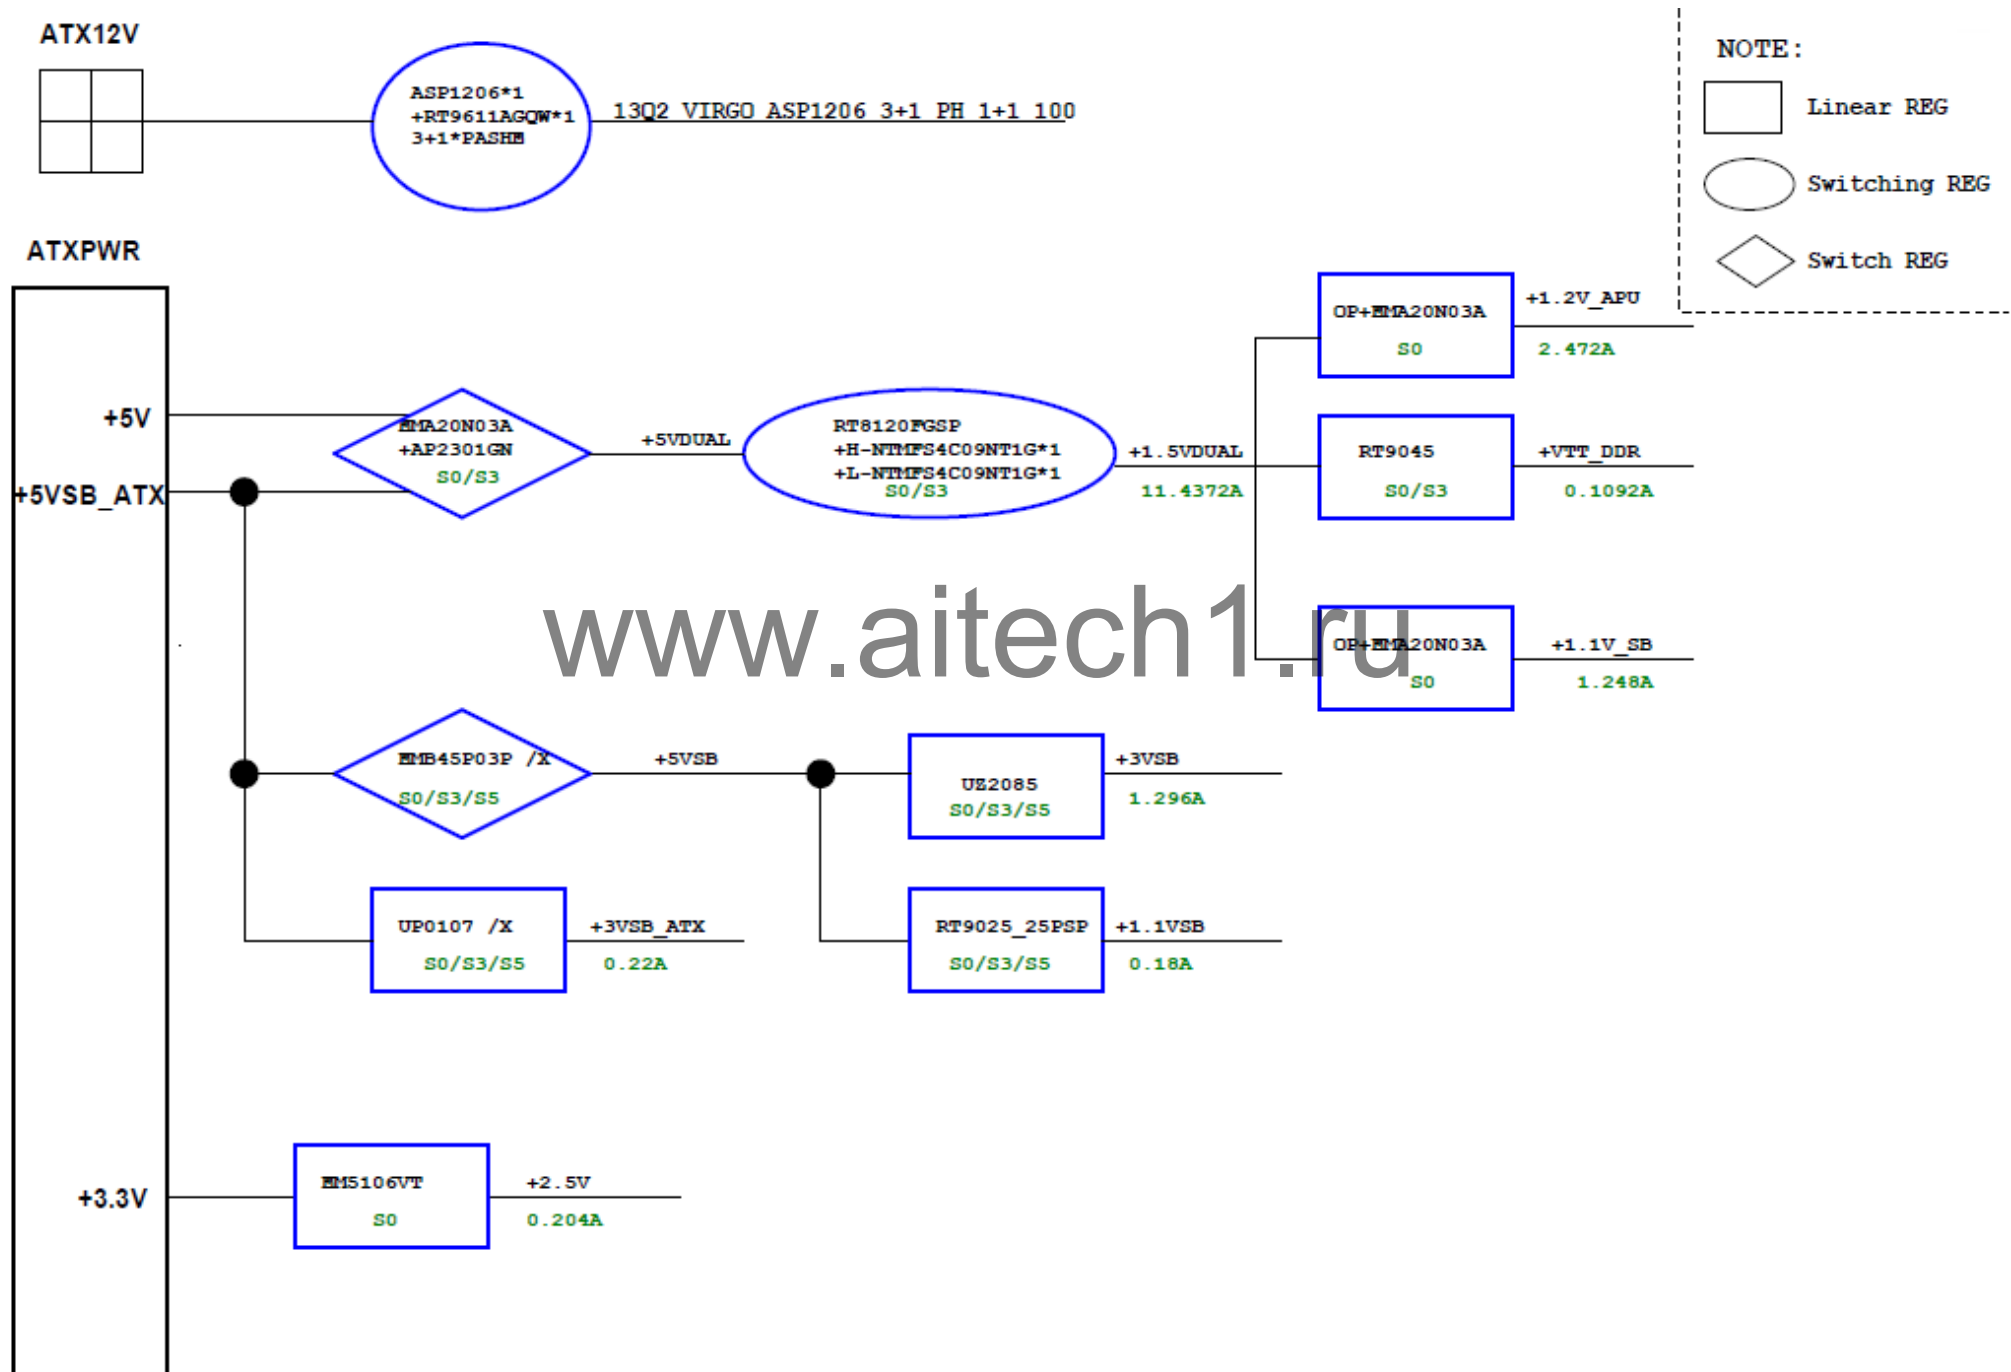

POWER ON SEQUENCE

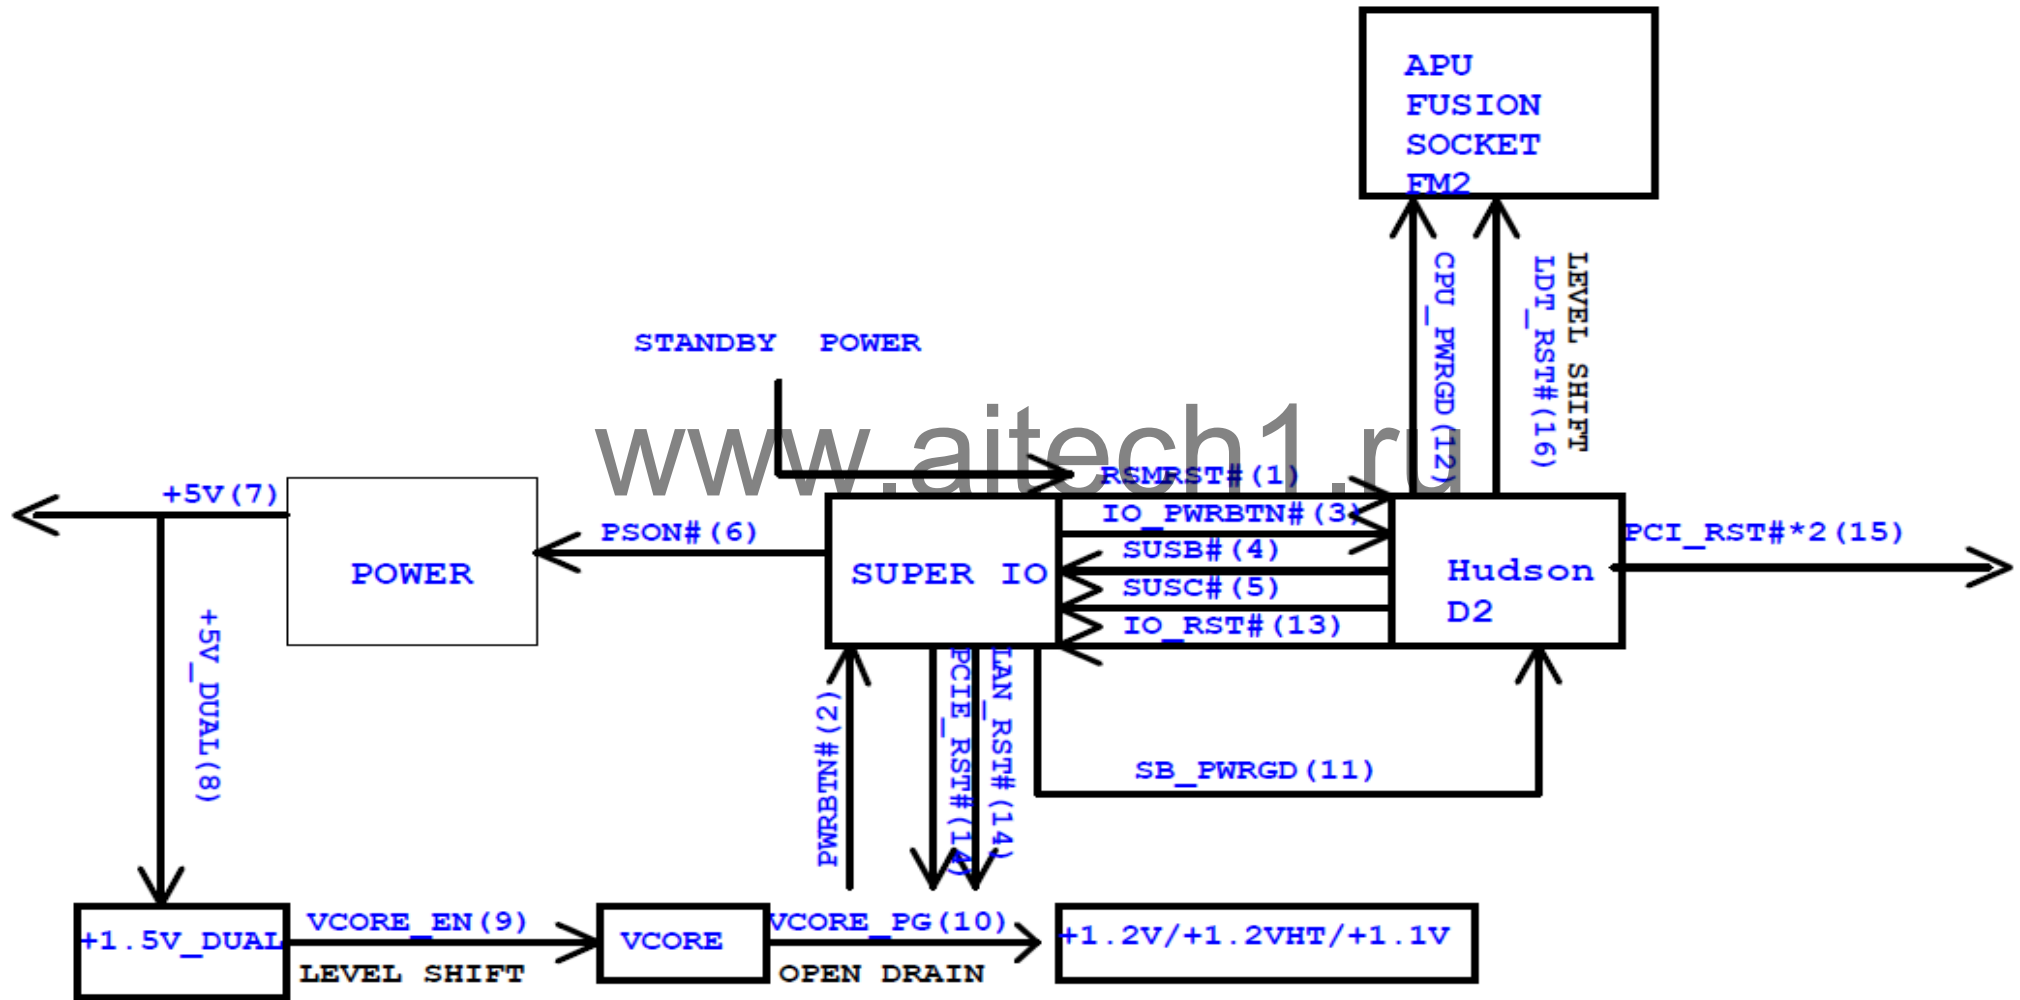


Frequency Flow

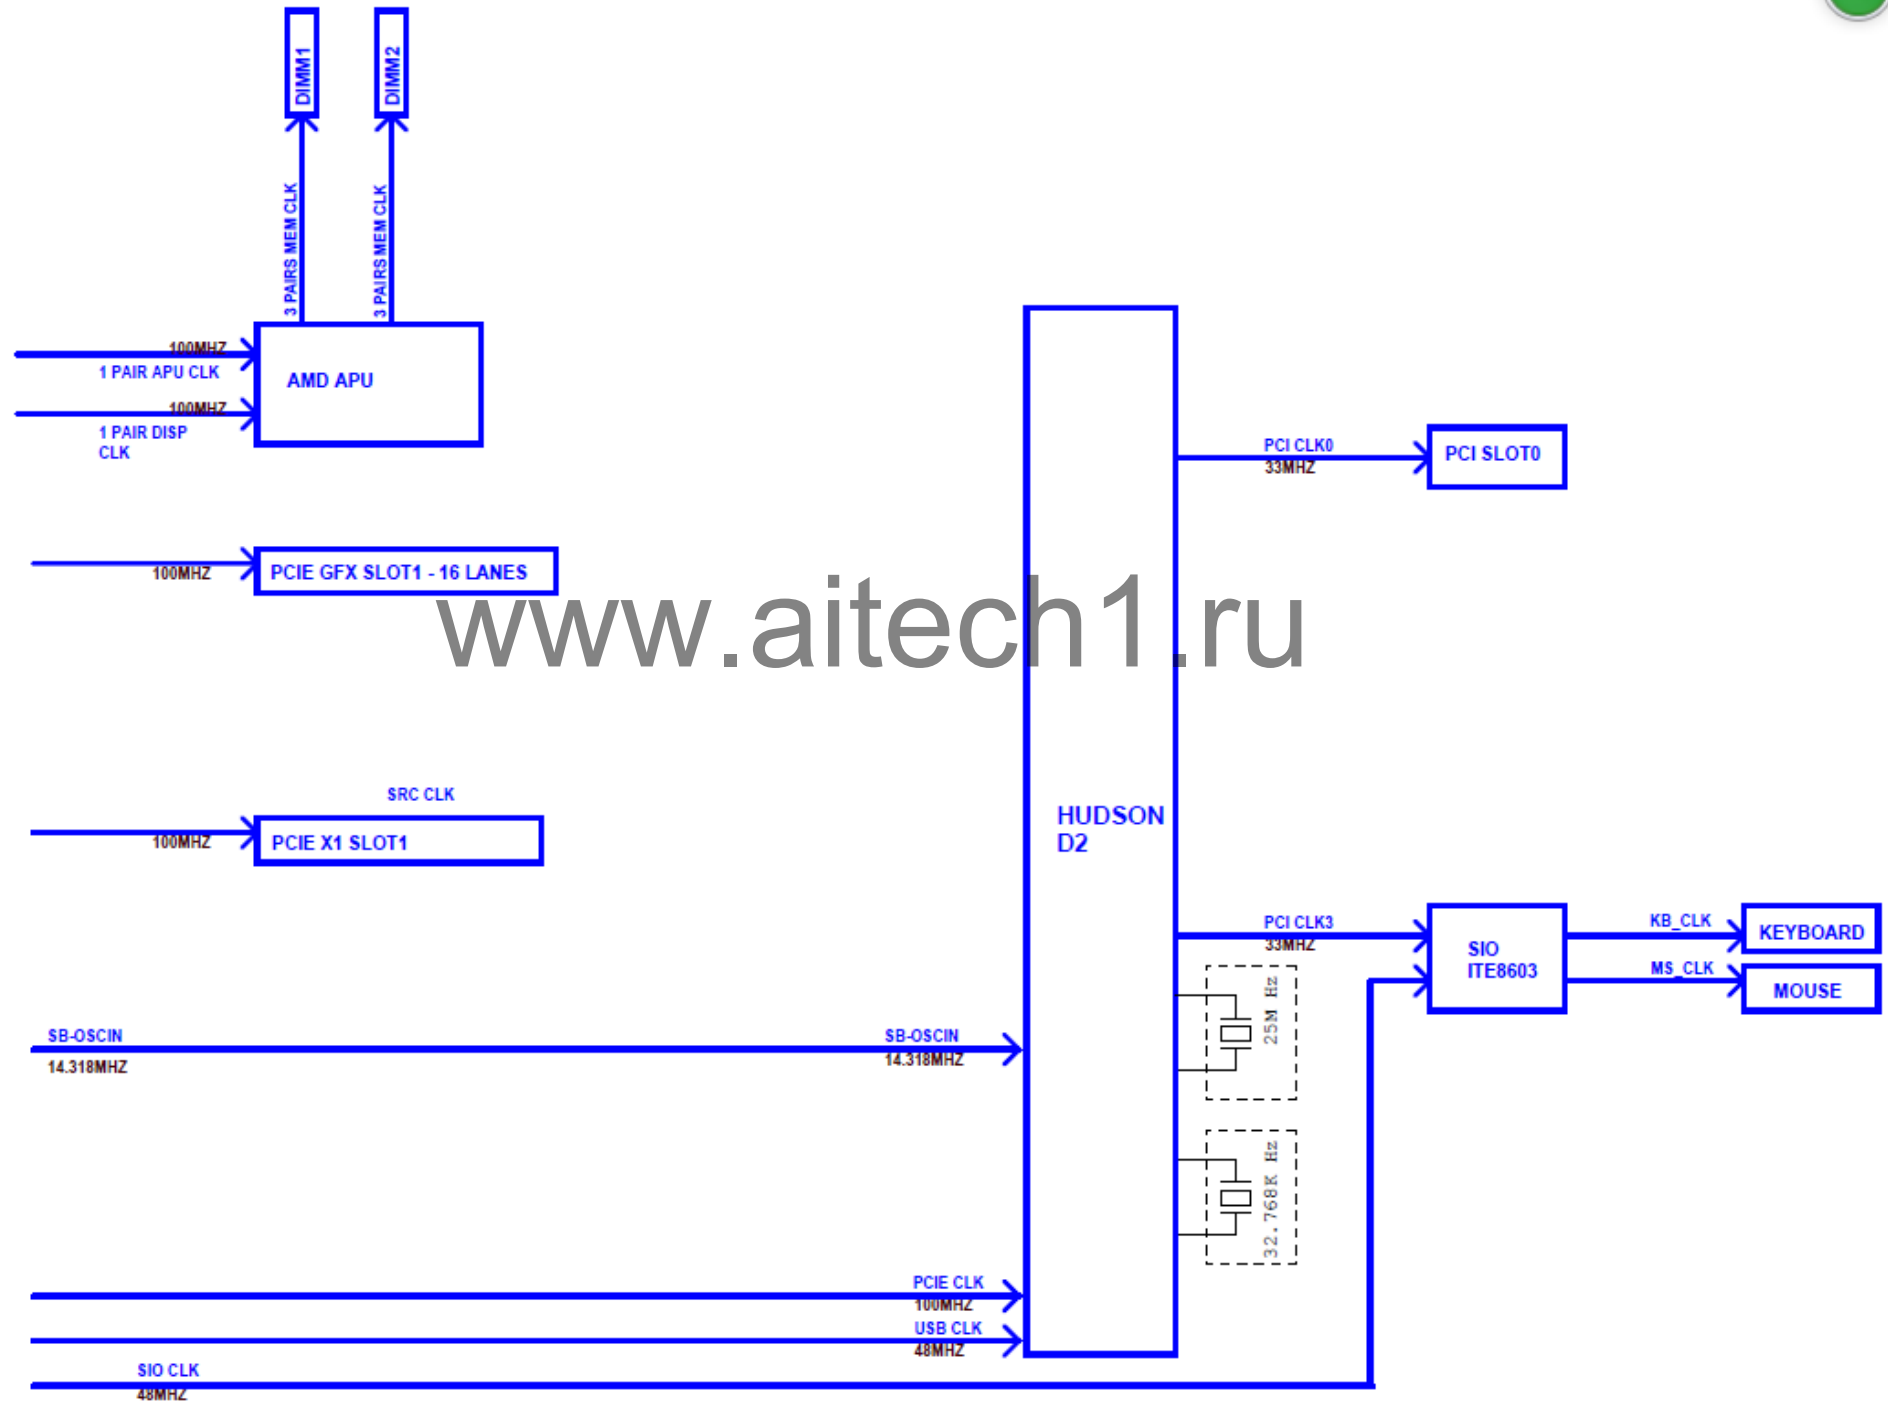

Pink number is the GND diode resistance (without any part on MB)multimeter type DH-1240

multi meter “VΩmA” port touch here

Voltage Measure Point

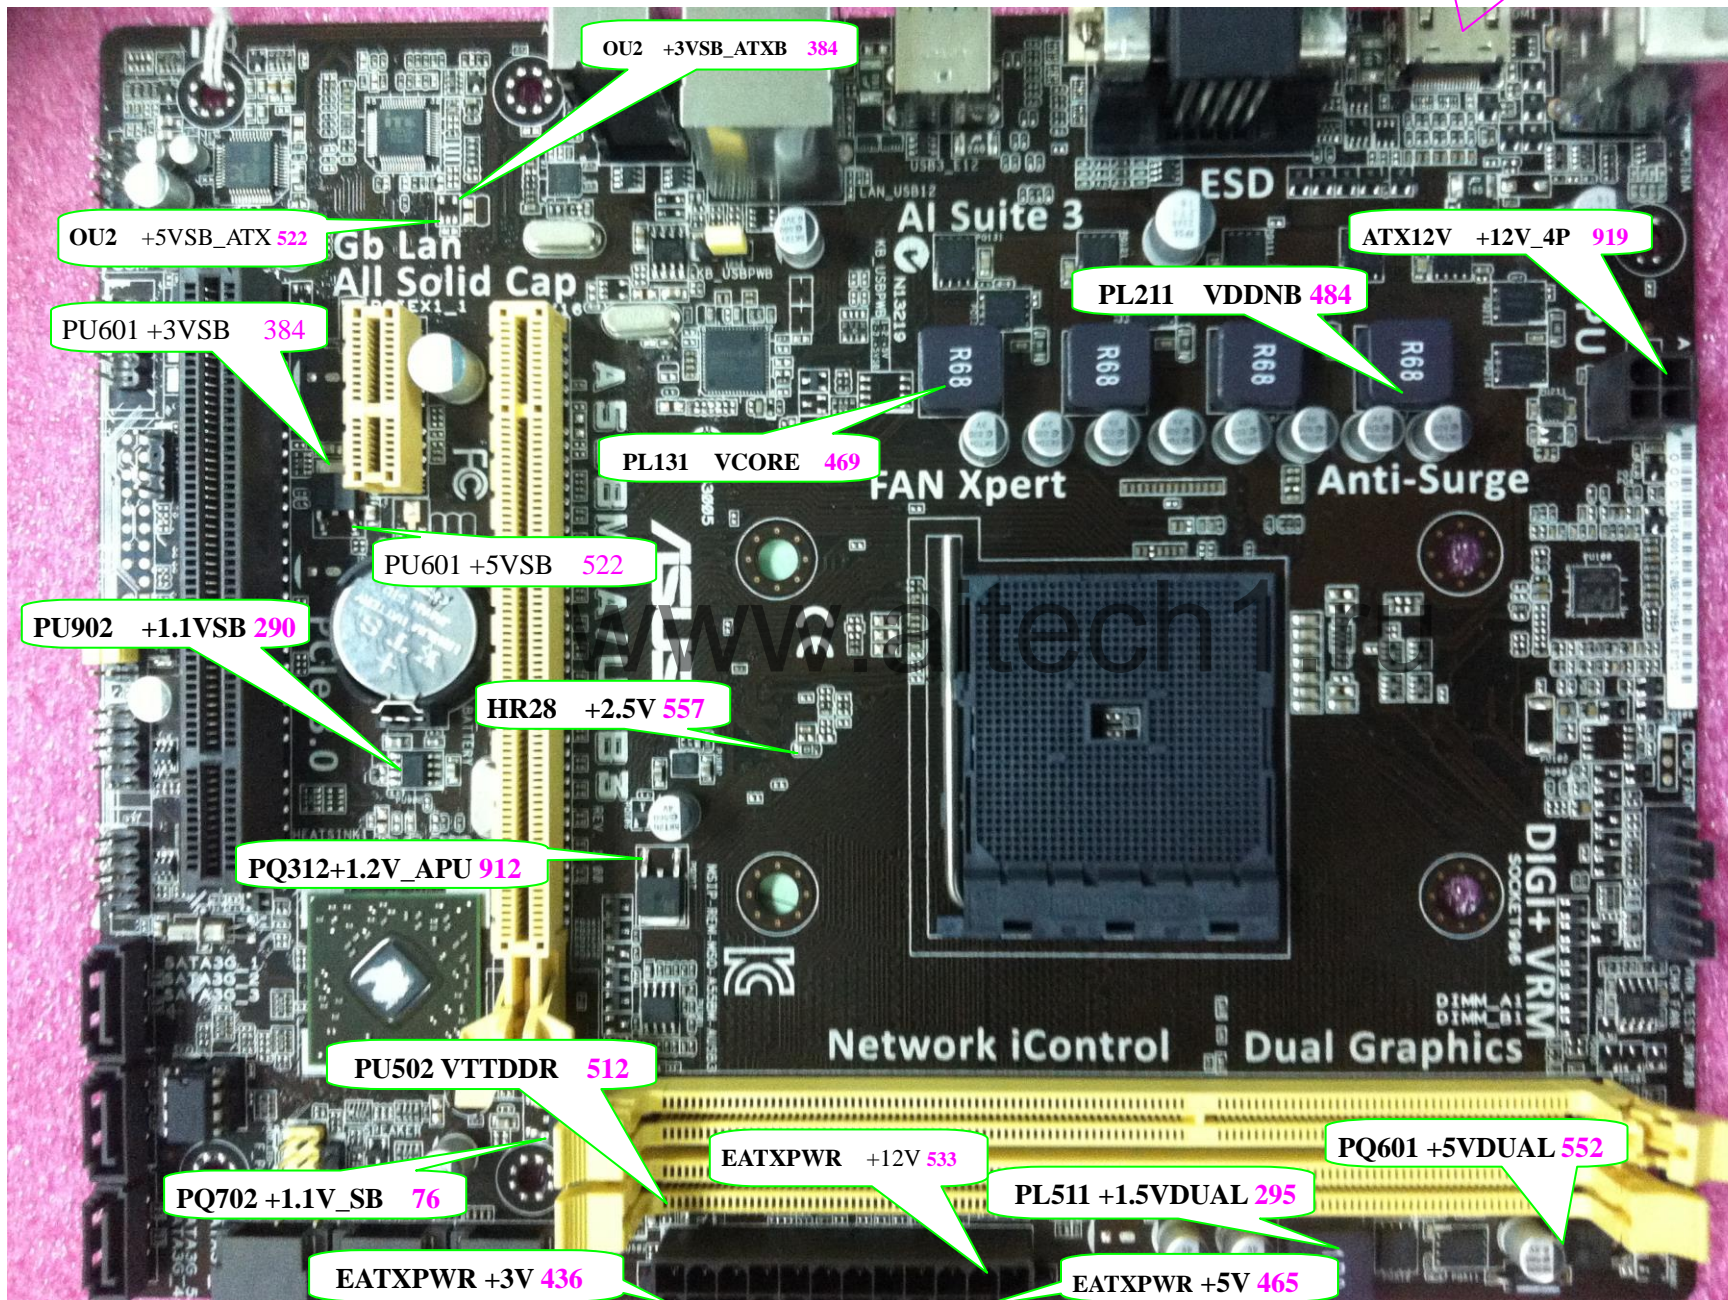

Signal Measure Point

